

Como configurar grabación continua en el DNR-322L

Paso 1 – Ingrese a la configuracion web del NVR

Paso 2 – Dirijase a **Setup > Recording Schedule**

En el apartado **Recording Mode** seleccione **Recording by Schedule**

Product Page : DNR-322L Firmware Version: 2.00

D-Link

Setup

RECORDING SCHEDULE

You can set up individual cameras to record at specific times, day or night, one time or each day of the week.

Save Settings Don't Save Settings

RECORDING MODE

☐ No Record

☒ Record by Schedule

Manual Record: **Enabled**

VIDEO DATA

Automatic Overwrite ☒ Enable

Store Videos ☐ Store Videos by Schedule Days

Helpful Hints..


The following list briefly describes the **Recording Schedule** menu items:

Automatic Overwrite: Select this option to automatically empty disk space when the disk space is full. This will overwrite the earliest recorded video with the latest video one day at a time.

Store Videos by Schedule: Set duration to store recorded video clips. After the duration, the clips will be purged and cannot be recovered.

Insert: Insert new schedules.

Paso 3 – En el apartado de **Recording Schedule** seleccione la camara y luego haga click en **Configure**.

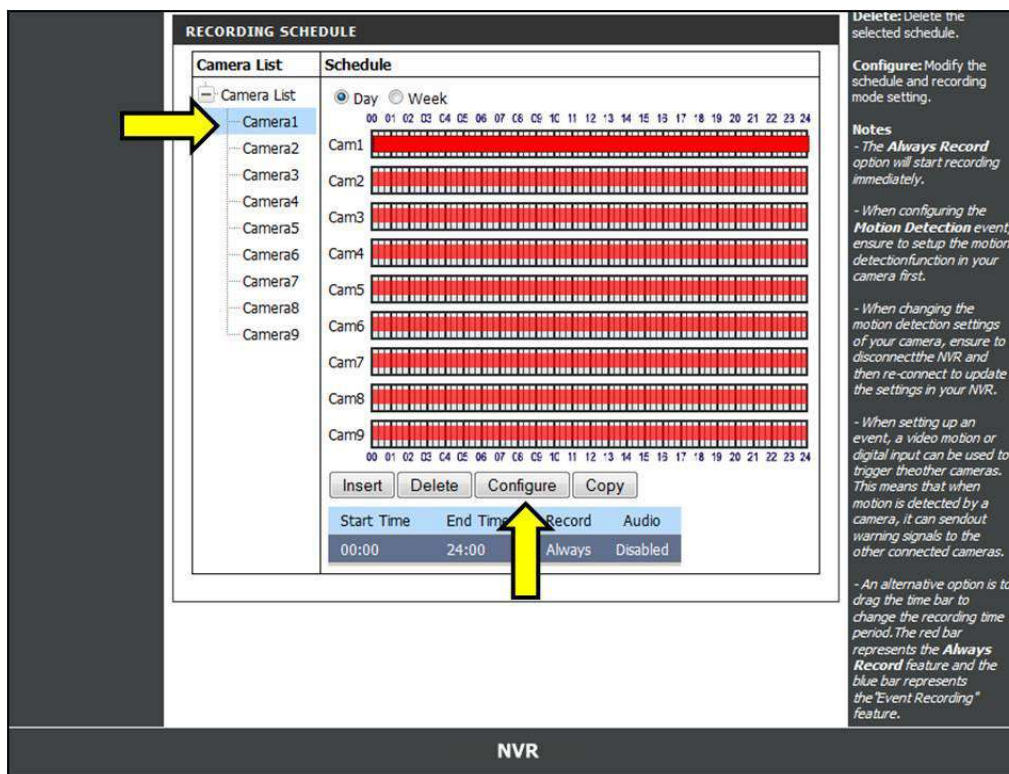

Paso 4 – Configure el día y/o las horas según sea necesario y finalmente guarde los cambios presionando el boton **Save Settings**

Nota – Para iniciar la grabacion de video debe dirigirse a **Live Video** y presionar el boton de grabacion.

