

La siguiente guía explica como configurar la apertura de puertos en el DSR. En nuestro ejemplo utilizamos la siguiente dirección del Pc y del DSR.

PC IP: 192.168.100.115

DSR-1000N IP: 192.168.100.5

Paso 1 – Ingrese en la configuración del DSR introduciendo la dirección IP del DSR en su navegador (la dirección IP por defecto del DSR es la 192.168.10.1). El usuario por defecto es admin (user name: admin) y la contraseña es admin (Password: admin).

D-Lin	k		
DSR-500N			
	LOGIN	User Name: Password: Login	
UNIFIED SERVIC	ES ROUTER		

Paso 2 – Haga un click en la opción Advanced (en el menú superior), luego pique en Firewall Settings (en el menú de la izquierda) y después en Firewall Rules (en el menú desplegable).

DSR-500N		SETUP		ADVANCED	Т	OOLS	ST/	ATUS
Application Rules	\triangleright							
Website Filter	►	APPLICATION RULES	\$					LOGOUT
Firewall Setting	\triangleright	Default Outbound	lable port trigger	ing rules and allows	several operations on t	the rules.		
Wireless Settings	ire		lication Rules	;				
Advanced Network	. •		le Protoco	ol Interface	Outgoing	g Ports	Incoming) Ports
Routing	►	IPv6 Firewall Rules		or interface	Start Port	End Port	Start Port	End Port
Certificates		Custom Services		Edit	Delete	Add		
IP/MAC Binding		ALGs						
	•	SMTP ALG						
Switch Settings	-	VPN Passthrough						
Intel® AMT								
Package Manager								



Paso 2.1 – Una vez dentro de Firewall Rules pique en Add para crear una regla nueva.

FIRE	EW,	ALL RUI	ES							LO	GOUT
A fir adm Fire	A firewall is a security mechanism to selectively block or allow certain types of traffic in accordance with rules specified by network administrators. You can use this page to manage the firewall rules that control traffic to and from your network. The List of Available Firewall Rules table includes all firewall rules for this device and allows several operations on the firewall rules.										
List	of	Availab	le Firewall R	ules							
	#	Status	From Zone	To Zone	Service	Action	Source Hosts	Dest Hosts	Local Server	Internet Dest	Log
			E	dit	Enable		Disable	Delete	Add		
					Move	e To:	First V	love			

Paso 3 – Desde From Zone seleccione INSECURE WAN

- En To Zone seleccione Secure LAN
- En Service, seleccione el servicio relacionado al puerto que desea abrir, en nuestro ejemplo seleccionaremos HTTP, si el servicio que desea abrir no se encuentra en el listado puede crear un nuevo servicio en el paso 4.
- En Action seleccione Always Alow.
- En Source Host seleccione Any.

Firewall Rule Configuration	
From Zone:	INSECURE (WAN)
Available VLANs:	Default 🔻
To Zone:	SECURE (LAN)
Available VLANs:	Default 🔻
Service:	HTTP T
Action:	Always Allow 🔻
Select Schedule:	v
Source Hosts:	Any 🔻
From:	
То:	
Destination Hosts:	Any
From:	
То:	
Log:	Never •
QoS Priority:	Normal-Service



- En Internal IP Address ingrese la dirección IP del servidor, Pc o equipo para el cual quiere realizar la apertura.

- Seleccione la opción Enable Port Forwarding solo si el puerto que se desea abrir no será el mismo puerto para la red local (LAN) y para la red exterior (WAN).
- Translate port number solo se utiliza si se ha activado la opción Enable Port Forwarding para indicar un puerto distinto al servicio previamente indicado.

Source NAT Settings	
External IP Address:	WAN Interface Address T
Single IP Address:	
WAN Interface:	WAN1 🔻
Destination NAT Settings	
Internal IP Address:	192.168.100.115
Enable Port Forwarding:	
Translate Port Number:	
External IP Address:	Dedicated WAN V

Una vez seleccionados los parámetros haga un click en Save Settings en la parte superior de la página para guardar los cambios.

Paso 4 – Custom Services.

Si el servicio que usted necesita no se encuentra en la lista de servicios en Firewall Rules, haga un click en Advanced, luego pique en Firewall Settings y seleccione Custom Services.

DSR-500N		SETUP		ADVA	NCED	тс	DOLS	STATUS
Application Rules	►							
Website Filter	►	CUSTOM SERVICES						LOGOUT
Firewall Setting	⊳	Default Outbound	all rule, you eate your o	u can specify a s own custom serv	ervice that is con vices. This page a	trolled by the rule lows creation of	e Common types of custom services ag	of services are available for ainst which firewall rules can be
Wireless Settings	Þ		ne new ser	vice will appear	n the List of Avail	able Custom Ser	vices table.	
Advanced Network	►		tom Serv	vices				
Routing	•	Overlage Operiods		Туре		ICM	P Type / Port Rai	nge
Certificates		Custom Services		Ed	it Dele	te A	dd	
IP/MAC Binding		ALGS						
IPv6	▶	SMTP ALG						
Switch Settings		VPN Passthrough						

Pique en ADD para crear el nuevo servicio.



- En NAME escriba el nombre del nuevo servicio.
- En Type seleccione TCP, UDP o Both dependiendo de los requerimientos de la apertura del puerto o del servicio.
- En Port Type seleccione Port Range y escriba el mismo número del puerto en Start port y Finish Port.

USTOM SERVICES		LOGOUT
his page allows a user to add a u	ser defined custom service.	
Seve Setting: D	on't Save Settings	
uston Services Configurat	ion	
Name:	Camera	
Туре:	TCP 💌	
ICMP Type:		
Start Port:	8080	
	0000	

Pique en Save settings y el nuevo servicio figurará en el listado de firewall Settings.