Entering SIP server information in the DPH-1x0S IP Phone

We will be entering details from the following dummy account

General Settings:

SIP Server: sip.myfone.com.au Port: 5060

Outbound Proxy: sip.myfone.com.au Port: 5060

Registration Expire: 240 seconds


Voice codec: G.729, 40ms packet size DTMF type: RFC 2833, payload type 96

Accounts:


UN: 58981800 PW: UXGJWQ8

1. Firstly log into your IP phone through your computers web browser by typing in the LAN IP address of the phone (how do I know what LAN IP my phone is using??? **Please scroll to the very bottom of the guide to find out!**) go to the SIP SETTINGS TAB and enter relevant information as shown. After this


has been done click the Submit button at the bottom of the Page and the unit will take about 10 secs to save the settings.

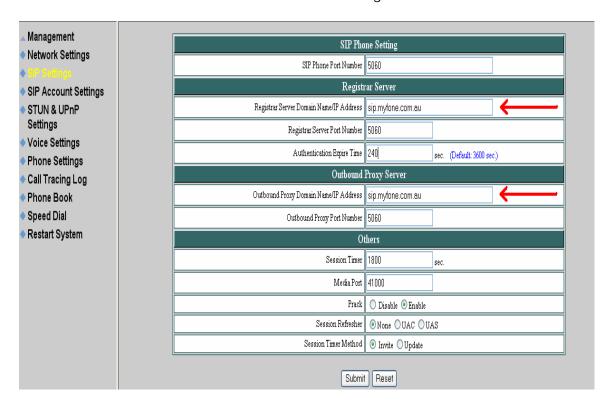


2. 2. Go to SIP ACCOUNT SETTINGS tab and enter the relevant information and press the Submit button once more.

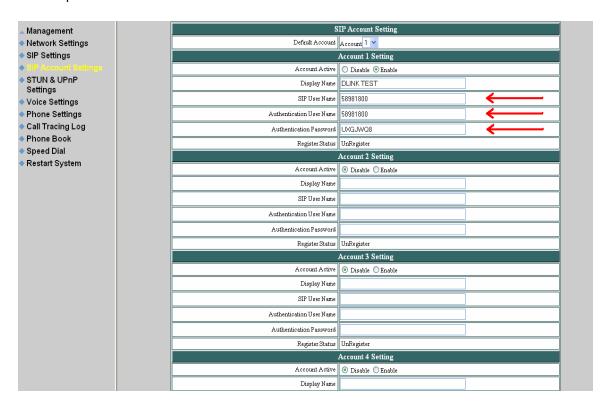

3. Next we go to the VOICE SETTINGS tab, here we will enter the relevant information about the voice codec type to be used. In this case it is Codec G.729A and the correct ms rate which is 40, enter this info and hit the Submit button once more

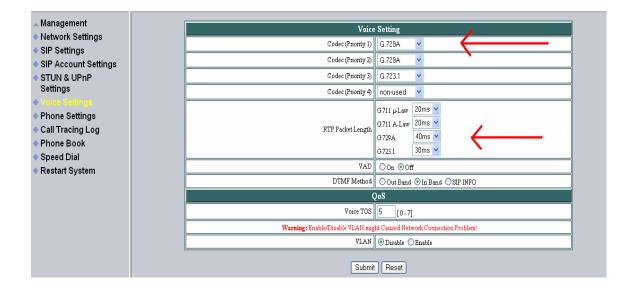


4. After these settings have been applied the unit will need a reboot, please go to the RESTART SYSTEM tab and hit the Restart button to reboot the unit.

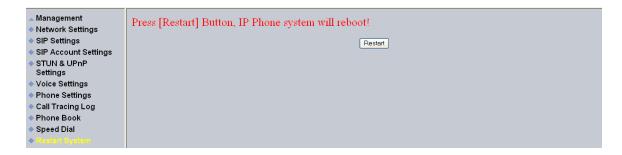

You unit should now be configured correctly.

HOW TO FIND OUT THE LAN IP ADDRESS OF THE IP PHONE

Hit the MENU button once and then use the SELECTION ARROWS to scroll through the menu's until you find the IP address option.

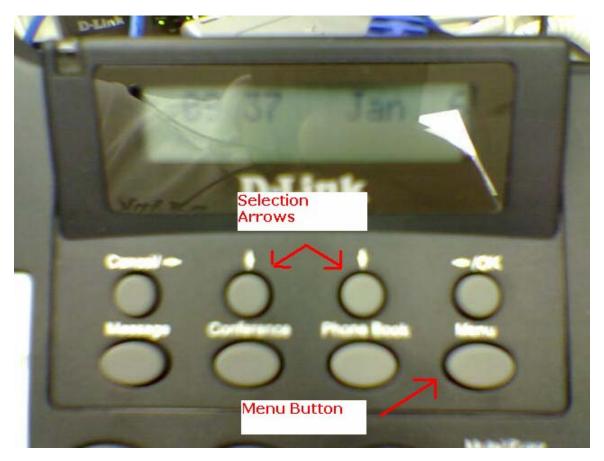

It should now display the units IP address on the LCD screen like so



Please open your web browser and type in the IP address with the port number which is 9999. So to log into the unit you will type http://192.168.0.100:9999

END DOCUMENT