D-Link Quick Installation Guide

This product can be set up using any current web browser, i.e., Internet Explorer 6 or Netscape Navigator 6.2.3.



DWL-G730AP

D-Link *Air*Plus™ G Wireless Pocket Router/AP

Before You Begin

The default IP address for the DWL-G730AP is 192.168.0.30 with a Subnet Mask of 255.255.255.0. You will need to assign your computer a Static IP address within the same range as the DWL-G730AP's IP address for the purpose of configuring the DWL-G730AP.

Check Your Package Contents



DWL-G730AP Wireless Pocket Router/AP



CD-ROM with Manual



D-Link Travel Case



USB Power Cable



Ethernet (CAT5 UTP) Cable



5V 1.2A DC Power Adapter

Using a power supply with a different voltage rating will damage and void the warranty of this product.

If any of the above items are missing, please contact your reseller.



Hardware Overview

Top Panel

Power LED: Solid indicates a connection to a good power source.



indicates that the wireless segment is ready. This LED blinks during wireless data transmission.

WLAN LED: A solid light

LAN LED: Solid indicates an Ethernet connection. Blinking indicates activity on the Ethernet network.

Bottom Panel

Mode Selection Switch: Used to select AP, client, or router mode.



Rear Panel

Reset Button: Used to restore default settings.



Receptor for Power Adapter

LAN Port

This is the connection for Ethernet cables to your Ethernet-enabled device. When in Router mode, this port functions as a WAN port.

2 Installation Overview

The DWL-G730AP offers three different operation modes:

AP (Access Point Mode): In this mode, the DWL-G730AP functions as an access point.

Client (Client Mode): When Client mode is selected, the DWL-G730AP as a wireless client.

RT (Router Mode): The DWL-G730AP functions as a router when this mode is selected.

AP - Access Point Mode

When the Mode Selection Switch on the bottom of the DWL-G730AP is set to AP, the unit is in Access Point Mode. The diagram below illustrates a typical access point configuration.

Note: D-Link® AirPlus G wireless devices are pre-configured to connect together, right out of the box, using their default settings.






Installation Overview (continued)

Client - Client Mode

When the Mode Selection Switch on the bottom of the DWL-G730AP is set to Client, the unit is in Client Mode. The diagram below illustrates a typical client configuration.

Note: D-Link® AirPlus G wireless devices are pre-configured to connect together, right out of the box, using their default settings.

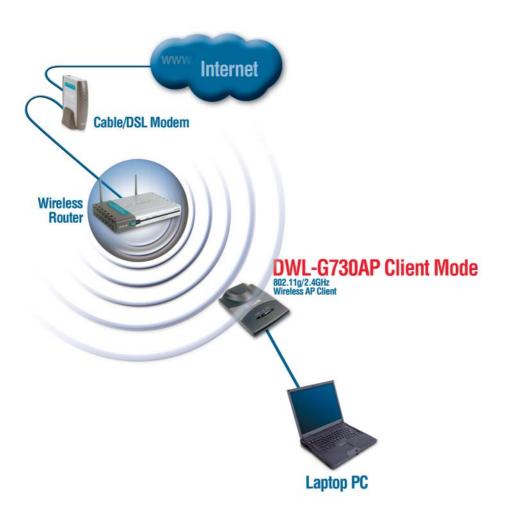




Installation Overview (continued)

RT - Router Mode

When the Mode Selection Switch on the bottom of the DWL-G730AP is set to RT, the unit is in Router Mode. The diagram below illustrates a typical router configuration.


Note: D-Link® AirPlus G wireless devices are pre-configured to connect together, right out of the box, using their default settings.

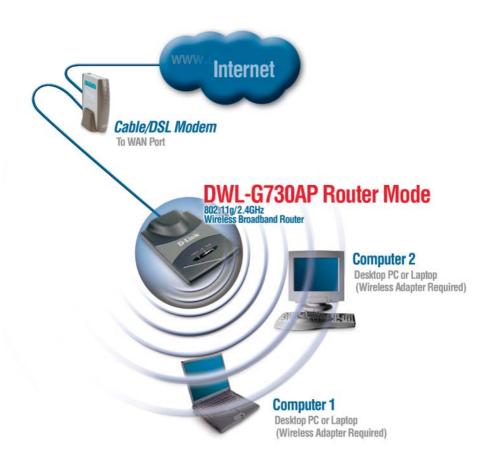




AP Mode - Using the Setup Wizard

To configure the DWL-G730AP in AP Mode, you will need to connect a PC directly to the DWL-G730AP using a standard Ethernet cable. You will need to assign the network adapter connecting to the DWL-G730AP an IP address in the range of 192.168.0.x.

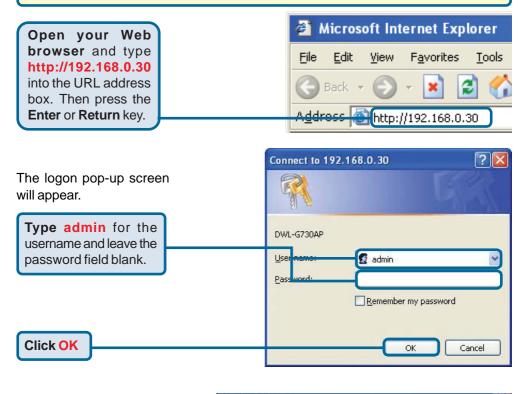

Once you have logged in, the **Home** screen will appear.

Click Run Wizard

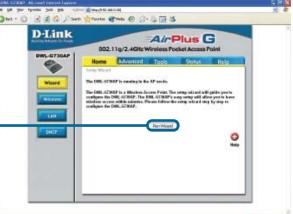



AP Mode - Using The Setup Wizard (continued)

You will see the following screens.



Click Next

Set up your new password.

You have the option to establish a password.



Click Next

Set Your Wireless LAN Connection.

By default the DWL-G730AP **SSID** is set to 'default' with a **Channel** setting of '6'.



Click Next

3

AP Mode - Using The Setup Wizard (continued)

Encryption

The DWL-G730AP is capable of two levels of wireless encryption 64-bit and 128-bit. **By default encryption is disabled.** You can change the encryption settings for more secure wireless communication.




Click Next



Click Restart



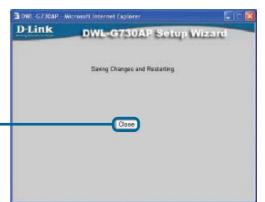


The AP Setup Wizard is complete! You will be returned to the **Home** tab. Please close all web browser windows.




Client Mode - Using the Setup Wizard

To configure the DWL-G730AP in Client Mode, you will need to connect a PC directly to the DWL-G730AP using a standard Ethernet cable. You will need to assign the network adapter connecting to the DWL-G730AP an IP address in the range of 192.168.0.x.

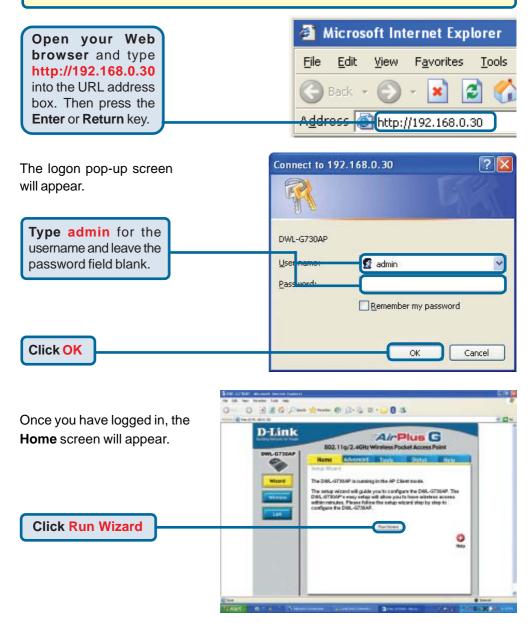




Client Mode - Using the Setup Wizard (continued)

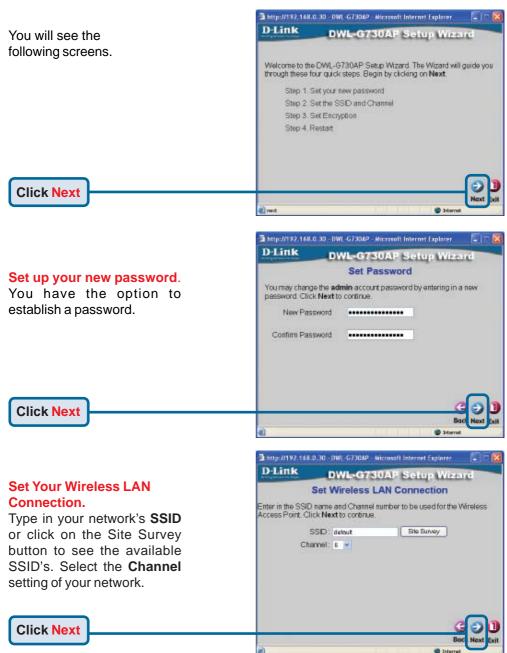



Client Mode - Using the Setup Wizard (continued)

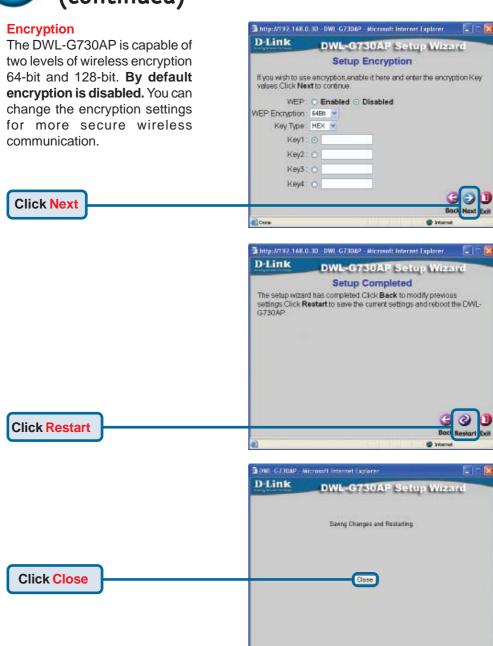


The Client Setup Wizard is complete! You will be returned to the **Home** tab. Please close all web browser windows.




Router Mode - Using the Setup Wizard

To configure the DWL-G730AP in Router mode, you must be connected to the router via a wireless network adapter. The LAN Port on the unit functions as a WAN port when the DWL-G730AP is operating in Router mode. To run the setup wizard, establish a wireless connection with the DWL-G730AP and follow the steps below.

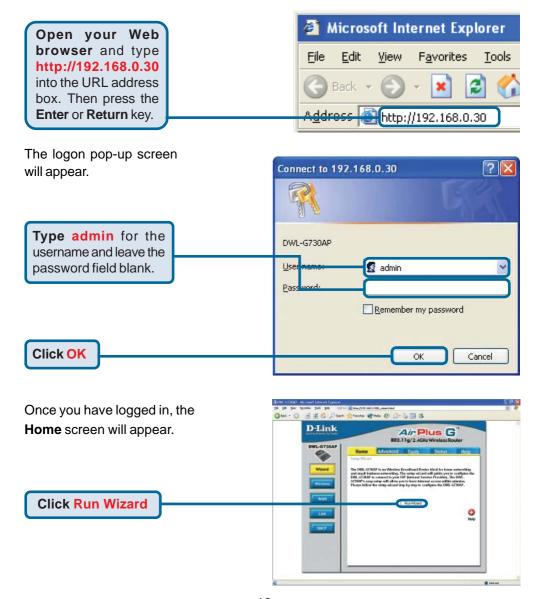




Router Mode - Using the Setup Wizard (continued)

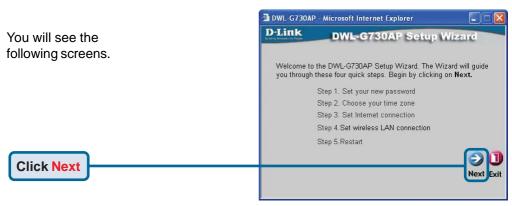



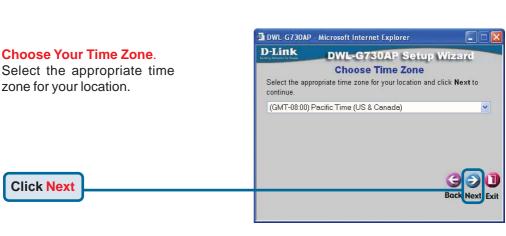




Router Mode - Using the Setup Wizard (continued)

Select your Internet Connection.

You will be prompted to select the type of Internet connection for your router.

If you are unsure of which setting to select, please contact your Internet Service Provider.

Click Next

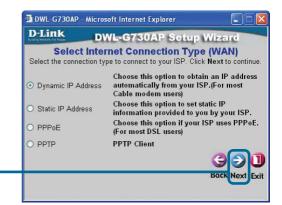

If you selected **Dynamic IP Address**, this screen will appear:
(Used mainly for Cable Internet service.)

The Clone MAC Address button will automatically copy the MAC address of the network adapter in your computer. You can also manually type in the MAC address.



Click Next

Set Your Wireless LAN Connection.

By default the DWL-G730AP **SSID** is set to **default** with a **Channel** setting of '6'.

Click Next







Router Mode - Using the Setup Wizard (continued)




The DWL-G730AP is capable of two levels of wireless encryption 64-bit and 128-bit. **By default encryption is disabled.** You can change the encryption settings for more secure wireless communication.



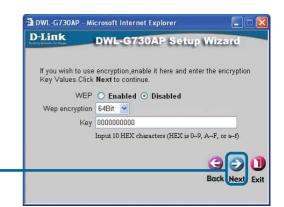

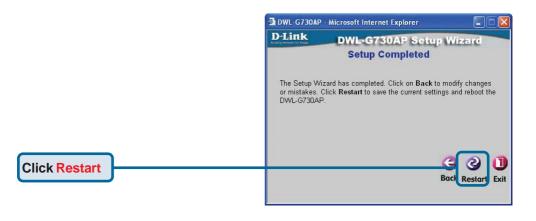

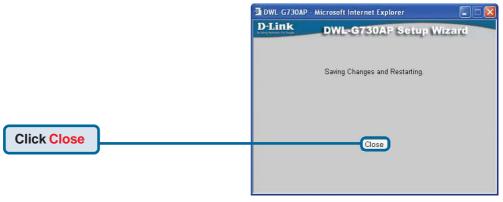

The Router Setup Wizard is complete! You will be returned to the **Home** tab. Please close all web browser windows.

Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our website, or by phone.

Tech Support for customers within the United States:

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week.

D-Link Technical Support over the Internet:

http://support.dlink.com email:support@dlink.com

Tech Support for customers within Canada:

D-Link Technical Support over the Telephone:

(800) 361-5265

Monday to Friday 7:30am to 12:00am EST

D-Link Technical Support over the Internet:

http://support.dlink.ca email:support@dlink.ca

