

GUIDA RAPIDA

Come attivare la connessione wireless del router



Come attivare la connessione wireless del router

ATTENZIONE: Prendi nota di SSID e Password WPA/WPA2 impostate in nel corso di questa guida. Per collegare i tuoi dispositivi alla tua rete wireless dovrai usare le stesse impostazioni.

1.

Aprire una finestra di un browser e digitare nella barra degli indirizzi 192.168.0.1 (oppure 192.168.1.1 se il prodotto in possesso è un modem-router, cioè con nome del prodotto DSL-xxx)

2.

Effettuare il login alla pagina di configurazione del router. Le credenziali di default, se non modificate in precedenza, sono "admin" e "admin".

3.

Fare clic sul WIRELESS SETUP dalla scheda SETUP.

Poi cliccare su WIRELESS CONNECTION SETUP WIZARD per impostare la connessione wireless in modo semplice .

Si attiverà la procedura guidata (Setup Wizard).



The screenshot displays the D-Link router's web-based configuration interface. At the top, the D-Link logo is visible. Below it, a navigation bar includes tabs for 'DSL-2750B', 'SETUP', 'ADVANCED', 'MAINTENANCE', and 'STATUS'. The 'SETUP' tab is active, and the 'Wireless Setup' option is selected in the left-hand menu. The main content area is titled 'WIRELESS SETUP' and contains the following sections:

- WIRELESS SETUP:** A introductory message stating there are two ways to set up a wireless connection: using the wizard or manual configuration.
- WIRELESS CONNECTION SETUP WIZARD:** A section with a button labeled 'Wireless Connection Setup Wizard'. A note below it advises following the Quick Installation Guide.
- ADD WIRELESS DEVICE WITH WPS(WI-FI PROTECTED SETUP) WIZARD:** A section with a button labeled 'Add wireless Device with WPS'. A note explains that WPS is not fully supported with WEP security mode.
- MANUAL WIRELESS CONNECTION OPTIONS:** A section with a button labeled 'Manual Wireless Connection Setup'.

A red rectangular box highlights the 'WIRELESS CONNECTION SETUP WIZARD' section, including its title, introductory text, and the 'Wireless Connection Setup Wizard' button.

4.

La rete wireless è attivata in modo predefinito. Deselezionando la casella di controllo si disattiva la rete wireless.

Inserisci qui il nome della tua rete Wireless (SSID). NOTA: tutti gli altri dispositivi connessi a questa rete wireless dovranno utilizzare lo stesso SSID.

Assegnare una password per proteggere la tua rete wireless. Digitare una stringa di caratteri (da 8 a 63 caratteri, meglio se contenete almeno una lettera minuscola, una maiuscola, un numero) nel campo PRE-SHARED KEY.

Poi fare clic su NEXT per passare alla pagina successiva.

WELCOME TO THE D-LINK WIRELESS SECURITY SETUP WIZARD

Your wireless network is enabled by default. You can simply uncheck the below checkbox to disable wireless.

Enable Your Wireless Network

Give your network a name, using up to 32 characters.

Wireless Network Name (SSID) :
(1-32 characters)

Set your wireless encryption mode. We will automatically assign a security key to prevent outsiders from accessing your wireless network, the router will automatically assign a security key to your wireless network.

Wireless Security Mode : **Auto (WPA or WPA2)**

Pre-Shared Key :
(8-63 characters, such as a~z, A~Z, or 0~9.)

Note: We provide user a random pre-shared key by automatically. You can also set it manually if you do not prefer the key we generate.

5.

Verrà mostrato un riepilogo delle impostazioni; prendere nota dei valori impostati. Poi fare clic su SAVE per applicare l'impostazione.

WELCOME TO THE D-LINK WIRELESS SECURITY SETUP WIZARD

Please enter the following settings in the wireless device that you are adding to your wireless network and keep a note of it for future reference.

Wireless Status : Enabled
Network Name(SSID) : D-Link DSL-2750B
Wireless Security Mode : Auto(WPA or WPA2)
Network Key : 4t56tdn8