

## **1**. Using the Print Server Software to Install the port

**Step 1:** Insert the installation CD-ROM into the CD-ROM drive. The following window will be shown automatically. If it is not, please run "install.exe" on the CD-ROM.



Step 2: Click on the *INSTALL* button. Wait until the following *Welcome* dialog to appear, and click on the *Next* button.



**Step 3:** Select the destination folder and click on the *Next* button. Then, the setup program will begin to install the programs into the destination folder.



Step 4: When the following window is displayed, click on the *Finish* button.

Setup has finished installing Print Server on your computer. Setup can launch the Read Me file and Print Server. Choose the options you want below.
Click Finish to complete Setup.
< Back Finish





**Step 6:** After rebooting your computer, the software installation procedure is finished.

## 2. Configuring on Windows 98/ME Platforms

After you finished the software installation procedure described in Chapter 3, your computer has possessed the network printing facility provided by the DI-713P. For convenience, we call the printer connected to the printer port of the DI-713P as *server printer*. On a Windows 95/98 platform, open the *Printers* window in the *My Computer* menu:

📴 Printers			_ 🗆 🗡
<u>F</u> ile <u>E</u> dit ⊻ie	ew <u>H</u> elp		
Add Printer	HP LaserJet 6L (PCL)	HPLaserJet( Chinese)	
4 object(s)			

Now, yon can configure the print server of the DI-713P:

1. Find out the corresponding icon of your server printer, for example, the **HP** LaserJet 6L. Click the mouse's right button on that icon, and then select the *Properties* item:

HP LaserJet 6L (PCL) Properties	? ×
General Details Sharing Paper Print Quality Fonts Device Options	
HP Laser, let 6L (PCL)	
Comment:	
Separator page: (none)	
Print Lest Page	
OK Cancel Apply Help	

2. Click the *Details* item:

LaserJet 6P Properties		6
ieneral Detsis  Sharing Paper  Graphics	Posts	Device Option
Print to the following port		
D Link LPT part (First Server)	٠	Add Pat
Print using the following driver:	Γ	Delete Port.
P Lase-Jet (P	•	Plang Driver
Depture Printer Port	End C	apture .
Timeoul settings		
Not gelected second	ē	
Transmission ysty	ġ.	
Spool Settings		Port Settings
Spool Serlings	ancet	Port Settings

- 3. Choose the "D-Link LPT port (Print Server)" from the list attached at the *Print To* item. Be sure that the *Printer Driver* item is configured to the correct driver of your *server printer*.
- 4. Click on the button of *Port Settings*:

Printer Position	x
Enter the Product's IP :	ОК
192.168.0.1	Cancel

Type in the IP address of the DI-713P and then click the **OK** button.

5. Make sure that all settings mentioned above are correct and then click the OK button.

## **3.** Configuring on Windows NT Platforms

The configuration procedure for a Windows NT platform is similar to that of Windows 95/98 except the screen of printer *Properties*:

2		
net to the following president	ort[s]. Documents will p	first to the fast free
LPT3 COM1: COM2 COM3 COM4 FILE FAbric Free poor FAbric Free poor	Local Pat Local Pat Local Pat Local Pat Local Pat Local Pat Local Pat Local Pat	Hervlett Packard L
Add Pett.	Delinte Plant	Dontigues Part

Compared to the procedure in last section, the selection of *Details* is equivalent to the selection of **Ports**, and *Port Settings* is equivalent to *Configure Port*.

## 4. Configuring on Windows 2000 Platforms

The configuration procedure for a Windows 2000 platform is similar to that of Windows 95/98 except the screen of printer *Properties*:

Print to the following shecked port.	port[s]. Documents will prin	nt to the first free
Port	Description	Printer A
COM1:	Serial Port	
COM2:	Serial Port	
COM3:	Serial Port	
COM4:	Serial Port	
TILE:	Print to File	
D-Link	Local Port	HP LasesJet 6L 💌
4	1	
Add Part	Delete Port	Configure Port

Compared to the procedure in last section, the selection of *Details* is equivalent to the selection of **Ports**, and *Port Settings* is equivalent to *Configure Port*