



WAN with DHCP

Click “Ethernet” under “Interfaces”

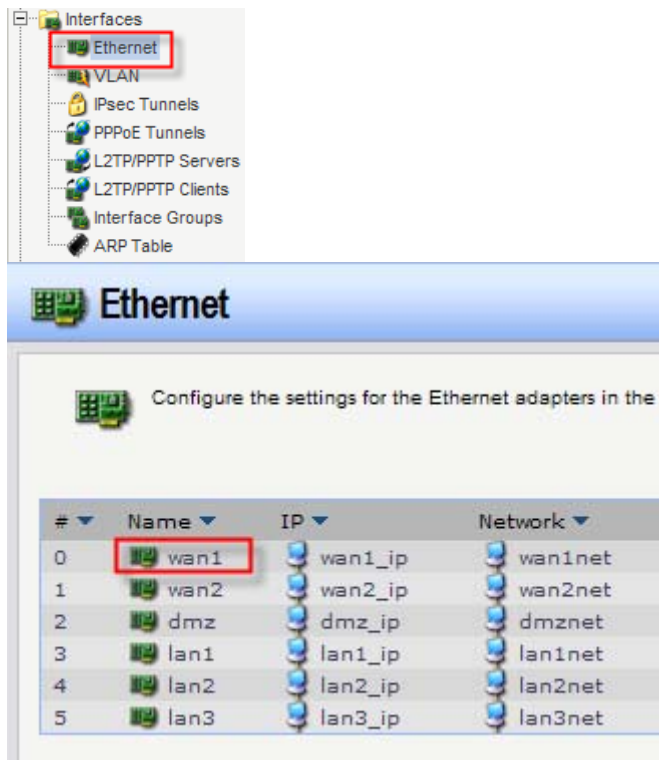

Enable “DHCP Client”

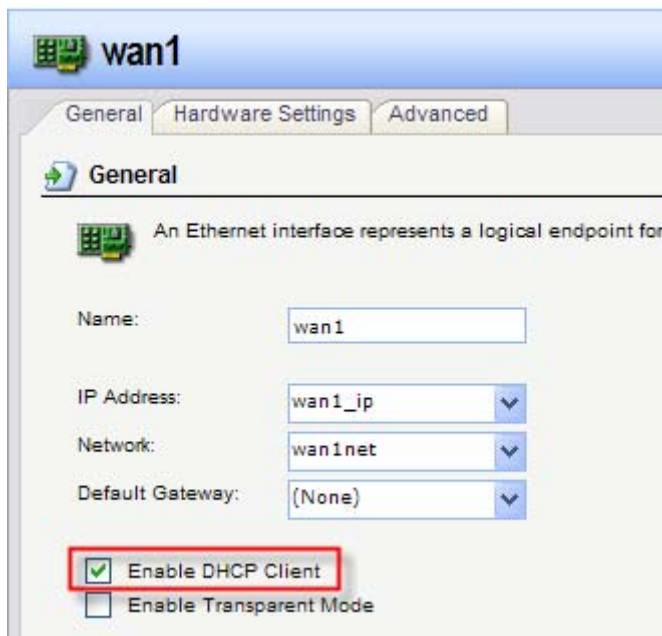

- Click “Save and Active”