 


How do I change the SSID of my DIR-857?



How do I change the SSID of my DIR-857?

Step 1 – Open a browser and go to the router’s IP address, which by default is `http://192.168.0.1`



Step 2 – Login to the router. The default username is **Admin** there is no password by default.



LOGIN

Log in to the router:

User Name :

Password :




Step 3 – Click the “Setup” tab on the top menu, then “Wireless Settings” on the left hand menu.



Step 4 – Once the new page loads, scroll to the bottom and select “Manual Internet Connection Setup”.

How do I change the SSID of my DIR-857?

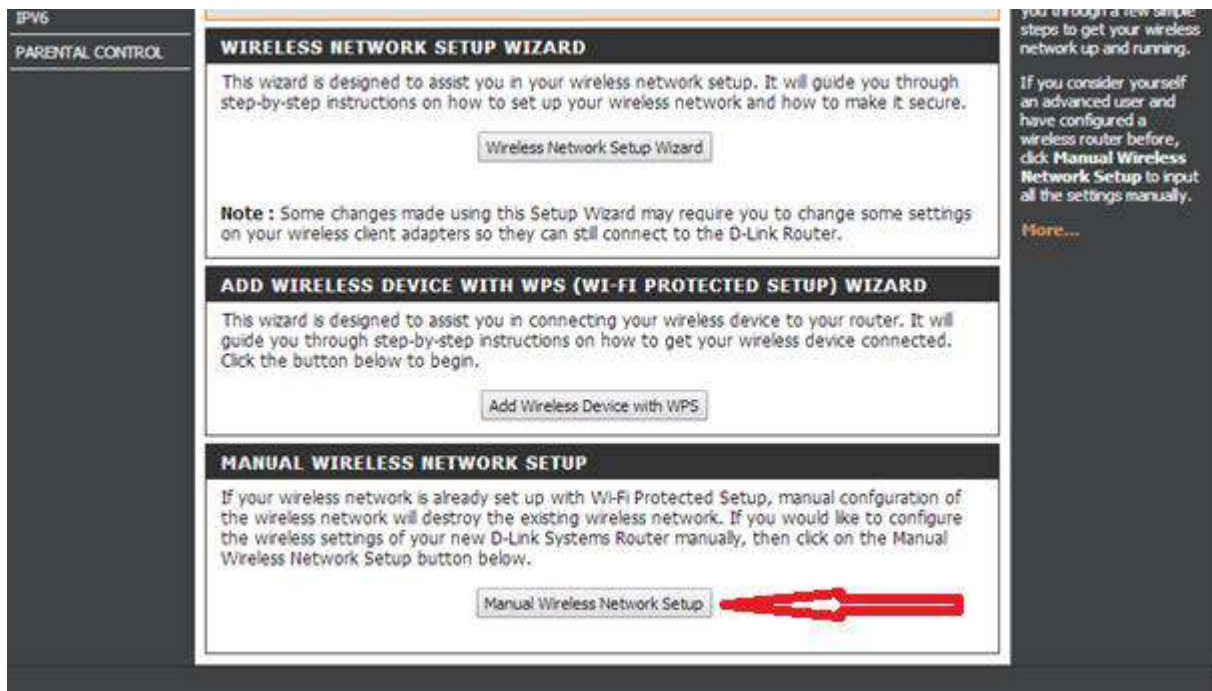

Step 5 – The DIR-857 has a 2.4GHz and a 5GHz wifi network. Please ensure you alter the correct SSID.

The 2.4GHz radio is shown first. To change the SSID, simply alter the name that appears in the "Wireless Network Name" field.

How do I change the SSID of my DIR-857?



Product Page: DIR-857 Hardware Version: A1 Firmware Version: 1.03

D-Link

DIR-857 // SETUP ADVANCED TOOLS STATUS SUPPORT

WIRELESS :

Use this section to configure the wireless settings for your D-Link Router. Please note that changes made on this section may also need to be duplicated on your Wireless Client.

Save Settings Don't Save Settings

WIRELESS NETWORK SETTINGS

Wireless Band : 2.4GHz Band

Enable Wireless : Always New Schedule

Wireless Network Name : dlink (Also called the SSID)

802.11 Mode : Mixed 802.11n, 802.11g and 802.11b

Enable Auto Channel Scan :

Wireless Channel : 2.437 GHz - CH 6

Channel Width : Auto 20/40 MHz

Visibility Status : Visible Invisible

WIRELESS SECURITY MODE

To protect your privacy you can configure wireless security features. This device supports three wireless security modes including WEP, WPA-Personal, and WPA-Enterprise. WEP is the original wireless encryption standard. WPA provides a higher level of security. WPA-Personal does not require an authentication server. The WPA-Enterprise option requires an external RADIUS server.

Security Mode : None

Helpful Hints ...

Changing your Wireless Network Name is the first step in securing your wireless network. Change it to a familiar name that does not contain any personal information.

Enable Auto Channel Scan so that the router can select the best possible channel for your wireless network to operate on.

Enabling Hidden Mode is another way to secure your network. With this option enabled, no wireless clients will be able to see your wireless network when they scan to see what's available. For your wireless devices to connect to your router, you will need to manually enter the Wireless Network Name on each device.

If you have enabled Wireless Security, make sure you write down the Key or Passphrase that you have configured. You will need to enter this information on any

Step 6 – To change the 5GHz wifi network name, scroll down to the 5Ghz band section, and alter the name in the “Wireless Network Name” field.

WIRELESS NETWORK SETTINGS

Wireless Band : 5GHz Band

Enable Wireless : Always New Schedule

Wireless Network Name : dlink_media (Also called the SSID)

802.11 Mode : Mixed 802.11n and 802.11a

Enable Auto Channel Scan :

Wireless Channel : 40

Channel Width : Auto 20/40 MHz

Visibility Status : Visible Invisible

WIRELESS SECURITY MODE

To protect your privacy you can configure wireless security features. This device supports three wireless security modes including WEP, WPA-Personal, and WPA-Enterprise. WEP is the original wireless encryption standard. WPA provides a higher level of security. WPA-Personal does not require an authentication server. The WPA-Enterprise option requires an external RADIUS server.

Security Mode : None

WIRELESS

How do I change the SSID of my DIR-857?



Step 7 – Click “Save” to save the changes you have made. You can now search for the new network names in your wireless device.