

Mise à jour Firmware d'un DWS-4026

- → Pour la mise à jour des DWS-4026 et des points d'accès, il faut se doter d'un server TFTP.(*ex tftpd32*).
- → Se connecter sur le contrôleur en RJ-45 et en précisant une adresse IP fixe de la même classe que le contrôleur.
- → Pour notre exemple l'adresse IP du poste qui fera office de serveur TFTP est 10.0.0.9/255.0.0.0.
 - → Cliquez sur l'icône « Tools » (marteau et tournevis) et sélectionnez « Download code » via TFTP.







➔ une fois le firmware téléchargé, il suffit d'activer le firmware désiré dans le menu « tools>> Dual image services » ;

➔ de cliquer sur « Activate » de sauvegarder les données « save » et de redémarrer le DWS-4026.

← → @ http://10.90.90.90	/base/dlink_login.html	<u>)</u> ک⊴ - ۵	D-Link Web Manag ×	× □ □ ×
Fichier Edition Affichage Favo	oris Outils ?			
D-Link Building Networks for People	Erreur : cliquez pour obtenir plus d'i	nformations		
LAN WLAN	Active Image	lass 21/cs	Current active	
Administration	Image1 Ver 3.0.0.17	Image2 Ver 4.1.0.8	Current-active	image1
L3 Features L3 Features QoS QoS Access Control Lists Security	Image Name	Image1 Image2	Activate Delete	
🗄 🧰 Monitoring	Image Description			
	Image		Description	
	lmage1		default image	Change
	lmage2			Change
×	Bootcode Update Bootcode by using th	e current active imag	je Undate	~

