


1 Installing the DWL-500 PCI Holder Drivers


With the computer turned **ON**, insert the driver CD for the DWL-500 Wireless PCI Adapter into the CD-ROM.

The driver CD will automatically load.
Click on **“Install Drivers”**.

Click on **“Install PCI-Holder Drivers”**.

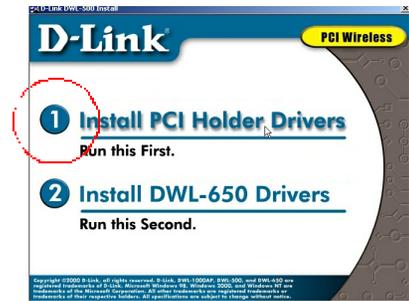

At the **“Welcome”** window,
Click **Next**.

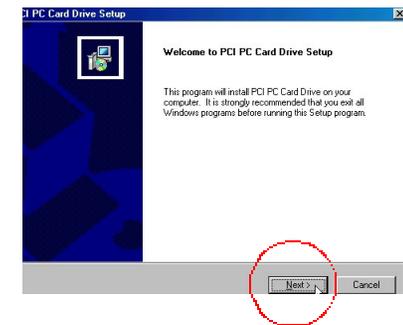

The next screen will be the license agreement,
Click **Yes** to accept.


Select **“No, I will restart my computer later”** at the next screen.
Click **Finish**.




2

Installing the DWL-650 Drivers

From the initial screen, **Click on “Install DWL-650 Drivers”** to proceed with the installation.

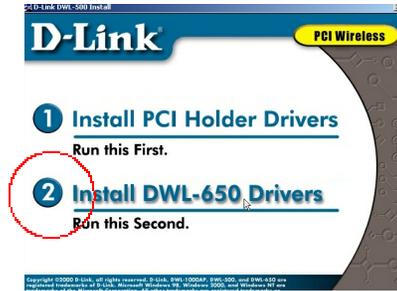


The following “Welcome” screen will be displayed. **Click Next.**

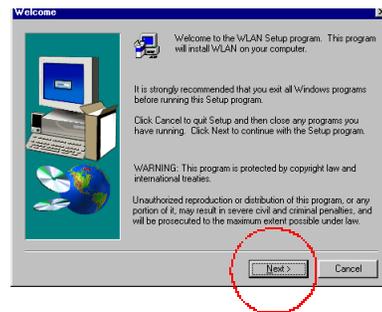

The next screen will be the license agreement.

Click Yes.

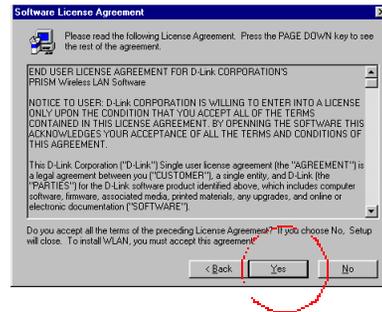

The next screen will prompt for the System ID. The word “default” will be displayed in the text box.

Type in the desired name of the System ID in the provided text box. The system ID needs to be the same for all wireless network devices. **Click Next.**



APPENDIX A Providing Windows 98 Files

If prompted for the Windows 98 CD, insert the Windows 98 CD into the CD-ROM Drive.



Click **OK**.

Specify the correct location in the “Copy files from:” box. If the CD-ROM drive is the **D:** drive, then type **D:\Win98** in the box.

(Some computers will have the Windows 98 files available in the **C:\Windows\options\cabs** directory).



After typing in the location, Click **OK**.

Windows will copy the necessary system files.

APPENDIX B Providing Driver Files


If prompted for the Driver files, insert Driver CD.

Click **Browse**.



Select the CD-ROM drive.

Click **OK**.

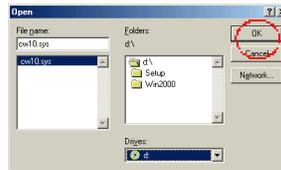


Windows will copy the necessary files.

APPENDIX C Loading the PC CARD Wizard

If the PC Wizard appears, Click **Next** at first screen.

Click **Next** at the second screen,


Finally, Click **Finish** at the third screen.

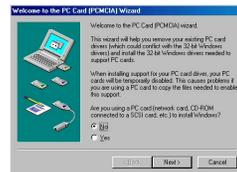

2 Installing the Drivers *continued*


Select the Network Mode.

If you are connecting to an Access Point, select “**Infrastructure**”. Otherwise, if you are connecting directly to another wireless adapter without an Access Point, or a Wireless Residential Gateway then select “**Ad Hoc**”. Click **Next**.

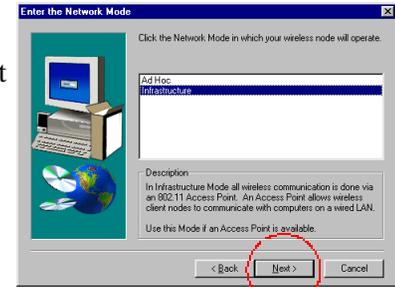

Windows will prompt for the destination folder.

Click **Next** to accept the selected folder. Otherwise, click **Browse** and select the desired folder.

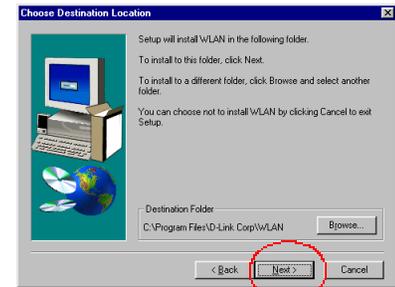

The next screen will appear.


Click **Next**.



Windows will then copy files. After the files are loaded, Windows will prompt to restart the computer.

Select “**No, I will restart my computer.**”

Click **Finish**.

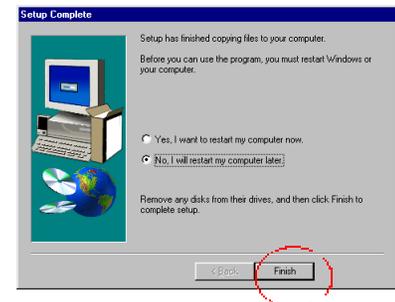

3 Installing the DWL-500 Wireless PCI CARD

Shut down the computer.

Insert the DWL-500 Wireless PCI Holder , without the PC CARD, into an available PCI slot in the computer. Secure the PCI Holder with a screw.



After the PCI Card Holder is secured, then insert the PCI Card, facing down as shown, into the PCI Card Holder. Press the PC Card firmly into the PCI holder.



After the PC card is firmly seated, then **restart the computer**.

4 Finish Installation

Windows will recognize the PCI Holder. If the PC Card Wizard appears, refer to Appendix C for installation.

If prompted for Windows 98 files or driver files, please refer to Appendices A & B.

If the following prompt appears, Click OK to continue.



Restart the computer.

After restarting, Windows will recognize the PC Card drivers.

If prompted for Windows 98 files or driver files, please refer to Appendices A & B.

Restart the computer to finish installation.



To check that wireless adapter is working, click on the configuration utility icon in the task bar. Make sure that there is a wireless connection under the "link info tab".