

D-Link (Europe) Ltd.

4th Floor Merit House Edgware Road London NW9 5AB U.K.


Tel: +44-208-731 5555 Fax: +44-208-731 5511

DI-304 Installation Guide for LAN – LAN Setup

To configure the router for LAN – LAN, follow the screens setting below.

The router has a default IP address of 192.168.0.1, and is setup as a DHCP server. The PC you will use to configure the DI-304 will need to be setup to receive its IP address from a DHCP server.

In the TCPIP properties of your Ethernet adapter, configure it so that the IP address is obtained automatically.

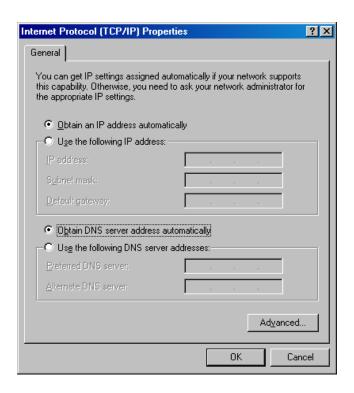


Router Main Menu

To configure the router, in your WEB browser type the IP address of the router, this will be 192.168.0.1

Select LAN-LAN Dialer Profile Setup



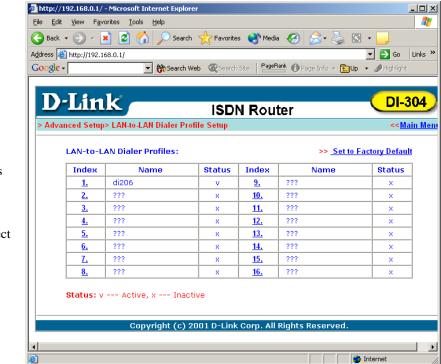


You can setup 16 LAN-LAN profiles, that is to say you can connect to 16 remote networks. Select an available index. Give an appropriate name for the profile, and enable it.

Enter the dial out username and password.

If the other router dial this site, then complete the dinin settings.

For unnumbered link leave my WAN IP as 0.0.0.0. The remote gateway in the IP address of the remote router. Enter the remote network and mask.

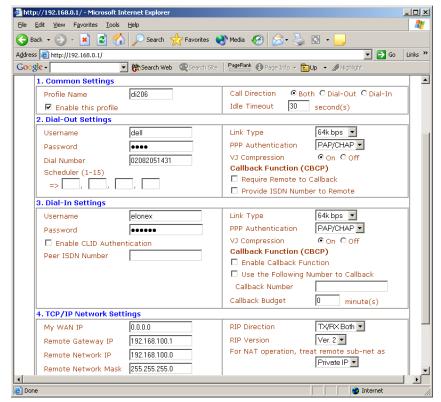

Select call direction and idle timeout.

Select 64, 128 or BOD for this connection, and authentication for the dial out settings

Setup the parameters for dial in.

These setting may be left as default.

~ End of Document ~