

D-Link

**D-LINK™ DGS-3100 SERIES
GIGABIT STACKABLE MANAGED SWITCH**

**CLI MANUAL
v3.6**

Information in this document is subject to change without notice.

© 2009 D-Link Computer Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of D-Link Computer Corporation is strictly forbidden.

Trademarks used in this text: D-Link and the D-Link logo are trademarks of D-Link Computer Corporation; Microsoft and Windows are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. D-Link Computer Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user's guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Warnung!

Dies ist ein Produkt der Klasse A. Im Wohnbereich kann dieses Produkt Funkstörungen verursachen. In diesem Fall kann vom Benutzer verlangt werden, angemessene Massnahmen zu ergreifen.

Precaución!

Este es un producto de Clase A. En un entorno doméstico, puede causar interferencias de radio, en cuyo caso, puede requerirse al usuario para que adopte las medidas adecuadas.

Attention!

Ceci est un produit de classe A. Dans un environnement domestique, ce produit pourrait causer des interférences radio, auquel cas l'utilisateur devrait prendre les mesures adéquates.

Attenzione!

Il presente prodotto appartiene alla classe A. Se utilizzato in ambiente domestico il prodotto può causare interferenze radio, nel cui caso è possibile che l'utente debba assumere provvedimenti adeguati.

VCCI Warning

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

March, 2010

Table of Contents

INTRODUCTION	1
USING THE CONSOLE CLI.....	4
COMMAND SYNTAX	8
BASIC SWITCH COMMANDS.....	11
create account.....	12
config account.....	13
show account.....	13
show session.....	14
show system defaults	14
show switch.....	15
show serial_port.....	16
config serial_port	16
enable clipaging	17
disable clipaging	18
delete account.....	18
enable web	18
disable web.....	19
save	19
reboot	20
reset.....	20
login	21
logout	21
ping	22
show configuration.....	22
enable jumbo_frame.....	23
disable jumbo_frame.....	24
show jumbo_frame.....	24
locate	24
telnet.....	25
enable telnet	25
disable telnet	26
enable dhcp_relay	26
disable dhcp_relay.....	26
config dhcp_relay add ipif.....	27
config dhcp_relay delete ipif.....	27
show dhcp_relay ipif.....	27
show tech_support.....	28
show environment.....	29
config time_range	30
show time_range	30
config terminal log.....	31
show cable status.....	31
SWITCH PORT COMMANDS.....	33
config ports	33
show ports	34

config ports description.....	35
delete ports description	35
show ports description	35
NETWORK MANAGEMENT (SNMP) COMMANDS	37
create snmp user.....	38
delete snmp user.....	39
show snmp user.....	39
create snmp view.....	40
delete snmp view.....	40
show snmp view.....	41
create snmp community	42
delete snmp community	42
show snmp community	43
config snmp engineID	43
show snmp engineID.....	44
create snmp group	44
delete snmp group	46
show snmp groups.....	46
create snmp host.....	47
delete snmp host.....	48
show snmp host.....	48
create trusted_host.....	49
show trusted_host.....	50
delete trusted_host.....	50
enable snmp traps.....	50
disable snmp traps.....	51
enable snmp authenticate trap	51
disable snmp authenticate trap	52
show snmp traps.....	52
config snmp system_contact	52
config snmp system_location	53
config snmp system_name	53
enable snmp	54
disable snmp.....	54
DOWNLOAD/UPLOAD COMMANDS	55
download.....	55
upload.....	56
config dhcp_auto enable	57
show dhcp_auto.....	57
config firmware.....	58
show firmware information.....	58
DHCP LOCAL RELAY	59
config dhcp_local_relay state.....	59
config dhcp_local_relay vlan	59
NETWORK MONITORING COMMANDS	61
show packet ports.....	61
show error ports	62

show utilization	63
clear counters	64
clear log	64
show log	64
enable syslog	65
disable syslog	65
show syslog	66
create syslog host	66
config syslog host	68
delete syslog host	70
show syslog host	71
clear green-ethernet Cumulative_Energy_Saved	71
show green-ethernet	72
SPANNING TREE COMMANDS.....	73
config stp	73
config stp ports	74
config stp version	76
enable stp	76
disable stp	76
show stp	77
show stp ports	78
show stp instance_id	79
show stp mst_config_id	79
config stp instance_id	80
config stp priority	81
config stp mst_config_id	81
config stp mst_ports	82
FORWARDING DATABASE COMMANDS.....	84
create fdb	84
create multicast_fdb	85
config multicast_fdb	85
config fdb aging_time	86
delete fdb	86
clear fdb	87
show multicast_fdb	87
show fdb	88
config multicast filtering_mode	89
show multicast filtering_mode	89
config dlf filtering_mode	90
show dlf filtering_mode	90
BROADCAST STORM CONTROL COMMANDS	92
config traffic control	92
show traffic control	93
config traffic trap	94
config traffic control_recover	94
QOS COMMANDS	95
config scheduling	95

show scheduling.....	96
config bandwidth_control	97
show bandwidth_control.....	97
config 802.1p user_priority.....	98
show 802.1p user_priority.....	99
config 802.1p default_priority	100
show 802.1p default_priority	100
config scheduling_mechanism.....	101
show scheduling_mechanism.....	102
config rate_limit.....	102
show rate_limit.....	103
config dscp user_priority	104
show dscp user_priority	104
PORT MIRRORING COMMANDS	106
config mirror	106
delete mirror.....	107
show mirror.....	107
VLAN COMMANDS	108
create vlan	108
delete vlan	109
config vlan	109
config gvrp	110
enable gvrp.....	111
disable gvrp.....	111
show vlan	111
show gvrp.....	112
enable vlan_trunk	113
disable vlan_trunk	113
show vlan_trunk	113
config vlan_trunk ports	114
enable asymmetric_vlan.....	114
disable asymmetric_vlan.....	115
show asymmetric_vlan.....	115
config voice_vlan	116
show voice vlan	116
LINK AGGREGATION COMMANDS	118
create link_aggregation	118
delete link_aggregation	119
config link_aggregation	119
show link_aggregation	120
BASIC IP COMMANDS.....	121
config ipif system.....	121
show ipif.....	122
IGMP SNOOPING COMMANDS.....	123
config igmp_snooping.....	123
config igmp_snooping querier	124
config router_port	124

config router_port_forbidden	125
enable igmp_snooping	125
disable igmp_snooping	126
show igmp_snooping	126
show igmp_snooping group	127
show igmp_snooping forwarding	127
show router_port	128
MLD SNOOPING COMMANDS.....	129
enable mld_snooping	129
disable mld_snooping	130
config mld_snooping.....	130
config mld_snooping mrouter_port.....	131
config mld_snooping mrouter_port_forbidden	131
show mld snooping	132
show mld_snooping forwarding.....	132
show mld_snooping groups.....	133
show mld_snooping mrouter_port	133
802.1X COMMANDS.....	135
enable 802.1x	136
disable 802.1x	136
config 802.1x	136
show 802.1x auth_state	137
show 802.1x auth_configuration.....	138
config 802.1x auth_parameter ports.....	139
config 802.1x init	140
config 802.1x auth_protocol	140
config 802.1x reauth	141
config radius add	141
config radius delete	142
config radius.....	142
show radius	143
config 802.1x auth_mode	143
create 802.1x guest_vlan.....	144
delete 802.1x guest_vlan.....	144
config 802.1x guest_vlan ports	145
config 802.1x radius attribute	145
show 802.1x guest_vlan	146
MAC AUTHENTICATION COMMANDS.....	147
enable mac_based_access_control	147
disable mac_based_access_control	148
config mac_based_access_control	148
show mac_based_access_control	149
PORT SECURITY COMMANDS.....	150
config port_security	151
show port_security	152
TIME AND SNTP COMMANDS	153
config sntp.....	153

show sntp	154
enable sntp	154
disable sntp.....	155
config time date.....	155
config time_zone.....	156
config dst.....	156
show time	158
ROUTING TABLE COMMANDS	159
create iproute.....	159
delete iproute.....	159
show iproute.....	160
ARP COMMANDS.....	161
create arpentry.....	161
config arpentry	161
delete arpentry.....	162
show arpentry.....	163
config arp_aging_time	163
clear arptable	164
config arp_spoofing_prevention	164
show arp_spoofing_prevention	165
BANNER COMMANDS.....	166
config login_banner	166
COMMAND HISTORY LIST COMMANDS	167
?.....	167
show command_history	168
dir	168
config command_history.....	169
SSH COMMANDS.....	170
enable ssh.....	170
disable ssh.....	171
config ssh authmode.....	171
show ssh authmode	171
config ssh server.....	172
show ssh server	172
show ssh algorithm.....	173
config ssh crypto	173
show ssh crypto.....	174
delete ssh crypto.....	175
SSL COMMANDS	176
enable ssl.....	176
disable ssl.....	177
show ssl	177
show ssl cachetimeout.....	178
crypto certificate (generate)	178
crypto certificate (request)	179
crypto certificate (import)	180
config ssl certificate	180

show crypto certificate mycertificate	181
ACCESS AUTHENTICATION CONTROL COMMANDS	182
create authen_login method_list_name	183
config authen_login.....	183
delete authen_login method_list_name.....	184
show authen_login	185
create authen_enable method_list_name.....	185
config authen_enable	186
delete authen_enable method_list_name.....	187
show authen_enable	188
config authen application	188
show authen application.....	189
create authen server_host	190
config authen server_host	191
delete authen server_host	192
show authen server_host	192
local_enable admin	193
config admin local_enable	193
LACP COMMANDS	195
config lacp port_priority	195
show lacp	195
LLDP COMMANDS	197
enable lldp (global)	197
disable lldp (global)	198
enable lldp forward_message	198
disable lldp forward_message	199
config lldp message_tx_interval	199
config lldp message_tx_hold_multiplier	199
config lldp reinit_delay	200
config lldp tx_delay	200
show lldp	201
show lldp ports	201
show lldp local_ports	202
show lldp remote_ports	202
config lldp ports	203
STACKING COMMANDS	206
config box_id	206
show stack_information	206
POE COMMANDS	208
config poe.....	208
config poe ports.....	209
show poe	210
ACCESS CONTROL LIST COMMANDS	211
create access_profile (for Ethernet).....	212
create access_profile (for IPv4)	212
create access_profile (for IPv6)	214
config access_profile (for Ethernet).....	215

config access_profile (for IPv4)	217
config access_profile (for IPv6)	219
config access_profile	221
delete access_profile	222
show access_profile	222
TRAFFIC SEGMENTATION COMMANDS.....	224
config traffic_segmentation	224
show traffic_segmentation	224
TRACEROUTE COMMANDS	226
traceroute.....	226
SAFEGUARD COMMANDS	228
config safeguard_engine	228
show safeguard_engine	229
DEVICE SPECIFICATIONS	230
Technical Specifications	230
Cable Lengths	232

INTRODUCTION

The DGS-3100 series of products family consists of 24 / 48 -port 10/100/1000Base-T PoE / NonPoE L2 Stackable Management Switches with 4 Combo SFPs and DGS-3100-24TG, a switch with 16 SFPs and 8 copper GE ports.

The Switch can be managed through the Switch's serial port, Telnet, or the Web-based management agent. The Command Line Interface (CLI) can be used to configure and manage the Switch via the serial port or Telnet interfaces.

This manual provides a reference for all of the commands contained in the CLI. Configuration and management of the Switch via the Web-based management agent is discussed in the Manual. For detailed information on installing hardware please refer also to the Manual.


Accessing the Switch via the Serial Port

The Switch's serial port's default settings are as follows:

- 9600 bps
- No parity
- 8 data bits
- 1 stop bit

A computer running a terminal emulation program capable of emulating a VT-100 terminal and a serial port configured as above is then connected to the Switch's serial port via an RS-232 DB-9 cable.

With the serial port properly connected to a management computer, the following screen should be visible. If this screen does not appear, try pressing Ctrl+r to refresh the console screen.

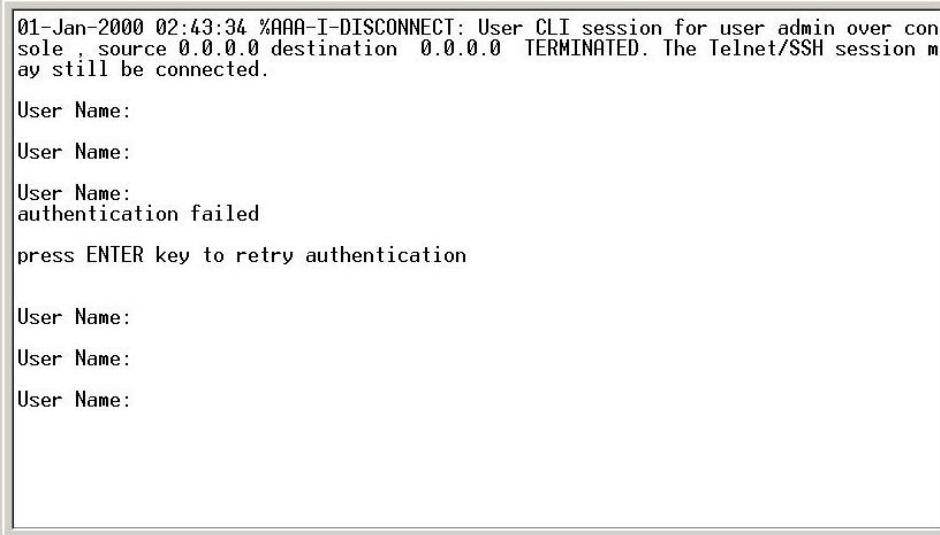

```
01-Jan-2000 02:43:34 %AAA-I-DISCONNECT: User CLI session for user admin over con
sole , source 0.0.0.0 destination 0.0.0.0 TERMINATED. The Telnet/SSH session m
ay still be connected.

User Name:
User Name:
User Name:
authentication failed

press ENTER key to retry authentication
```

Figure 1–1 Initial CLI screen

The initial username is admin (lower case). Press the Enter key twice to display the CLI input cursor. This is the command line where all commands are input.

Setting the Switch's IP Address

Each Switch must be assigned its own IP Address, which is used for communication with an SNMP network manager or other TCP/IP application (for example BOOTP, TFTP). The Switch's default IP address is 10.90.90.90. You can change the default Switch IP address to meet the specification of your networking address scheme.

The Switch is also assigned a unique MAC address by the factory. This MAC address cannot be changed, but can be found on the initial boot console screen – shown below.

```

64MBYTE SDRAM. I-Cache 8 KB. D-Cache 8 KB. Cache Enabled.

Autoboot in 2 seconds - press RETURN or Esc. to abort and enter prom.
Preparing to decompress...
100%
Decompressing SW from image-1
100%

OK
Running from RAM...

*****
*** Running SW Ver. 1.00.27 Date 29-Apr-2007 Time 17:17:13 ***
*****

HW version is 00.00.01
Base Mac address is: 00:23:27:26:49:00
Dram size is : 64M bytes
Dram first block size is : 45056K bytes
Dram first PTR is : 0x14000000
Flash size is: 16M
01-Jan-2000 01:01:07 %CDB-I-LOADCONFIG: Loading running configuration.
01-Jan-2000 01:01:07 %CDB-I-LOADCONFIG: Loading startup configuration.

```

Figure 1–2 Boot Screen

The Switch's MAC address can also be found in the Web management program on the Device Information window on the Configuration menu.

The IP address for the Switch must be set before it can be managed with the Web-based manager. The Switch IP address can be automatically set using BOOTP or DHCP protocols, in which case the actual address assigned to the Switch must be known.

The IP address may be set using the Command Line Interface (CLI) over the console serial port as follows:

1. Starting at the command line prompt, enter the commands config ipif System vlan default ipaddress xxx.xxx.xxx.xxx/yyy.yyy.yyy.yyy. Where the letter x represents the IP address to be assigned to the IP interface named System and the letter y represents the corresponding subnet mask.
2. Alternatively, enter config ipif System ipaddress xxx.xxx.xxx.xxx/z. Where the letter x represents the IP address to be assigned to the IP interface named System and the letter z represents the corresponding number of subnets in CIDR notation.

The IP interface named System on the Switch can be assigned an IP address and subnet mask which can then be used to connect a management station to the Switch's Telnet or Web-based management agent.

```

DGS3100# config ipif system v
Command: config ipif system
DGS3100# config ipif system vlan default ipi
Command: config ipif system vlan default
DGS3100# config ipif system vlan default ipi 1.1.1.10/8
Command: config ipif system vlan default ipi 1.1.1.10/8
Invalid input detected at '^' marker
      ipaddress          Input IP Address
      state               Input the status
DGS3100# config ipif system vlan default ip 1.1.1.10/8

Success.
DGS3100# 01-Jan-2000 01:04:07 %AAA-I-CONNECT: New http connection for user admin
, source 1.1.1.23 destination 1.1.1.10 ACCEPTED
DGS3100# config ipif system vlan default ip 1.1.1.10/8

Success.
DGS3100#

```

Figure 1–3 Assigning an IP Address

In the above example, the Switch was assigned an IP address of 1.1.1.10 with a subnet mask of 255.0.0.0. The system message Success indicates that the command was executed successfully. The Switch can now be configured and managed via Telnet, SNMP MIB browser and the CLI or via the Web-based management agent using the above IP address to connect to the Switch.

 **NOTE:** The DGS-3100 series of switches have the capability to be configured to have no IP address. This function maybe used to disable Layer 3 functions of the Switch. When the IP address is disabled, the Switch can only be managed through the console port. Other management applications such as Telnet, Web-based and SNMP cannot be used to manage the Switch when the switch has no IP address.

USING THE CONSOLE CLI

The Switch supports a console management interface that allows the user to connect to the Switch's management agent via a serial port and a terminal or a computer running a terminal emulation program. The console can also be used over the network using the TCP/IP Telnet protocol. The console program can be used to configure the Switch to use a SNMP-based network management software over the network.

This chapter describes how to use the console interface to access the Switch, change its settings, and monitor its operation.



NOTE: Switch configuration settings are saved to non-volatile RAM using the save command. The current configuration will then be retained in the Switch's NV-RAM, and reloaded when the Switch is rebooted. If the Switch is rebooted without using the save command, the last configuration saved to NV-RAM is loaded.

Connecting to the Switch

The console interface is used by connecting the Switch to a VT100-compatible terminal or a computer running an ordinary terminal emulator program (for example, the HyperTerminal program included with the Windows operating system) using an RS-232C serial cable. Your terminal parameters will need to be set to:

- VT-100 compatible
- 9600 bps
- 8 data bits
- No parity
- One stop bit
- No flow control

The same functions may also be accessed over a Telnet interface. Once an IP address for the Switch has been set, A Telnet program can be used (in VT-100 compatible terminal mode) to access and control the Switch. All of the screens are identical, whether accessed from the console port or from a Telnet interface.

After the Switch reboots and you have to logged in, the console looks like this:

```
01-Jan-2000 02:43:34 %AAA-I-DISCONNECT: User CLI session for user admin over con  
sole , source 0.0.0.0 destination 0.0.0.0 TERMINATED. The Telnet/SSH session m  
ay still be connected.
```

```
User Name:
```

```
User Name:
```

```
User Name:  
authentication failed
```

```
press ENTER key to retry authentication
```

```
User Name:
```

```
User Name:
```

```
User Name:
```

Figure 2–1 Initial Console Screen after Logging In

Commands are entered at the command prompt, DGS3100#.

There are a number of helpful features included in the CLI. Entering the ? command displays a list of all of the top-level commands.

clear	clear
config	config
create	create
crypto	Cryptographic commands
debug-mode	Exit from the EXEC to debug mode
delete	delete
dir	display all commands.
disable	disable
download	download
enable	enable
local_enable	local_enable
locate	locate the device.
login	log in a user to the switch's console.
logout	log out a user from the switch's console.
ping	test the connectivity between network devices.
reboot	restart the switch.
reset	reset the switch to the factory default settings.
save	save changes in the switch's configuration to non-volatile ram.
show	show
upload	upload the current switch settings or the switch history log to a tftp server.

DGS3100# _

Figure 2–2 The ? Command

When entering a command without its required parameters, the CLI displays the prompt: command: config account message and the options listed below.

```

link_aggregation    config link_aggregation
    mirror          config mirror
DGS3100# config ip
Command: config
DGS3100# config ipif
Command: config ipif
    system          The IP interface name to be configured
DGS3100# config acco
Command: config
DGS3100# config account
Command: config account
    WORD<1-15>      username
DGS3100#
DGS3100#

```

Figure 2–3 Example Command Parameter Help

In this case, the command **config account** was entered with the parameter <username>. The CLI will then prompt to enter the <username> with the message, **command: config account**. Every command in the CLI has this feature, and complex commands have several layers of parameter prompting.

In addition, after typing any given command plus one space, users can see all of the next possible sub-commands, in sequential order, by pressing the ? key.

To re-enter the previous command at the command prompt, press the up arrow cursor key. The previous command appears at the command prompt.

```

link_aggregation    config link_aggregation
    mirror          config mirror
DGS3100# config ip
Command: config
DGS3100# config ipif
Command: config ipif
    system          The IP interface name to be configured
DGS3100# config acco
Command: config
DGS3100# config account
Command: config account
    WORD<1-15>      username
DGS3100#
DGS3100#

```

Figure 2–4 Using the Up Arrow to Re-enter a Command

In the above example, the command **config account** was entered without the required parameter <username>, the CLI returned the **command: config account** prompt. The up arrow cursor control key was pressed to re-enter the previous command (**config account**) at the command prompt. Now the appropriate username can be entered and the **config account** command re-executed.

All commands in the CLI function in this way. In addition, the syntax of the help prompts are the same as presented in this manual angle brackets < > indicate a numerical value or character string. The < > can also indicate a word with a number for character allowed.

If a command is entered that is unrecognized by the CLI, the top-level commands are displayed under the Available commands: prompt.

```

DGS3100#
DGS3100#
DGS3100#
DGS3100#
DGS3100# asd

Command:

  clear           clear
  config          config
  create          create
  crypto          Cryptographic commands
  debug-mode     Exit from the EXEC to debug mode
  delete          delete
  dir             display all commands.
  disable         disable
  download        download
  enable          enable
  local_enable    local_enable

```

Figure 2–5 Available Commands

The top-level commands consist of commands such as show or config. Most of these commands require one or more parameters to narrow the top-level command. This is equivalent to show what? or config what? Where the what? is the next parameter.

For example, entering the show command with no additional parameters, the CLI will then display all of the possible next parameters.

```

Command: show

  802.1p           802.1p
  802.1x           802.1x information
  access_profile   access_profile
  account          display user accounts.
  arpentry         Display the current contents of the Switch's ARP table.
  authen           authen
  authen_enable    display the method list of authentication methods for
                   promoting normal user level privileges to
                   administrator level privileges on the switch.
  authen_login     display a previously configured user defined method
                   list of authentication methods for users logging on to
                   the switch.
  command_history  display the command history.
  configuration    configuration
  cpu              cpu
  crypto           Cryptographic commands

```

Figure 2–6 Next possible completions: Show Command

In the above example, all of the possible next parameters for the show command are displayed. At the next command prompt in the example, the up arrow was used to re-enter the show command, followed by the account parameter. The CLI then displays the user accounts configured on the Switch.

COMMAND SYNTAX

The following symbols are used to describe how command entries are made and values and arguments are specified in this manual. The online help contained in the CLI and available through the console interface uses the same syntax.



NOTE: All commands are case-sensitive. Be sure to disable Caps Lock or any other unwanted function that changes text case.

<angle brackets>

Purpose	Encloses a variable or value that must be specified.
Syntax	create account [admin oper user] <username 15>
Description	In the above syntax example, supply a username in the <username> space. Do not type the angle brackets.
Example Command	create account admin newadmin1

[square brackets]

Purpose	Encloses a required value or set of required arguments. One value or argument can be specified.
Syntax	create account [admin oper user] <username 15>
Description	In the above syntax example, specify admin , oper or a user level account to be created. Do not type the square brackets.
Example Command	create account user newuser1

| vertical bar

Purpose	Separates two or more mutually exclusive items in a list, one of which must be entered.
Syntax	create account [admin oper user] <username 15>
Description	In the above syntax example, specify admin , oper , or user . Do not type the vertical bar.
Example Command	create account user newuser1

All commands are case-sensitive. Be sure to disable Caps Lock or any other unwanted function that changes text case.

{braces}

Purpose	Encloses an optional value or set of optional arguments.
Syntax	reset
Description	execute “reset” will return the switch to its factory default setting.
Example command	reset Please be aware that all configuration will be reset to default value. Are you sure you want to proceed with system reset now? (Y/N)[N] N

Line Editing Key Usage

Delete	Deletes the character under the cursor and then shifts the remaining characters in the line to the left.
Backspace	Deletes the character to the left of the cursor and then shifts the remaining characters in the line to the left.
Insert or Ctrl+R	Toggle on and off. When toggled on, inserts text and shifts previous text to the right.
Left Arrow	Moves the cursor to the left.
Right Arrow	Moves the cursor to the right.
Up Arrow	Repeats the previously entered command. Each time the up arrow is pressed, the command previous to that displayed appears. This way it is possible to review the command history for the current session. Use the down arrow to progress sequentially forward through the command history list.
Down Arrow	The down arrow displays the next command in the command history entered in the current session. This displays each command sequentially as it was entered. Use the up arrow to review previous commands.
Tab	Shifts the cursor to the next field to the left.

Multiple Page Display Control Keys

Space	Displays the next page.
CTRL+c	Stops the display of remaining pages when multiple pages are to be displayed.
ESC	Stops the display of remaining pages when multiple pages are to be displayed.
n	Displays the next page.
p	Displays the previous page.
q	Stops the display of remaining pages when multiple pages are to be displayed.
r	Refreshes the pages currently displayed.
a	Displays the remaining pages without pausing between pages.
Enter	Displays the next line or table entry.

BASIC SWITCH COMMANDS

The Basic Switch commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
create account	[admin oper user] <username 15>{password <password_string> {encrypted}}
config account	<username 15>
show account	
show session	
show system_defaults	
show switch	
show serial_port	
config serial_port	{baud_rate [2400 4800 9600 19200 38400] auto_logout [never 2_minutes 5_minutes 10_minutes 15_minutes]}
enable clipaging	
disable clipaging	
delete account	<username 15>
enable web	<tcp_port_number 1-65535>
disable web	
save	
reboot	<box_id 1-6>
reset	
login	
logout	
ping	<ipaddr> {times <value 1-255>} {timeout <sec 1-99>}
show configuration	[running {include <token> {include <token> <token>}} startup]
enable jumbo_frame	
disable jumbo_frame	
show jumbo_frame	
locate	
telnet	{ip-address hostname} [port]
enable telnet	

Command	Parameter
disable telnet	
enable dhcp_relay	
disable dhcp_relay	
config dhcp_relay add ipif	<ipaddr>
config dhcp_relay delete ipif	<ipaddr>
show dhcp_relay ipif	<ipaddr>
show tech-support	show tech_support [config memory]
show environment	
config time_range	<range_name 32> [hours start_time <time hh:mm> end_time <time hh:mm> weekdays <daylist> delete]
show time_range	
Config terminal log	[enable disable]
show cable status	<portlist>

Each command is listed in detail, as follows:

create account

Purpose	To create user accounts.
Syntax	create account [admin oper user] <username 15>{password <password_string> {encrypted}}
Description	The create account command creates an administrator, operator, or user account that consists of a username and an optional password. Up to 31 accounts can be created. You can enter username and Enter. In this case, the system prompts for the account's password, which may be between 0 and 15 characters. Alternatively, you can enter the username and password on the same line.
Parameters	<p><i>admin</i> – creates an administrator account.</p> <p><i>oper</i> – creates an operator account.</p> <p><i>user</i> – creates a user account with read-only permissions.</p> <p><i><username 1-15></i> – The account username may be between 1 and 15 characters.</p> <p><i>password <password_string> {encrypted}</i> - the account password can be included, and (optionally) can be encrypted.</p>
Restrictions	Only Administrator or Operator-level users can issue this command.

NOTE: You are not required to enter a User Name. However, if you do not enter a User Name, you cannot perform the following actions:

Create a monitor or operator (level 1 or level 14) users until an administrator user (level 15) is defined.

Delete the last administrator user if there are monitor and/or operator users defined.

Example usage:

To create an administrator-level user account with the username 'dlink':

```
DGS3100# create account admin dlink
Enter a case-sensitive password:****
Enter the password again for confirmation:****

Success.

DGS3100#
```

config account

Purpose	To change the password for an existing user account.
Syntax	config account <username 15>
Description	The config account command changes the password for a user account that has been created using the create account command. The system prompts for the account's new password, which may be between 0 and 15 characters.
Parameters	<username 1-15> – the account username.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the user password of 'dlink' account:

```
DGS3100# config account dlink
Enter a case-sensitive new password:****
Enter the new password again for confirmation:****

Success.

DGS3100#
```

show account

Purpose	To display information about all user accounts on the Switch.
Syntax	show account
Description	The show account command displays all account usernames and their access levels created on the Switch. Up to 31 user accounts can exist on the Switch at one time.
Parameters	None.
Restrictions	None.

Example usage:

To display user account information:

```
DGS3100# show account

Username      Access Level
-----  -----
```

Dlink admin	User Admin
Total Entries: 2	
DGS3100#	

show session

Purpose	To display information about currently logged-in users.
Syntax	show session
Description	The show session command displays a list of all the users that are logged-in at the time the command is issued. The information includes the session ID (0 for the first logged-in user, 1 for the next logged-in user, etc.), the Protocol used to connect to the Switch, the user's IP address, the user's access Level (1=user, 15=admin), and the account name on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the way users logged in:

DGS3100# show session

ID	Protocol	From	Level	Name
0	HTTP	10.6.10.43	15	admin
1	HTTP	10.6.10.43	15	admin
2	Telnet	10.6.60.13	15	admin

DGS3100#

show system defaults

Purpose	To display information about all system defaults on the Switch.
Syntax	show system defaults
Description	The show system defaults command displays system defaults.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To display system default information:

DGS-3100# show system defaults

System Mode: Switch

Maximum units in stack: 6

Management defaults

Telnet: Enabled

```

SSH: Enabled
HTTP: Enabled, port 80
HTTPS: Disabled
SNMP: Enabled.
  User: first
SNMP version: V3
SNMP Local Engine ID: 00001
SNMP Notifications: Enabled
SNMP Authentication Notifications: Enabled
AAA Telnet authentication login: Local user data base
AAA HTTP authentication login: Local data base
AAA HTTPS authentication login: Local data base
Logging: Enabled
Logging to console: Informational messages
Logging to internal buffer: Informational messages
Logging to file: Error messages
Logging to remote server: Informational messages
Maximum no. of syslog messages: 430

SNTP Port No.: 123
DGS-3100#

```

show switch

Purpose	To display information about the Switch.
Syntax	show switch
Description	The show switch command displays information about the Switch settings, including Device Type, MAC Address, IP configuration, Hardware/Software version, System information, and Switch Network configuration.
Parameters	None.
Restrictions	None.

Example usage:

To display the Switch information:

```

DGS-3100# show switch

Device Type      : DGS-3100-48 Gigabit stackable L2 Managed
Switch
MAC Address     : 00:11:03:09:18:46
IP Address      : 10.5.234.250
VLAN Name       : default
Subnet Mask     : 255.255.255.0
Default Gateway  : 10.5.234.254
Boot PROM Version : 1.0.1.04
Firmware Version  : 3.5P.A12
Hardware Version   : 01

```

```

Serial Number : F3DU28600001(unit 1)
  527(unit 2)
  F3E7187000073(unit 3)
  72678197819(unit 4)
  656(unit 5)
  548(unit 6)

System Name : DGS-3100
System Location :
System Contact :
System Up Time : 0 days 4 hours 49 mins 24 seconds
Spanning Tree : Disabled
GVRP : Disabled
IGMP Snooping : Disabled
TELNET : Enabled
WEB : Enabled (TCP 80)

DGS-3100#

```

show serial_port

Purpose	To display the current serial port settings.
Syntax	show serial_port
Description	The show serial_port command displays the current serial port settings.
Parameters	None.
Restrictions	None.

Example usage:

To display the serial port settings:

```

DGS3100# show serial_port

Baud Rate : 9600
Data Bits : 8
Parity Bits : None
Stop Bits : 1
Auto-Logout : 10 mins

DGS3100#

```

config serial_port

Purpose	To configure the serial port.
Syntax	config serial_port {baud_rate [2400 4800 9600 19200 38400] auto_logout [never 2_minutes 5_minutes 10_minutes 15_minutes]}
Description	The show serial_port command configures the serial port's baud

	rate and auto logout settings.
Parameters	<p><i>baud rate [2400 4800 9600 19200 38400]</i> – The serial bit rate used to communicate with the management host.</p> <p><i>auto_logout</i> - The amount of time the Switch's serial port can be idle before automatically logging out. The possible values are:</p> <ul style="list-style-type: none"> <i>never</i> – There is no time limit on the length of time the console can be open with no user input. <i>2_minutes</i> – The console logs out the current user if there is no user input for 2 minutes. <i>5_minutes</i> – The console logs out the current user if there is no user input for 5 minutes. <i>10_minutes</i> – The console logs out the current user if there is no user input for 10 minutes. <i>15_minutes</i> – The console logs out the current user if there is no user input for 15 minutes.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure the baud rate:

```
DGS3100# config serial_port baud_rate 9600
Success.
DGS3100#
```

enable clipaging

Purpose	To pause the scrolling of the console screen after each page when a show command displays more than one page.
Syntax	enable clipaging
Description	The enable clipaging command pauses the scrolling of the console screen at the end of each page when issuing a command which would display more than one screen of information. The default setting is enabled.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To enable pausing of the screen display when the show command output reaches the end of the page:

```
DGS3100# enable clipaging
Success.
DGS3100#
```

disable clipaging

Purpose	To disable the pausing of the console screen scrolling at the end of each page when the command displays more than one screen of information.
Syntax	disable clipaging
Description	The disable clipaging command disables the pausing of the console screen at the end of each page when issuing a command which would display more than one screen of information. This causes the console screen to rapidly scroll through several pages.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To disable pausing of the screen display when a command output reaches the end of the page:

```
DGS3100# disable clipaging
```

Success.

```
DGS3100#
```

delete account

Purpose	To delete an existing user account.
Syntax	delete account <username 15>
Description	The delete account command deletes a user account that has been created using the create account command.
Parameters	<username 1-15> – the account username.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete the user account 'System':

```
DGS3100# delete account System
```

Are you sure to delete the last administrator account?(y/n)

Success.

```
DGS3100#
```

enable web

Purpose	To enable the HTTP-based management software on the Switch.
Syntax	enable web <tcp_port_number 1-65535>
Description	The enable web command enables the Web-based management software on the Switch. The user can specify the TCP port number the Switch uses to listen for Telnet requests.

Parameters	<i><tcp_port_number 1-65535></i> – The TCP port number. TCP ports are numbered between 1 and 65535. The ‘well-known’ port for the Web-based management software is 80.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To enable HTTP and configure the TCP port number to listen for Telnet requests:

```
DGS3100# enable web 80
Success.

DGS3100#
```

disable web

Purpose	To disable the HTTP-based management software on the Switch.
Syntax	disable web
Description	The disable web command disables the Web-based management software on the Switch.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To disable HTTP-based management software on the Switch:

```
DGS3100# disable web
Success.

DGS3100#
```

save

Purpose	To save changes in the Switch’s configuration to non-volatile RAM.
Syntax	save
Description	The save command saves the current switch configuration to non-volatile RAM. The saved switch configuration is loaded to the Switch’s memory each time the Switch is restarted.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To save the Switch’s current configuration to non-volatile RAM:

DGS3100# save

```
overwrite file [startup-config] ?[Yes/press any key for
no]....01-Jan-2000 19:03
:59 %COPY-I-FILECPY: Files Copy - source URL
running-config destination URL flas
h://startup-config
01-Jan-2000 19:04:06 %COPY-N-TRAP: The copy
operation was completed successfully
```

Copy succeeded

Success.

DGS3100#

reboot

Purpose	To reboot the Switch. If the Switch is a member of a stack, it may be rebooted individually, without affecting the other members of the stack.
Syntax	reboot <box_id 1-6>
Description	The reboot command restarts the Switch.
Parameters	<box_id 1-6> – The unit's current stack membership number.
Restrictions	Only Administrator or operate-level users can issue this command.

Example usage:

To restart the Switch unit 1:

```
DGS3100# reboot 1
Are you sure you want to proceed with system reboot
now? (Y/N)[N] Y
This action may take a few minutes
DGS3100#
```

reset

Purpose	To reset the Switch to the factory default settings.
Syntax	reset
Description	The reset command restores the Switch's configuration to the default settings assigned from the factory. Execution of the reset command through the CLI retains the unit's current stack membership number.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To restore all of the Switch's parameters to their default values:

```
DGS3100# reset
Please be aware that all configuration will be reset to
default value.
Are you sure you want to proceed with system reset
now? (Y/N)[N] Y

Deleting auto update backup file...OK

Deleting auto update instruction file...OK

Deleting startup configuration file... Done.

Please make sure that your terminal is set to the default
baud rate - 9600 bps.

This action may take a few minutes

Success.
DGS3100#
```

login

Purpose	To log in a user to the Switch's console.
Syntax	login
Description	The login command initiates the login procedure. The user is prompted for the Username and Password.
Parameters	None.
Restrictions	None.

Example usage:

To initiate the login procedure:

```
DGS3100# login

UserName:
```

logout

Purpose	To log out a user from the Switch's console.
Syntax	Logout
Description	The logout command terminates the current user's session on the Switch's console.
Parameters	None.
Restrictions	None.

Example usage:

To terminate the current user's console session:

```
DGS3100# logout
```

ping

Purpose	To test the connectivity between network devices.
Syntax	ping <ipaddr> {times <value 1-255>} {timeout <sec 1-99>}
Description	The ping command sends Internet Control Message Protocol (ICMP) echo messages to a remote IP address. The remote IP address then ‘echos’ or returns the message. This is used to confirm connectivity between the Switch and the remote device.
Parameters	<p><ipaddr> - The IP address of the host.</p> <p><i>times <value 1-255></i> - The number of individual ICMP echo messages to be sent. The maximum value is 255. The default is 4.</p> <p><i>timeout <sec 1-99></i> - The time-out period while waiting for a response from the remote device. A value of 1 to 99 seconds can be specified. The default is 1 second.</p>
Restrictions	None.

Example usage:

To ping the IP address 10.6.150.34 three times:

```
DGS3100# ping 10.6.150.34 times 3
Pinging 10.6.150.34 with 56 bytes of data:

56 bytes from 10.6.150.34: icmp_seq=1. time=0 ms
56 bytes from 10.6.150.34: icmp_seq=2. time=0 ms
56 bytes from 10.6.150.34: icmp_seq=3. time=0 ms

---10.6.150.34 PING Statistics---
3 packets transmitted, 3 packets received, 0% packet loss
round-trip (ms) min/avg/max = 0/0/0

Success.
DGS3100#
```

show configuration

Purpose	To display the current or saved version of the configuration settings of the Switch.
Syntax	show configuration [running {include <token> {include <token> <token>}} startup]
Description	The show configuration command displays the current or saved version of the configuration settings of the Switch. This feature allows the user to filter the output of the full configuration of the device according to pre-defined keywords (in token parameter)
Parameters	<i>running</i> – Displays the current configuration.

startup – Displays the configuration saved in NV-RAM.
<token> - 802.1x, Radius, Authen, access_profile, arp, ipif, account, traffic_control, dhcp, fdb, igmp, mld, lacp, lldp, link_aggregation, mac_based_access_control, snmp, trusted_host, syslog, poe, mirror, 802.1p, port_security, bandwidth_control, scheduling, iproute, stp, ssh, ssl, crypto, ports, dst, sntp, time, traffic_segmentation, gvrp, vlan, safeguard, telnet, time_range, multicast_filtering_mode, vlan_trunk, asymmetric_vlan, dlf, arp_spoofing_prevention, dscp, voice_vlan, router, multicast_fdb, serial_port, login_banner, dhcp_auto, dhcp_relay, serial_port, terminal, time_zone,

Restrictions None.

Example usage:

To show current configuration information:

```
DGS3100# show configuration running

config snmp system_name DGS-3100
create vlan 2 tag 2
enable 802.1x
config 802.1x auth_protocol radius
config radius add 10.6.41.226 key 123456 auth_port 1812 acct_port 1813 priority first
config ports (1-2,4-7) enable_reauth enable
config ports 3 port_control auto enable_reauth enable
config 802.1x auth_mode ports (1-7) mac_based
config 802.1x guest_vlan 2 state enable
config 802.1x guest_vlan ports 3
config ipif system dhcp
DGS3100#
```

enable jumbo_frame

Purpose	To enable jumbo frames on the device.
Syntax	enable jumbo_frame
Description	The enable jumbo_frame command enables jumbo frames on the device.
Parameters	None.
Restrictions	Only Administrator or operate-level users can issue this command. Jumbo frames will be enabled after save and restart.

Example usage:

To enable jumbo frames:

```
DGS3100# enable jumbo_frame
Jumbo frames will be enabled after save and restart.

Success.
DGS3100#
```

disable jumbo_frame

Purpose	To disable jumbo frames on the device.
Syntax	disable jumbo_frame
Description	The disable jumbo_frame command disables jumbo frames on the device.
Parameters	None.
Restrictions	Only Administrator or operate-level users can issue this command. Jumbo frames will be disabled after save and restart.

Example usage:

To disable jumbo_frames:

```
DGS3100# disable jumbo_frame
Jumbo frames will be disabled after save and restart.

Success.
DGS3100#
```

show jumbo_frame

Purpose	To display the jumbo frame configuration.
Syntax	show jumbo_frame
Description	The show jumbo_frame command displays the jumbo frame configuration.
Parameters	None.
Restrictions	None.

Example usage:

To show the jumbo_frames configuration status on the device:

```
DGS3100# show jumbo_frame

Jumbo frames are disabled.

DGS3100#
```

locate

Purpose	To enable the user to locate the device he is working on.
Syntax	locate
Description	The locate command causes the seven segment display of the currently active switch with Master ID to blink the letter L for 20 seconds.

Parameters	None.
Restrictions	Only Administrator or operate-level users can issue this command

Example usage:

To display the currently active switch:

```
DGS3100# locate
Success.
DGS3100#
```

telnet

Purpose	To log in to a host that supports Telnet
Syntax	telnet {ip-address hostname} [port]
Description	
Parameters	<p>ip-address – IP address of the destination host. An out-of-band IP address can be specified as described in the usage guidelines.</p> <p>hostname – Hostname of the destination host.</p> <p>port – A decimal TCP port number, or one of the keywords from the ports table in the usage guidelines. The default is the Telnet port (decimal 23) on the host.</p>
Restrictions	Only Administrator or operate-level users can issue this command

Example usage:

To display the Environment options:

```
DGS3100# telnet 192.168.1.100
```

enable telnet

Purpose	To enable the telnet.
Syntax	enable telnet
Description	The enable telnet command enables telnet.
Parameters	None.
Restrictions	Only Administrator or operate-level users can issue this command

Example usage:

To enable telnet:

```
DGS3100# enable telnet
Success.
DGS3100#
```

disable telnet

Purpose	To disable telnet.
Syntax	disable telnet
Description	The disable telnet command disables telnet.
Parameters	None.
Restrictions	Only Administrator or operate-level users can issue this command

Example usage:

To disable telnet:

```
DGS3100# disable telnet
```

Success.

```
DGS3100#
```

enable dhcp_relay

Purpose	To enable DHCP Relay server on the Switch
Syntax	enable dhcp_relay
Description	The enable dhcp_relay command sets the DHCP Relay to be globally enabled on the Switch and on all existing VLANs.
Parameters	None.
Restrictions	Only Administrator or operate-level users can issue this command.

Example usage:

To enable DCHP Relay on the Switch:

```
DGS-3100# enable dhcp_relay
```

Success.

```
DGS-3100# #
```

disable dhcp_relay

Purpose	To disable DHCP Relay server on the Switch
Syntax	disable dhcp_relay
Description	The disable dhcp_relay command sets the DHCP Relay to be globally disabled on the Switch and on all existing VLANs.
Parameters	None.
Restrictions	Only Administrator or operate-level users can issue this command.

Example usage:

To disable DHCP Relay on the Switch:

```
DGS-3100# disable dhcp_relay
```

Success.
DGS-3100#

config dhcp_relay add ipif

Purpose	To define a DHCP server as a DHCP Relay server
Syntax	config dhcp_relay add ipif <ipaddr>
Description	The config dhcp_relay add ipif command adds DHCP servers as DHCP Relay servers.
Parameters	<ipaddr> – The IP address of the DHCP server. Up to 4 servers can be defined.
Restrictions	Only Administrator or operate-level users can issue this command.

Example usage:

To add a DHCP server as a DHCP Relay server:

DGS-3100# config dhcp_relay add ipif 10.6.150.49

Success.
DGS-3100#

config dhcp_relay delete ipif

Purpose	To delete a DHCP server from the DHCP Relay server list.
Syntax	config dhcp_relay delete ipif <ipaddr>
Description	The config dhcp_relay delete ipif command deletes a DHCP servers defined as a DHCP Relay server.
Parameters	<ipaddr> – The IP address of the DHCP server.
Restrictions	Only Administrator or operate-level users can issue this command.

Example usage:

To remove a DHCP server from the DHCP Relay server list:

DGS-3100# config dhcp_relay delete ipif 10.6.150.49

Success.
DGS-3100#

show dhcp_relay ipif

Purpose	To display the DHCP Relay settings on the Switch.
Syntax	show dhcp_relay ipif
Description	The show dhcp_relay ipif command displays the DHCP Relay

	status and list of servers defined as DHCP Relay servers on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display DHCP Relay settings:

```
DGS-3100#show dhcp_relay ipif

DHCP Relay Status : Enabled

Server IP
-----
10.6.150.49

DGS-3100#
```

show tech_support

Purpose	To display system and configuration information. to provide to the Technical Assistance Center when reporting a problem, use the show tech-support command.
Syntax	show tech_support [config memory]
Description	The show tech_support command displays system and configuration information. to provide to the Technical Assistance Center when reporting a problem. By default, this command displays the output for technical-support-related show commands. Use keywords to specify the type of information to be displayed. If you do not specify any parameters, the system displays all configuration and memory data. The show tech_support command may time out if the configuration file output takes longer to display than the configured session timeout time. If this happens, enter a set logout <i>timeout</i> value of 0 to disable automatic disconnection of idle sessions or enter a longer <i>timeout</i> value. The show tech_support command output is continuous; it does not display one screen at a time. To interrupt the output, press Esc.
Parameters	[memory] — Displays memory and processor state data. [config] — Displays the switch configuration within the CLI commands supported on the device.
Restrictions	Only Administrator-level users can issue this command..

Example usage:

To display the config options:

```
DGS-3100#show tech_support [config]

show clock
show system
show version
show system mode
```

```
show ip interface
show ipv6 interface
show stack
show running-config
show interfaces configuration
show interfaces status
show interfaces port-channel
show vlan
show interfaces switchport
show spanning tree
show bridge multicast address-table
show ip igmp snooping groups
show ipv6 mld snooping groups
show dot1x
show dot1x users
show lldp configuration
show lldp neighbors
show interfaces counters
show users
show sessions
show logging file
show logging

DGS-3100#
```

Example usage:

To display the memory options:

```
DGS-3100#show tech_support [memory]

flash info (dir if existed, or flash mapping)
show bootvar
buffers info (like print os buff)
memory info (like print os mem)
proc info (lie print os tasks)
show cpu utilization

DGS-3100#
```

For the purposes of these examples and to save space, only the categories are displayed

show environment

Purpose	To display the information regarding the system environment on each unit.
Syntax	show environment
Description	The show environment command displays the side fan status as well as the temperature for each unit in the stack and the warning temperature of each unit, which means the maximum allowed

Parameters	None.
Restrictions	None.

Example usage:

To display the Environment options:

```
DGS-3100# show environment

Unit Side Fan Temperature Warning
(Celsius) Temperature
---- -----
1 OK NA NA
3 OK 32 63
4 OK 34 79
5 OK NA NA

DGS-3100#
```

config time_range

Purpose	To configure the time range on the Switch..
Syntax	config time_range <range_name 32> [hours start_time <time hh:mm> end_time <time hh:mm> weekdays <daylist> delete]
Description	The config time_range command defines time ranges for access lists. If the end time is earlier than the start time, the end time will move to the following day
Parameters	<p><i>range-name</i> – Specifies the time range name. The range of characters is 1 - 32.</p> <p><i>start_time <time hh:mm></i> – defines the time on which the time range will start to be active.</p> <p><i>end_time <time hh:mm></i> – defines the time on which the time range will stop to be active.</p> <p><i>weekdays <daylist></i> – defines the days of the week on which the time range will be active.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure the time range on the Switch:

```
DGS-3100# DGS-3100# config time_range xxx hours start_time
10:00 end_time 11:00 weekdays wed sun

Success.

DGS3100#
```

show time_range

Purpose	To display the currently configured access profiles on the Switch.
---------	--

Syntax	show time_range
Description	The show time_range command displays the time range configuration.
Parameters	None.
Restrictions	None.

Example usage:

To display time range settings on the Switch:

```
DGS3100# show time_range

Range name : xxx
Start time : 10:00
End time : 11:00
Days : wed sun

Total Entries : 1

DGS3100#
```

config terminal log

Purpose	To suppress logging messages on Telnet, Console and SSH sessions
Syntax	config terminal log state [enable disable]
Description	When disabled only Fatal messages will be shown on the different sessions screens
Parameters	<i>state [enable disable]</i> – feature is globally enabled or disabled (enabled by default)
Restrictions	None.

Example usage:

To display the Environment options:

```
DGS-3100# Config terminal log state disable

Success.

DGS3100#
```

show cable status

Purpose	To show the cable status and length attached to a port
Syntax	show cable status ports<portlist>
Description	Use the show cable status command to display the estimated copper cable length attached to a port
Parameters	<i><portlist></i> – A port or range of ports to be tested.
Restrictions	None.

Example usage:

To display the Environment options:

```
DGS-3100# sh cable_status ports 1:1-2
Port Length [meters]
-----
1:1 Giga link not active
1:2 Giga link not active
.
Cable on port 1:1 has short circuit at 1 m
.
Cable on port 1:2 is not connected
```

SWITCH PORT COMMANDS

The **Switch Port commands in the Command Line Interface (CLI)** are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config ports	[all <portlist> <ch1-32>] {speed [auto 10_half 10_full 100_half 100_full 1000_full] flow_control [enable disable auto] learning [enable disable] state [enable disable]}
show ports	{<portlist>}
config ports description	<portlist> <string 1-64>
delete ports description	<portlist>
show ports description	{<portlist>}

Each command is listed in detail, as follows:

config ports

Purpose	To configure the Switch's Ethernet port settings.
Syntax	config ports [all <portlist> <ch1-32>] {speed [auto 10_half 10_full 100_half 100_full 1000_full] flow_control [enable disable auto] learning [enable disable] state [enable disable]}
Description	The config ports command configures the Switch's Ethernet port settings. Only the ports listed in the <portlist> are affected.
Parameters	<p><portlist> – A port or range of ports to be configured.</p> <p><i>all</i> – Configures all ports on the Switch.</p> <p><i><ch1-32></i> – A LAG or range of LAGs to be configured.</p> <p><i>speed</i> – Sets the speed of a port or range of ports, with the addition of one of the following:</p> <ul style="list-style-type: none"> • <i>auto</i> – Enables auto-negotiation for the specified range of ports. • <i>[10 100 1000]</i> – Configures the speed in Mbps for the specified range of ports. • <i>[half full]</i> – Configures the specified range of ports as either full or half-duplex. <p><i>flow_control [enable]</i> – Enables flow control for the specified ports.</p> <p><i>flow_control [disable]</i> – Disables flow control for the specified ports.</p> <p><i>flow_control [auto]</i> – Specifies auto-negotiation of flow control for the specified ports.</p> <p><i>learning [enable disable]</i> – Enables or disables the MAC address learning on the specified range of ports.</p> <p><i>state [enable disable]</i> – Enables or disables the specified range of ports.</p>

Restrictions

Only administrator or operate-level users can issue this command.

Example usage:

To configure the speed of ports 1-3 to be 10 Mbps, full duplex, learning and state enabled:

```
DGS3100# config ports 1-3 speed 10_full learning enable state enable
```

```
Success.
```

```
DGS3100#
```

show ports

Purpose	To display the current configuration of a range of ports.
Syntax	show ports {<portlist>}
Description	The show ports command displays the current configuration of a port or range of ports.
Parameters	<portlist> - A port or range of ports whose settings are to be displayed.
Restrictions	None.

Example usage:

To display the configuration of all ports on the Switch:

```
DGS3100# show ports
```

Port	Port State	Settings Speed/Duplex/FlowCtrl	Connection Speed/Duplex/FlowCtrl	Address Learning
1:1	Enabled	Auto/Disabled	Link Down	Enabled
1:2	Enabled	Auto/Disabled	Link Down	Enabled
1:3	Enabled	Auto/Disabled	100M/Full/Disabled	Enabled
1:4	Enabled	Auto/Disabled	100M/Full/Disabled	Enabled
1:5	Enabled	Auto/Disabled	Link Down	Enabled
1:6	Enabled	Auto/Disabled	Link Down	Enabled
1:7	Enabled	Auto/Disabled	Link Down	Enabled
1:8	Enabled	Auto/Disabled	Link Down	Enabled
1:9	Enabled	Auto/Disabled	Link Down	Enabled
1:10	Enabled	Auto/Disabled	Link Down	Enabled
1:11	Enabled	Auto/Disabled	Link Down	Enabled
1:12	Enabled	Auto/Disabled	Link Down	Enabled
1:13	Enabled	Auto/Disabled	Link Down	Enabled
1:14	Enabled	Auto/Disabled	Link Down	Enabled
1:15	Enabled	Auto/Disabled	Link Down	Enabled
1:16	Enabled	Auto/Disabled	Link Down	Enabled
1:17	Enabled	Auto/Disabled	Link Down	Enabled
1:18	Enabled	Auto/Disabled	Link Down	Enabled
1:19	Enabled	Auto/Disabled	Link Down	Enabled

```
DGS3100#
```

config ports description

Purpose	To add a description to an interface or ranges of interface.
Syntax	config ports description <portlist> <string 1-64>
Description	The config ports description command adds a description to an interface or a range of interfaces.
Parameters	<portlist> – A port or range of ports to add a description to. <string 1-64> – Description content.
Restrictions	None.

Example usage:

To add a description to port 1:

```
DGS3100# config ports description 1:1 "For testing purposes only"
Success.
DGS3100#
```

delete ports description

Purpose	To delete a description of an interface or a range of interfaces.
Syntax	delete ports description <portlist>
Description	The delete ports description command deletes a description of an interface or a range of interfaces.
Parameters	<portlist> – A port or range of ports to delete descriptions from.
Restrictions	None.

Example usage:

To delete the description of port 1:

```
DGS3100# delete ports description 1:1
Success.
DGS3100#
```

show ports description

Purpose	To display a description of an interface or a range of interfaces.
Syntax	show ports description {<portlist>}
Description	The show ports description command displays a description of an interface or a range of interfaces.
Parameters	<portlist> – A port or range of ports whose descriptions are to be

	displayed.
Restrictions	None.

Example usage:

To display the description of port 1:

```
DGS3100# show ports description 1:1
```

Port	Description
-----	-----
1:1	For testing purposes only
DGS3100#	

NETWORK MANAGEMENT (SNMP) COMMANDS

The Network Management commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
create snmp user	<username 24> <groupname 30> [encrypted [by_password auth [md5 <auth_password 1-32> sha <auth_password 1-32>] by_key auth [md5 <auth_key 32 or 64>] sha<auth_key 40 or 72>]]]
delete snmp user	<username 24>
show snmp user	
create snmp view	<view_name 30> <oid> view_type [included excluded]
delete snmp view	<view_name 30> [all oid]
show snmp view	{<view_name 30>}
create snmp community	<community_string 20> view <view_name 30> [read_only read_write]
delete snmp community	<community_string 20>
show snmp community	{<community_string 20>}
config snmp enginID	[default <snmp_enginID 10-64>]
show snmp enginID	
create snmp group	<groupname 30> [v1 v2c v3 [noauth_nopriv auth_nopriv auth_priv]{notify_view <view_name 30>}] {read_view <view_name 30> write_view <view_name 30>}
delete snmp group	<groupname 30>
show snmp groups	
create snmp host	<ipaddr> [v1<community_string 20> v2c<community_string 20> v3 [noauth_nopriv auth_nopriv auth_priv]<auth_string 24>]
delete snmp host	<ipaddr>
show snmp host	{<ipaddr>}
create trusted_host	<ipaddr>{network <network_address>} {application [telnet ssh snmp http https ping all]}
show trusted_host	{<ipaddr>}
delete trusted_host	<ipaddr>
enable snmp traps	
disable snmp traps	
enable snmp authenticate trap	

Command	Parameter
disable snmp authenticate trap	
show snmp traps	
config snmp system_contact	<sw_contact 0-31>
config snmp system_location	<sw_location 0-31>
config snmp system_name	<sw_name 0-31>
enable snmp	
disable snmp	

Each command is listed in detail, as follows:

create snmp user

Purpose	To create a new SNMP user and add the user to an SNMP group.
Syntax	create snmp user <username 24> <groupname 30> [encrypted [by_password auth [md5 <auth_password 1-32> sha <auth_password 1-32>] by_key auth [md5 <auth_key 32 or 64> sha<auth_key 40 or 72>]]]
Description	The create snmp user command creates a new SNMP user and adds the user to an existing SNMP group.
Parameters	<p><username 24> – The new SNMP username, up to 24 alphanumeric characters.</p> <p><groupname 30> – The SNMP groupname the new SNMP user is associated with, up to 30 alphanumeric characters.</p> <p>encrypted – Allows the user to choose a type of authorization for authentication using SNMP. The user may choose:</p> <ul style="list-style-type: none"> • by_password – Requires the SNMP user to enter a password for authentication and privacy. The password is defined by specifying the auth_password below. This method is recommended. • by_key – Requires the SNMP user to enter an encryption key for authentication and privacy. The key is defined by specifying the key in hex form below. This method is not recommended. <p>auth - The user may also choose the type of authentication algorithms used to authenticate the snmp user. The choices are:</p> <ul style="list-style-type: none"> • md5 – Specifies that the HMAC-MD5-96 authentication level to be used. md5 may be utilized by entering one of the following: • <auth_password 1-32> - A string of between 1 and 32 alphanumeric characters used to authorize the agent to receive packets for the host. • <auth_key 32 or 64> - A string of exactly 32 or 64 alphanumeric characters, in hex form, to define the key used

	<ul style="list-style-type: none"> • to authorize the agent to receive packets for the host. • <i>sha</i> – Specifies that the HMAC-SHA-96 authentication level will be used. • <i><auth password 1-32></i> - A string of between 1 and 32 alphanumeric characters used to authorize the agent to receive packets for the host. • <i><auth_key 40 or 72></i> - A string of exactly 40 or 72 alphanumeric characters, in hex form, to define the key used to authorize the agent to receive packets for the host.
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To create an SNMP user on the Switch:

```
DGS3100# create snmp user dlink default encrypted by_password
auth md5 auth_password priv none

Success.

DGS3100#
```

delete snmp user

Purpose	To remove an SNMP user from an SNMP group and also to delete the associated SNMP group.
Syntax	delete snmp user <username 24>
Description	The delete snmp user command removes an SNMP user from its SNMP group and then deletes the associated SNMP group.
Parameters	<i><username 24></i> – A string of up to 24 alphanumeric characters that identifies the SNMP user to be deleted.
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To delete a previously created SNMP user on the Switch:

```
DGS3100# delete snmp user dlink

Success.

DGS3100#
```

show snmp user

Purpose	To display information about each SNMP username in the SNMP group username table.
Syntax	show snmp user
Description	The show snmp user command displays information about each SNMP username in the SNMP group username table.
Parameters	None.

Restrictions	Only Administrator or operator-level users can issue this command.
--------------	--

Example usage:

To display the SNMP users currently configured on the Switch:

```
DGS3100# show snmp user

Username Group Name SNMP Version Auth-Protocol
-----
Initial    initial      V3        None

Total Entries: 1

DGS3100#
```

create snmp view

Purpose	To assign views to community strings to limit which MIB objects an SNMP manager can access.
Syntax	create snmp view <view_name 30> <oid> view_type [included excluded]
Description	The create snmp view command assigns views to community strings to limit which MIB objects an SNMP manager can access.
Parameters	<p><<i>view_name 30</i>> – A string of up to 30 alphanumeric characters that identifies the SNMP view to be created.</p> <p><<i>oid</i>> – The object ID that identifies an object tree (MIB tree) to be included or excluded from access by an SNMP manager.</p> <p><i>included</i> – Includes this object in the list of objects that an SNMP manager can access.</p> <p><i>excluded</i> – Excludes this object from the list of objects that an SNMP manager can access.</p>
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To create an SNMP view:

```
DGS3100# create snmp view dlinkview 1.3.6 view_type included

Success.

DGS3100#
```

delete snmp view

Purpose	To remove an SNMP view entry previously created on the Switch.
Syntax	delete snmp view <view_name 30> [all oid]
Description	The delete snmp view command removes an SNMP view

	previously created on the Switch.
Parameters	<p><view_name 30> – A string of up to 30 alphanumeric characters that identifies the SNMP view to be deleted.</p> <p><i>all</i> – Specifies that all of the SNMP views on the Switch will be deleted.</p> <p><oid> – The object ID that identifies an object tree (MIB tree) that is deleted from the Switch.</p>
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To delete a previously configured SNMP view from the Switch:

```
DGS3100# delete snmp view dlinkview all

Success.

DGS3100#
```

show snmp view

Purpose	To display an SNMP view previously created on the Switch.
Syntax	show snmp view {<view_name 30>}
Description	The show snmp view command displays an SNMP view previously created on the Switch.
Parameters	<view_name 30> – A string of up to 30 alphanumeric characters that identifies the SNMP view to be displayed.
Restrictions	None.

Example usage:

To display SNMP view configuration:

View Name	Subtree	View Type
Default	iso	included
Default	snmpNotificationMIB	excluded
Default	snmpVacmMIB	excluded
Default	snmpCommunityMIB	excluded
Default	snmpTargetAddrTable	excluded
Default	snmpTargetParamsTable	excluded
Default	usmUser	excluded
Default	rndCommunityTable	excluded
DefaultSuper	iso	included

Total Entries: 9

DGS3100#

create snmp community

Purpose	To create an SNMP community string to define the relationship between the SNMP manager and an SNMP agent.
Syntax	create snmp community <community_string 20> view <view_name 30> [read_only read_write]
Description	<p>The create snmp community command creates an SNMP community string and assigns access-limiting characteristics to this community string. The community string acts like a password to permit access to the agent on the Switch. One or more of the following characteristics can be associated with the community string:</p> <ul style="list-style-type: none"> An Access List of IP addresses of SNMP managers that are permitted to use the community string to gain access to the Switch's SNMP agent. An MIB view that defines the subset of all MIB objects to be accessible to the SNMP community. Read/write or read-only level permission for the MIB objects accessible to the SNMP community.
Parameters	<ul style="list-style-type: none"> <i><community_string 20></i> – A string of up to 20 alphanumeric characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch's SNMP agent. <i><view_name 30></i> – A string of up to 30 alphanumeric characters that is used to identify the group of MIB objects that a remote SNMP manager is allowed to access on the Switch. <i>read_only</i> – Specifies that SNMP community members using the community string created with this command can only read the contents of the MIBs on the Switch. <i>read_write</i> – Specifies that SNMP community members using the community string created with this command can read from and write to the contents of the MIBs on the Switch.
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To create the SNMP community string ‘dlink:’

```
DGS3100# create snmp community dlink view ReadView read_write
```

```
Success.
```

```
DGS3100#
```

delete snmp community

Purpose	To remove a specific SNMP community string from the Switch.
Syntax	delete snmp community <community_string 20>
Description	The delete snmp community command removes a previously defined SNMP community string from the Switch.
Parameters	<i><community_string 20></i> – A string of up to 20 alphanumeric

	characters that is used to identify members of an SNMP community to delete. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch's SNMP agent.
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To delete the SNMP community string ‘dlink’:

```
DGS3100# delete snmp community dlink
Success.
DGS3100#
```

show snmp community

Purpose	To display SNMP community strings configured on the Switch.
Syntax	show snmp community {<community_string 20>}
Description	The show snmp community command displays SNMP community strings that are configured on the Switch.
Parameters	<i><community_string 20></i> – A string of up to 20 alphanumeric characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch's SNMP agent.
Restrictions	None.

Example usage:

To display the currently entered SNMP community strings:

```
DGS3100# show snmp community

SNMP Community Table

Community Name      View Name      Access Right
-----              -----
dlink               ReadView       read write
private             CommunityView  read write
public              CommunityView  read only

Total Entries: 3

DGS3100#
```

config snmp enginID

Purpose	To configure a name for the SNMP engine on the Switch.
Syntax	config snmp enginID [default <snmp_enginID 10-64>]
Description	The config snmp enginID command configures a name for the

	SNMP engine on the Switch.
Parameters	<p><i>default</i> – defines the automatically created engineID based on the device mac.</p> <p><i><snmp_engineID 10-64></i> – A string, of between 10 and 64 alphanumeric characters, to be used to identify the SNMP engine on the Switch.</p>
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To give the SNMP agent on the Switch the name ‘2’

```
DGS3100# config snmp engineid 2
SNMP user will be deleted !
Are you sure? (Y/N)[N] Y

Success.

DGS3100#
```

show snmp enginID

Purpose	To display the identification of the SNMP engine on the Switch.
Syntax	show snmp enginID
Description	The show snmp enginID command displays the identification of the SNMP engine on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the current name of the SNMP engine on the Switch:

```
DGS3100# show snmp engineid

SNMP Engine ID : 0000000002

DGS3100#
```

create snmp group

Purpose	To create a new SNMP group, or a table that maps SNMP users to SNMP views.
Syntax	create snmp group <groupname 30> [v1 v2c v3 [noauth_nopriv auth_nopriv auth_priv]{notify_view <view_name 30>}] {read_view <view_name 30> write_view <view_name 30>}
Description	The create snmp group command creates a new SNMP group, or a table that maps SNMP users to SNMP views.

Parameters	<p><i><groupname 30></i> – A name of up to 30 alphanumeric characters that identifies the SNMP group the new SNMP user is to be associated with.</p> <p><i>v1</i> – Specifies that SNMP version 1 is to be used. The Simple Network Management Protocol (SNMP), version 1, is a network management protocol that provides a means to monitor and control network devices.</p> <p><i>v2c</i> – Specifies that SNMP version 2c is to be used. The SNMP v2c supports both centralized and distributed network management strategies. It includes improvements in the Structure of Management Information (SMI) and adds some security features.</p> <p><i>v3</i> – Specifies that the SNMP version 3 is to be used. SNMP v3 provides secure access to devices through a combination of authentication and encrypting packets over the network. SNMP v3 adds:</p> <ul style="list-style-type: none"> • Message integrity – Ensures that packets have not been tampered with during transit. • Authentication – Determines if an SNMP message is from a valid source. • Encryption – Scrambles the contents of messages to prevent it from being viewed by an unauthorized source. <p><i>noauth_nopriv</i> – Specifies that there is no authorization and no encryption of packets sent between the Switch and a remote SNMP manager.</p> <p><i>auth_nopriv</i> – Specifies that authorization is required, but there is no encryption of packets sent between the Switch and a remote SNMP manager.</p> <p><i>auth_priv</i> – Specifies that authorization is required, and that packets sent between the Switch and a remote SNMP manager are encrypted.</p> <p><i>read_view</i> – Specifies that the SNMP group being created can request SNMP messages.</p> <ul style="list-style-type: none"> • <i><view_name 30></i> – A string of up to 30 alphanumeric characters that identifies the group of MIB objects that a remote SNMP manager is allowed to access on the Switch. <p><i>write_view</i> – Specifies that the SNMP group being created has write privileges.</p> <ul style="list-style-type: none"> • <i><view_name 30></i> – A string of up to 30 alphanumeric characters that identifies the group of MIB objects that a remote SNMP manager is allowed to access on the Switch. <p><i>notify_view</i> – Specifies that the SNMP group being created can receive SNMP trap messages generated by the Switch's SNMP agent.</p> <ul style="list-style-type: none"> • <i><view_name 30></i> – A string of up to 30 alphanumeric characters that identifies the group of MIB objects that a remote SNMP manager is allowed to access on the Switch.
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To create an SNMP group named ‘sg1’:

```
DGS3100# create snmp group sg1 v3 noauth_nopriv read_view v1
write_view v1 notify_view v1
```

Success.

DGS3100#

delete snmp group

Purpose	To remove an SNMP group from the Switch.
Syntax	delete snmp group <groupname 30>
Description	The delete snmp group command removes an SNMP group from the Switch.
Parameters	<groupname 30> – A string of that identifies the SNMP group the new SNMP user will be associated with. Up to 30 alphanumeric characters.
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To delete the SNMP group named ‘sg1’.

DGS3100# delete snmp group sg1

Success.

DGS3100#

show snmp groups

Purpose	To display the group-names of SNMP groups currently configured on the Switch. The security model, level, and status of each group are also displayed.
Syntax	show snmp groups
Description	The show snmp groups command displays the group-names of SNMP groups currently configured on the Switch. The security model, level, and status of each group are also displayed.
Parameters	None.
Restrictions	None.

Example usage:

To display the currently configured SNMP groups on the Switch:

DGS3100# show snmp groups Vacm Access Table Settings						
Group Name	Model	Level	ReadView	WriteView	NotifyView	
g1	V3	NoAuthNoPriv	v1	v1	v1	
g2	V3	authNoPriv	v1	v1	v1	
g3	V3	authPriv	v1	v1	v1	
DGS3100#						

create snmp host

Purpose	To create a recipient of SNMP traps generated by the Switch's SNMP agent.
Syntax	create snmp host <ipaddr> [v1<community_string 20> v2c<community_string 20> v3 [noauth_nopriv auth_nopriv auth_priv]<auth_string 24>]
Description	The create snmp host command creates a recipient of SNMP traps generated by the Switch's SNMP agent.
Parameters	<p><<i>ipaddr</i>> – The IP address of the remote management station to serve as the SNMP host for the Switch.</p> <p>v1 – Specifies that SNMP version 1 is to be used. The Simple Network Management Protocol (SNMP), version 1, is a network management protocol that provides a means to monitor and control network devices.</p> <p>v2c – Specifies that SNMP version 2c is to be used. The SNMP v2c supports both centralized and distributed network management strategies. It includes improvements in the Structure of Management Information (SMI) and adds some security features.</p> <p>v3 – Specifies that the SNMP version 3 is to be used. SNMP v3 provides secure access to devices through a combination of authentication and encrypting packets over the network. SNMP v3 adds:</p> <ul style="list-style-type: none"> • Message integrity – ensures that packets have not been tampered with during transit. • Authentication – determines if an SNMP message is from a valid source. • Encryption – scrambles the contents of messages to prevent it being viewed by an unauthorized source. <p><<i>community_string 20</i>> – A string of up to 20 alphanumeric characters that identifies members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch's SNMP agent.</p> <p><i>noauth_nopriv</i> – Specifies that there is no authorization and no encryption of packets sent between the Switch and a remote SNMP manager.</p> <p><i>auth_nopriv</i> – Specifies that authorization is required, but there is no encryption of packets sent between the Switch and a remote SNMP</p>

	manager.
	<i>auth_priv</i> – Specifies that authorization is required, and that packets sent between the Switch and a remote SNMP manager are encrypted.
	<i><auth_string 24></i> – A string of up to 24 alphanumeric characters used in SNMP v3 to authorize a remote SNMP manager to access the Switch's SNMP agent.
Restrictions	Only Administrator and oper-level users can issue this command

Example usage:

To create an SNMP host to receive SNMP messages:

```
DGS3100# create snmp host 10.48.74.100 v3 auth_priv public
Success.
DGS3100#
```

delete snmp host

Purpose	To remove a recipient of SNMP traps generated by the Switch's SNMP agent.
Syntax	delete snmp host <ipaddr>
Description	The delete snmp host command deletes a recipient of SNMP traps generated by the Switch's SNMP agent.
Parameters	<i><ipaddr></i> – The IP address of a remote SNMP manager that receives SNMP traps generated by the Switch's SNMP agent.
Restrictions	Only Administrator or operator-level users can issue this command

Example usage:

To delete an SNMP host entry:

```
DGS3100# delete snmp host 10.48.74.100
Success.
DGS3100#
```

show snmp host

Purpose	To display the recipient of SNMP traps generated by the Switch's SNMP agent.
Syntax	show snmp host {<ipaddr>}
Description	The show snmp host command is used to display the IP addresses and configuration information of remote SNMP managers that are designated as recipients of SNMP traps generated by the Switch's SNMP agent.
Parameters	<i><ipaddr></i> – The IP address of a remote SNMP manager that receives SNMP traps generated by the Switch's SNMP agent.

Restrictions	None.
--------------	-------

Example usage:

To display the currently configured SNMP hosts on the Switch:

```
DGS3100# show snmp host

SNMP Host Table
Host IP Address  SNMP Version  Community Name / SNMPv3 User Name
-----
10.48.76.23      V2c          private
10.48.74.100     V3           public

Total Entries: 2

DGS3100#
```

create trusted_host

Purpose	To create a trusted host.
Syntax	create trusted_host <ipaddr>{network <network_address>} {application [telnet ssh snmp http https ping all]}
Description	The create trusted_host command creates a trusted host. The Switch allows specifying up to 30 IP addresses that are allowed to manage the Switch via in-band based management software. These IP addresses must be members of the Management VLAN. If no IP addresses are specified, then there is nothing to prevent any IP address from accessing the Switch, provided the user knows the Username and Password.
Parameters	<p><ipaddr> – The IP address of the trusted host to be created.</p> <p><network_address> – The subnet mask of the trusted host to be created. This parameter is optional. If not specified, the default subnet mask is 255.255.255.0.</p> <p><i>application</i> – The application(s) that will be enabled access to the device for management functions.</p>
Restrictions	Only administrator or operator level users can issue this command.

Example usage:

To create the trusted host:

```
DGS3100# create trusted_host 10.6.150.49 255.255.255.0
telnet

Success.

DGS-3100#
```

show trusted_host

Purpose	To display a list of trusted hosts entered on the Switch using the create trusted_host command above.
Syntax	show trusted_host {<ipaddr>}
Description	The show trusted_host command displays a list of trusted hosts entered on the Switch using the create trusted_host command above.
Parameters	<ipaddr> – The IP address of the trusted host.
Restrictions	None.

Example usage:

To display the list of trusted hosts:

```
DGS-3100# show trusted_host

Management Stations
IP Address      Subnet Mask      Application
-----          -----
10.6.150.49    255.255.255.0   Telnet

Total Entries: 1

DGS-3100#
```

delete trusted_host

Purpose	To delete a trusted host entry made using the create trusted_host command above.
Syntax	delete trusted_host <ipaddr>
Description	The delete trusted_host command deletes a trusted host entry made using the create trusted_host command above.
Parameters	<ipaddr> – The IP address of the trusted host.
Restrictions	Only administrator or operator level users can issue this command.

Example usage:

To delete a trusted host with an IP address **10.6.150.49**:

```
DGS-3100# delete trusted_host 10.6.150.49

Success.

DGS-3100#
```

enable snmp traps

Purpose	To enable SNMP trap support.
Syntax	enable snmp traps

Description	The enable snmp traps command enables SNMP trap support on the Switch.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command

Example usage:

To enable SNMP trap support on the Switch:

```
DGS3100# enable snmp traps

Success.
DGS3100#
```

disable snmp traps

Purpose	To disable SNMP trap support on the Switch.
Syntax	disable snmp traps
Description	The disable snmp traps command disables SNMP trap support on the Switch.
Parameters	Only Administrator or operator-level users can issue this command
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To prevent SNMP traps from being sent from the Switch:

```
DGS3100# disable snmp traps

Success.
DGS3100#
```

enable snmp authenticate trap

Purpose	To enable SNMP authentication trap support.
Syntax	enable snmp authenticate trap
Description	The enable snmp authenticate trap command enables SNMP authentication trap support on the Switch.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command

Example usage:

To turn on SNMP authentication trap support:

```
DGS3100# enable snmp authenticate trap

Success.
DGS3100#
```

disable snmp authenticate trap

Purpose	To disable SNMP authentication trap support.
Syntax	disable snmp authenticate trap
Description	The disable snmp authenticate trap command disables SNMP authentication trap support on the Switch.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command

Example usage:

To disable the SNMP authentication trap support:

```
DGS3100# disable snmp authenticate trap
Success.
DGS3100#
```

show snmp traps

Purpose	To display SNMP trap support status on the Switch.
Syntax	show snmp traps
Description	The show snmp traps command displays the SNMP trap support status currently configured on the Switch.
Parameters	None.
Restrictions	None

Example usage:

To view the current SNMP trap support:

```
DGS3100# show snmp traps
SNMP Traps      : enabled
Authenticate Trap : enabled
DGS3100#
```

config snmp system_contact

Purpose	To enter identification information of a contact person who is responsible for the Switch.
Syntax	config snmp system_contact <sw_contact 0-31>
Description	The config snmp system_contact command enters the name and/or other information to identify a contact person who is responsible for the Switch. A maximum of 31 characters can be used.
Parameters	< <i>sw_contact 0-31</i> > - A maximum of 31 characters is allowed. A NULL string is accepted if there is no contact.

Restrictions	Only Administrator or operator-level users can issue this command
--------------	---

Example usage:

To configure the Switch contact to ‘MIS Department II’:

```
DGS3100# config snmp system_contact MIS Department II
Success.
DGS3100#
```

config snmp system_location

Purpose	To enter a description of the location of the Switch.
Syntax	config snmp system_location <sw_location 0-31>
Description	The config snmp system_location command enters a description of the location of the Switch. A maximum of 31 characters can be used.
Parameters	< <i>sw_location 0-31</i> > - A maximum of 31 characters is allowed. A NULL string is accepted if there is no location desired.
Restrictions	Only Administrator or operator-level users can issue this command

Example usage:

To configure the Switch location for ‘HQ 5F’:

```
DGS3100# config snmp system_location HQ 5F
Success.
DGS3100#
```

config snmp system_name

Purpose	To define the name for the Switch.
Syntax	config snmp system_name <sw_name 0-31>
Description	The config snmp system_name command defines the name of the Switch.
Parameters	< <i>sw_name 0-31</i> > - A maximum of 31 characters is allowed. A NULL string is accepted if no name is desired.
Restrictions	Only Administrator or operator-level users can issue this command

Example usage:

To configure the Switch name as ‘DGS-3100 Switch’:

```
DGS3100# config snmp system_name DGS-3100 Switch
Success.
DGS-3100 Switch#
```

enable snmp

Purpose	To enable SNMP support.
Syntax	enable snmp
Description	The enable snmp command enables SNMP support on the Switch.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command

Example usage:

To enable SNMP support on the Switch:

```
DGS-3100# enable snmp
```

Success.

```
DGS-3100#
```

disable snmp

Purpose	To disable SNMP support.
Syntax	disable snmp
Description	The disable snmp command enables SNMP support on the Switch.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command

Example usage:

To disable SNMP support on the Switch:

```
DGS-3100# disable snmp
```

Success.

```
DGS-3100#
```

DOWNLOAD/UPLOAD COMMANDS

The Download/Upload commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
download	configuration <ipaddr> <path_filename 1-64> {startup running} [firmware <ipaddr> <path_filename 1-64> boot <ipaddr> <path_filename 1-64>]
upload	configuration <ipaddr> <path_filename 1-64> {startup running}
config dhcp_auto enable	[enable disable]
show dhcp_auto	
config firmware	[delete boot_up] {unit <unit_id 1-6>} image_id <init 1-2>
show firmware information	

Each command is listed in detail, as follows:

download	
Purpose	To download and install a firmware, boot, or switch configuration file from a TFTP server.
Syntax	download [configuration <ipaddr> <path_filename 1-64> {startup running} firmware <ipaddr> <path_filename 1-64> boot <ipaddr> <path_filename 1-64>]
Description	The download command downloads a firmware, boot, or switch configuration file from a TFTP server.
Parameters	<p><i>firmware</i> – Downloads and installs firmware on the Switch from a TFTP server.</p> <p><i>boot</i> – Downloads a boot file from a TFTP server.</p> <p><i>configuration</i> – Downloads a switch configuration file from a TFTP server.</p> <p><i><ipaddr></i> – The IP address of the TFTP server.</p> <p><i><path_filename 64></i> – The DOS path and filename of the firmware or switch configuration file, up to 64 characters, on the TFTP server. For example, C:\31xx.had.</p> <p><i>startup</i> – Indicates the Configuration file is to be downloaded to the startup config.</p> <p><i>running</i> – Indicates the Configuration file is to be downloaded to the running config.</p>
Restrictions	None.

Example usage:

To download a firmware file:

```
DGS3100# download firmware 1.1.1.23 1\dgs_31xx-10032.ros
01-Jan-2000 01:19:48 %COPY-I-FILECPY: Files Copy – source URL tftp://1.1.1.23 /1\
dgs_31xx—10032.ros destination URL Unit all flash://image
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!01–Jan–2000 01:22:49 %COPY-W-TRAP:
The copy operation was completed successfully
!
3920460 bytes copied in 00:03:01 [hh:mm:ss]

DGS3100#
```

To download a configuration file:

```
DGS3100# download configuration 10.48.74.121 c:\cfg\setting.txt
Overwrite file [startup-config] ?[Yes/press any key for no]....
01-Jan-2000 03:19:46%COPY-I-FILECPY:FilesCopy-source          URL
tftp://10.48.74.121/1.txt destination
URL flash://startup-config
Success.

Success.

.....01-Jan-2000 03:18:40 %COPY-N-TRAP: The copy operation was
completed successfully!
Copy: 267 bytes copied in 00:00:08 [hh:mm:ss]
DGS3100#
```

upload

Purpose	To upload the current switch settings to a TFTP server.
Syntax	upload configuration <ipaddr> <path_filename 1-64> {startup running}
Description	The upload command uploads the Switch's current settings to a TFTP server.
Parameters	<p><i>configuration</i> – Specifies that the Switch's current settings are to be uploaded to the TFTP server.</p> <p><<i>ipaddr</i>> – The IP address of the TFTP server. The TFTP server must be on the same IP subnet as the Switch.</p> <p><<i>path_filename 1-64</i>> – The location of the Switch configuration file on the TFTP server.</p>

	<i>startup</i> – Indicates the Startup Configuration file is to be uploaded. <i>running</i> – Indicates the Running Configuration file is to be uploaded.
Restrictions	None.

Example usage:

```
DGS3100# upload configuration 1.1.1.23 1\running--config
01-Jan-2000 01:26:11 %COPY-I-FILECPY: Files Copy - source
URL running-config destination URL tftp://1.1.1.23/1\running-
config
...01-Jan-2000 01:26:16 %COPY-W-TRAP: The copy operation
was completed success fully
!
158 bytes copied in 00:00:05 [hh:mm:ss]

DGS3100#
```

config dhcp_auto enable

Purpose	To automatically update the switch's firmware and configuration files via the web, using options 66 and 67 of the DHCP packets.
Syntax	config dhcp_auto [enable disable]
Description	The config dhcp_auto enable command enables/disables Auto update feature.
Parameters	<i>enable</i> – Enables the Auto-Update feature. <i>disable</i> – Disables the Auto-Update feature.
Restrictions	None.

Example usage:

To automatically update the switch's firmware and configuration files:

```
DGS3100# config dhcp_auto enable

The configuration will take place on the next time the device will
get DHCP address.

Success

DGS3100#
```

show dhcp_auto

Purpose	To display the current state of the auto update feature.
Syntax	show dhcp_auto
Description	The show dhcp_auto command displays the current state of the auto update feature.
Parameters	None.
Restrictions	None.

Example usage:

To display the current state of the auto update feature:

```
DGS3100# show dhcp_auto
Dhcp auto update status: Disable
DGS3100#
```

config firmware

Purpose	To specify the system image that the device will load at reboot or to specify a system image to delete.
Syntax	config firmware [delete boot_up] {unit <unit_id 1-6>} image_id <image 1-2>
Description	The config firmware command specifies the system image that the device loads at startup, or the specific image that is to be deleted.
Parameters	<p><i>delete</i> – Deletes the specified firmware on the specified unit.</p> <p><i>boot_up</i> – Specifies the firmware image that will be used for the next boot-up.</p> <p><i>unit</i> – Specifies the unit ID number. (Range: 1-6)</p> <p><i>Image_id</i> – Specifies the system image ID number.</p>
Restrictions	It is only possible to delete a non-active image.

Example usage:

To specify the system image:

```
DGS3100# config firmware unit 1 image_id 1

Success
DGS3100#
```

show firmware information

Purpose	To display the active system image file loaded by the device.
Syntax	show firmware information
Description	The show firmware information command displays the currently stored image files, and indicates those that are currently active.
Parameters	None
Restrictions	None.

Example usage:

To display the active system image file:

DGS3100# show firmware information			
Unit	Image	Version	Update Time
---	-----	-----	-----
1	1	1.ep.58	28-Nov-2007 19:22:43
1	*2	2.00.10	20-Nov-2007 15:21:24
4	1	1.ep.58	28-Nov-2007 19:22:43
4	*2	2.00.10	20-Nov-2007 15:21:24
5	1	1.ep.58	28-Nov-2007 19:22:43
5	*2	2.00.10	20-Nov-2007 15:21:24

DHCP LOCAL RELAY

Command	Parameter
config dhcp_local_relay state	[enable disable]
config dhcp_local_relay vlan	vlan [add delete] <vlan_name 32> vlanid <1-4094>]

config dhcp_local_relay state

Purpose	To enable /disable the DHCP local relay feature globally
Syntax	config dhcp_local_relay state [enable disable]
Description	
Parameters	<i>state [enable disable]</i> –state of the feature is globally enabled or disabled
Restrictions	

Example usage:

To enable the DHCP Local Relay:

```
DGS-3100# config dhcp_local_relay state enable
```

Success.

```
DGS-3100#
```

config dhcp_local_relay vlan

Purpose	To specify which VLAN's the feature works on.
Syntax	config dhcp_local_relay vlan [add delete] <vlan_name 32> vlanid <1-4094>]
Description	Each VLAN which was added to the DHCP Local Relay list participates in the DHCP Local Relay process – Option 82 is added to DHCP requests on this VLAN, and Removed from DHCP Replies on this VLAN.
Parameters	<i>vlan_name_32</i> – the VLAN name identifier <i>vlanid 1-4094</i> – The VLAN tag identifier
Restrictions	None.

Example usage:

To add a VLAN to the DHCP Local Relay:

```
DGS-3100# config dhcp_local_relay vlan add 2
```

```
Success.  
DGS-3100#
```

To delete a VLAN to the DHCP Local Relay:

```
DGS-3100# config dhcp_local_relay vlan delete vlanid 2
```

```
Success.  
DGS-3100#
```

NETWORK MONITORING COMMANDS

The Network Monitoring commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
show packet ports	<portlist>
show error ports	<portlist>
show utilization	[ports cpu]
clear counters	
clear log	
show log	{index <value>}
enable syslog	
disable syslog	
show syslog	
create syslog host	<index 1-4> ipaddress <ipaddr> {severity [informational warning all] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <udp_port_number>}
config syslog host	[all <index 1-4>] {severity [informational warning all] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <udp_port_number> ipaddress <ipaddr>}
delete syslog host	[<index 1-4> all]
show syslog host	{<index 1-4>}
clear green-ethernet	Cumulative_Energy_Saved
show green-ethernet	

Each command is listed in detail, as follows:

show packet ports

Purpose	To display statistics about the packets sent and received in frames per second by the Switch.
Syntax	show packet ports <portlist>
Description	The show packet ports command displays statistics about packets sent and received by ports specified in the port list. The results are separated into three tables, labeled A, B, and C in the window below. Table A is relevant to the size of the packets, Table B is relevant to the type of packets and Table C is relevant to the type of frame associated with these packets.
Parameters	<portlist> – A port or range of ports whose statistics are to be

	displayed.
Restrictions	None.

Example usage:

To display the packets analysis for port 7:

DGS3100# show packet ports 7						
Port number : 7	A	B	Frame Size	Frame Counts	Frames/sec	Frame Type Total Total/sec
64	3275	10	RX Bytes	408973	1657	
65-127	755	10	RX Frames	4395	19	
128-255	316	1				
256-511	145	0	TX Bytes	7918	178	
512-1023	15	0	TX Frames	111	2	
1024-1518	0	0				
1519-10240	0	0				
C						
Unicast Rx	152	1				
Multicast Rx	557	2				
Broadcast Rx	3686	16				
More: <space>, Quit: q, One line: <return>						

show error ports

Purpose	To display the error statistics for a port or a range of ports.
Syntax	show error ports <portlist>
Description	The show error ports command displays all of the packet error statistics collected and logged by the Switch for a given port list.
Parameters	<portlist> – A port or range of ports whose error statistics are to be displayed.
Restrictions	None.

Example usage:

To display the errors of port 3:

DGS3100# show errors port 3				
Port number : 3	Error Type	RX Frames	Error Type	TX Frames
CRC Error	0		Excessive Deferra	0
Undersize	0		CRC Error	0
Oversize	0		Late Collision	0
Fragment	0		Excessive Collision	0
Jabber	0		Single Collision	0
Drop Pkts	0		Collision	0
DGS3100#				

show utilization

Purpose	To display real-time port utilization statistics.
Syntax	show utilization [ports cpu]
Description	The show utilization command displays the real-time utilization statistics for ports in bits per second (bps) for the Switch, and for the CPU in percentage..
Parameters	None
Restrictions	None.

To display the port utilization statistics:

```
DGS-3100# show utilization ports

Port TX/sec RX/sec Util
----- -----
1:1 2424    1968    0%
1:2 0        0       0%
1:3 0        0       0%
1:4 0        0       0%
1:5 0        0       0%
1:6 0        0       0%
1:7 0        0       0%
1:8 0        0       0%
1:9 0        0       0%
1:10 0       0       0%
1:11 0       0       0%
1:12 0       0       0%
1:13 0       0       0%
1:14 0       0       0%
1:15 0       0       0%
1:16 0       0       0%
1:17 0       0       0%
1:18 0       0       0%
1:19 0       0       0%
DGS-3100#
```

To display the cpu utilization statistics:

```
DGS-3100# show utilization cpu

CPU utilization
-----
Five seconds - 10%   One minute - 8%   Five minutes - 10%

DGS-3100#
```

clear counters

Purpose	To clear the Switch's statistics counters.
Syntax	clear counters
Description	The clear counters command clears the counters used by the Switch to compile statistics.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To clear the counters:

```
DGS3100# clear counters

Success.

DGS3100#
```

clear log

Purpose	To clear the Switch's history log.
Syntax	clear log
Description	The clear log command clears the Switch's history log.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To clear the log information:

```
DGS3100# clear log

Success.

DGS3100#
```

show log

Purpose	To display the Switch history log.
Syntax	show log {index <value>}
Description	The show log command displays the contents of the Switch's history log.
Parameters	<i>index <value></i> – The number of entries in the history log to display.
Restrictions	None.

Example usage:

To display the Switch history log:

```
DGS3100# show log
```

Index	Time	Log Text
1	03-Jan-2000 17:48:21	%AAA-I-CONNECT: User CLI session for user admin over telnet , source 10.6.150.34 destination 10.6.41.37 ACCEPTED
2	03-Jan-2000 17:48:02	%AAA-I-DISCONNECT: User CLI session for user admin over telnet , source 10.6.150.34 destination 10.6.41.37 TERMINATED. The Telnet/SSH session may still be connected.
3	03-Jan-2000 17:38:46	%AAA-I-DISCONNECT: User CLI session for user admin over console , source 0.0.0.0 destination 0.0.0.0 TERMINATED. The Telnet/SSH session may still be connected.
4	03-Jan-2000 17:26:24	%COPY-W-TRAP: The copy operation was completed successfully
5	03-Jan-2000 17:26:17	%COPY-I-FILECPY: Files Copy - source URL running-config destination URL flash://startup-config
6	03-Jan-2000 17:25:40	%AAA-I-CONNECT: User CLI session for user admin over telnet , source 10.6.150.34 destination 10.6.41.37 ACCEPTED
DGS3100#		

enable syslog

Purpose	To enable the system log to be sent to a remote host.
Syntax	enable syslog
Description	The enable syslog command enables the system log to be sent to a remote host.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To enable the syslog function on the Switch:

```
DGS3100# enable syslog
```

```
Success.
```

```
DGS3100#
```

disable syslog

Purpose	To disable the system log from being sent to a remote host.
Syntax	disable syslog

Description	The disable syslog command disables the system log from being sent to a remote host.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To disable the syslog function on the Switch:

```
DGS3100# disable syslog

Success.
DGS3100#
```

show syslog

Purpose	To display the syslog protocol status.
Syntax	show syslog
Description	The show syslog command displays the syslog status (enabled or disabled).
Parameters	None.
Restrictions	None.

Example usage:

To display the current status of the syslog function:

```
DGS3100# show syslog

Syslog Global State: Enabled

DGS3100#
```

create syslog host

Purpose	To create a new syslog host.
Syntax	create syslog host <index 1-4> ipaddress <ipaddr> {severity [informational warning all] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <udp_port_number>}
Description	The create syslog host command creates a new syslog host.
Parameters	<p><i>all</i> – Specifies that the command is to be applied to all hosts.</p> <p><i><index 1-4></i> – The syslog host index id. There are four available indices, numbered 1 to 4.</p> <p><i>ipaddress <ipaddr></i> – The IP address of the remote host to which syslog messages are to be sent.</p> <p><i>severity</i> – The message severity level indicator. These are described in the table below (Bold font indicates that the corresponding severity level is currently supported on the Switch):</p>

Numerical Code	Severity
0	Emergency: system is unusable
1	Alert: action must be taken immediately
2	Critical: critical conditions
3	Error: error conditions
4	Warning: warning conditions
5	Notice: normal but significant condition
6	Informational: informational messages
7	Debug: debug-level messages

informational – Specifies that informational messages are to be sent to the remote host. This corresponds to number 6 from the list above.

warning – Specifies that warning messages are to be sent to the remote host. This corresponds to number 4 from the list above.

all – Specifies that all of the currently supported syslog messages that are generated by the Switch are to be sent to the remote host.

facility – Some of the operating system daemons and processes have been assigned Facility values. Processes and daemons that have not been explicitly assigned a Facility may use any of the ‘local use’ facilities or they may use the ‘user-level’ Facility. Those Facilities that have been designated are shown in the table below (Bold font indicates the facility values that the Switch currently supports):

Numerical Code	Facility
0	kernel messages
1	user-level messages
2	mail system
3	system daemons
4	security/authorization messages
5	messages generated internally by syslog
6	line printer subsystem
7	network news subsystem
8	UUCP subsystem
9	clock daemon
10	security/authorization messages
11	FTP daemon
12	NTP subsystem
13	log audit
14	log alert
15	clock daemon
16	local use 0 (local0)
17	local use 1 (local1)
18	local use 2 (local2)
19	local use 3 (local3)

	20 local use 4 (local4)
	21 local use 5 (local5)
	22 local use 6 (local6)
	23 local use 7 (local7)
	<i>local0</i> – Specifies that local use 0 messages are to be sent to the remote host. This corresponds to number 16 from the list above.
	<i>local1</i> – Specifies that local use 1 messages are to be sent to the remote host. This corresponds to number 17 from the list above.
	<i>local2</i> – Specifies that local use 2 messages are to be sent to the remote host. This corresponds to number 18 from the list above.
	<i>local3</i> – Specifies that local use 3 messages are to be sent to the remote host. This corresponds to number 19 from the list above.
	<i>local4</i> – Specifies that local use 4 messages are to be sent to the remote host. This corresponds to number 20 from the list above.
	<i>local5</i> – Specifies that local use 5 messages are to be sent to the remote host. This corresponds to number 21 from the list above.
	<i>local6</i> – Specifies that local use 6 messages are to be sent to the remote host. This corresponds to number 22 from the list above.
	<i>local7</i> – Specifies that local use 7 messages is sent to the remote host. This corresponds to number 23 from the list above.
	<i>udp_port <udp_port_number></i> – Specifies the UDP port number that the syslog protocol is to use to send messages to the remote host.
	<i>state [enable disable]</i> – Allows the sending of syslog messages to the remote host, specified above, to be enabled and disabled.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To create syslog host:

```
DGS3100# create syslog host 1 ipaddress 10.53.13.94 severity all facility local0
```

Success.

```
DGS3100#
```

config syslog host

Purpose	To configure the syslog protocol to send system log data to a remote host.
Syntax	config syslog host [all <index 1-4>] {severity [informational warning all] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <udp_port_number> ipaddress <ipaddr>}
Description	The config syslog host command configures the syslog protocol to send system log information to a remote host.
Parameters	<p><i>all</i> – Specifies that the command applies to all hosts.</p> <p><i><index 1-4></i> – Specifies that the command applies to an index of hosts. There are four available indices, numbered 1 to 4.</p> <p><i>ipaddress <ipaddr></i> – The IP address of the remote host to which</p>

syslog messages are to be sent.

severity - The message severity level indicator. These are described in the following table (Bold font indicates that the corresponding severity level is currently supported on the Switch):

Numerical Code	Severity
0	Emergency: system is unusable
1	Alert: action must be taken immediately
2	Critical: critical conditions
3	Error: error conditions
4	Warning: warning conditions
5	Notice: normal but significant condition
6	Informational: informational messages
7	Debug: debug-level messages

informational - Specifies that informational messages are to be sent to the remote host. This corresponds to number 6 from the list above.

warning - Specifies that warning messages are to be sent to the remote host. This corresponds to number 4 from the list above.

all - Specifies that all of the currently supported syslog messages that are generated by the Switch are to be sent to the remote host.

facility - Some of the operating system daemons and processes have been assigned Facility values. Processes and daemons that have not been explicitly assigned a Facility may use any of the 'local use' facilities or they may use the 'user-level' Facility. Those Facilities that have been designated are shown in the following:

Bold font indicates the facility values that the Switch currently supports.

Numerical Code	Facility
0	kernel messages
1	user-level messages
2	mail system
3	system daemons
4	security/authorization messages
5	messages generated internally by syslog
6	line printer subsystem
7	network news subsystem
8	UUCP subsystem
9	clock daemon
10	security/authorization messages
11	FTP daemon
12	NTP subsystem
13	log audit
14	log alert

15	clock daemon
16	local use 0 (local0)
17	local use 1 (local1)
18	local use 2 (local2)
19	local use 3 (local3)
20	local use 4 (local4)
21	local use 5 (local5)
22	local use 6 (local6)
23	local use 7 (local7)

local0 – Specifies that local use 0 messages are to be sent to the remote host. This corresponds to number 16 from the list above.

local1 – Specifies that local use 1 messages are to be sent to the remote host. This corresponds to number 17 from the list above.

local2 – Specifies that local use 2 messages are to be sent to the remote host. This corresponds to number 18 from the list above.

local3 – Specifies that local use 3 messages are to be sent to the remote host. This corresponds to number 19 from the list above.

local4 – Specifies that local use 4 messages are to be sent to the remote host. This corresponds to number 20 from the list above.

local5 – Specifies that local use 5 messages are to be sent to the remote host. This corresponds to number 21 from the list above.

local6 – Specifies that local use 6 messages are to be sent to the remote host. This corresponds to number 22 from the list above.

local7 – Specifies that local use 7 messages are to be sent to the remote host. This corresponds to number 23 from the list above.

udp_port <udp_port_number> – Specifies the UDP port number that the syslog protocol is to use to send messages to the remote host.

ipaddress <ipaddr> – Specifies the IP address of the remote host to which syslog messages are to be sent.

state [enable | disable] – Allows the sending of syslog messages to the remote host, specified above, to be enabled and disabled.

Restrictions

Only Administrator or operator-level users can issue this command.

Example usage:

To configure a syslog host:

```
DGS3100# config syslog host all severity all facility local0
```

Success.

```
DGS3100#
```

delete syslog host

Purpose	To remove a previously configured syslog host from the Switch.
Syntax	delete syslog host [<index 1-4> all]
Description	The delete syslog host command removes a previously configured syslog host from the Switch.

Parameters	<i><index 1-4></i> – The syslog host index id. There are four available indices, numbered 1 to 4. <i>all</i> – Specifies that the command applies to all hosts.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To delete a previously configured syslog host:

```
DGS3100# delete syslog host 4

Success.

DGS3100#
```

show syslog host

Purpose	To display the syslog hosts currently configured on the Switch.
Syntax	show syslog host {<index 1-4>}
Description	The show syslog host command displays the syslog hosts that are currently configured on the Switch.
Parameters	<i><index 1-4></i> – The syslog host index id. There are four available indices, numbered 1 to 4.
Restrictions	None.

Example usage:

To show Syslog host information:

```
DGS3100# show syslog host

Syslog Global State: Disabled

Host Id  Host IP address  Severity  Facility  UDP port
-----  -----  -----  -----
  1      10.1.1.2        All       Local0    514
  2      10.40.2.3       All       Local0    514
  3      10.21.13.1      All       Local0    514

Total Entries : 3

DGS3100#
```

clear green-ethernet Cumulative_Energy_Saved

Purpose	To clear the Green Ethernet Cumulative_Energy_Saved information.
Syntax	clear green-ethernet Cumulative_Energy_Saved
Description	The clear green-ethernet Cumulative_Energy_Saved command

	clears the cumulative power saving data.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To clear the Green Ethernet cumulative power saving data:

```
DGS-3100# clear green-ethernet Cumulative_Energy_Saved
success.
DGS-3100#
```

show green-ethernet

Purpose	To display the Green Ethernet information.
Syntax	show green-ethernet
Description	The show green-ethernet command displays the power consumption data.
Restrictions	None.

Example usage:

To display the Green Ethernet information:

```
DGS-3100# show green-ethernet
Power Consumption : 19%
Cumulative Energy Save: 100Watt*Hour
DGS-3100#
```

SPANNING TREE COMMANDS

The Spanning Tree commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config stp	{maxage <value 6-40> maxhops <value 1-20> hello time <value 1-10> forward delay <value 4-30> fb pdu [enable disable] lbd [enable disable] lbd_recover_time [<value 30-86400>]}
config stp ports	[<portlist> <ch1-32>] {external cost [auto <value 1-200000000>] edge [true false] p2p [true false auto] state [enable disable] fb pdu [enable disable system]}
config stp version	[mstp rstp stp]
enable stp	
disable stp	
show stp	
show stp ports	{<portlist> <ch1-32>}
show stp instance_id	<value 0-15>
show stp mst_config_id	
config stp instance_id	<value 1-15> [add_vlan remove_vlan] <vidlist>
config stp priority	<value 0-61440> instance_id <value 0-15>
config stp mst_config_id	{revision_level <int 0-65535> name <string>}
config stp mst_ports	[<portlist <ch1-32>] instance_id <value 0-15> {internalCost [auto value 1-200000000] priority <value 0-240>}

Each command is listed in detail, as follows:

config stp	
Purpose	To setup STP, RSTP and MSTP on the Switch.
Syntax	config stp {maxage <value 6-40> maxhops <value 1-20> hello time <value 1-10> forward delay <value 4-30> fb pdu [enable disable] lbd [enable disable] lbd_recover_time <value 30-86400> }
Description	The config stp command configures the Spanning Tree Protocol (STP) for the entire switch. All commands here are implemented for the STP version that is currently set on the Switch.
Parameters	<i>maxage <value 6-40></i> – This value may be set to ensure that old information does not endlessly circulate through redundant paths in the network, preventing the effective propagation of the new information. Set by the Root Bridge, this value aids in determining

that the Switch has spanning tree configuration values consistent with other devices on the bridged LAN. If the value ages out and a BPDU has still not been received from the Root Bridge, the Switch starts sending its own BPDU to all other switches for permission to become the Root Bridge. If your switch has the lowest priority, it becomes the Root Bridge. The user may choose a time between 6 and 40 seconds. The default value is 20.

maxhops <value 1-20> – The number of hops between devices in a spanning tree region before the BPDU (bridge protocol data unit) packet sent by the Switch will be discarded. Each switch on the hop count will reduce the hop count by one until the value reaches zero. The Switch will then discard the BDPU packet and the information held for the port will age out. The value may be between 1 and 20. The default is 20.

helldelay <value 1-10> – The user may set the time interval between transmission of configuration messages by the root device in STP, or by the designated router, thus stating that the Switch is still functioning. The value may be between 1 and 10 seconds. The default value is 2 seconds.

forwarddelay <value 4-30> – The amount of time (in seconds) that the root device will wait before changing from Blocking to Listening , and from Listening to Learning states. The value may be between 4 and 30 seconds. The default is 15 seconds.

fbdpu [enable | disable] – Allows the forwarding of STP BPDU packets from other network devices when STP is disabled on the Switch. The default is disable.

lbd [enable | disable] – To enable or disable the loopback Detection feature.

lbd_recover_timer [<value 30-86400>] – Time in second for the loop detection recovery, it means that after this time there will be a check whether the loop still exists, if it doesn't exist the port state will be changed to active.

Restrictions

Only administrator or operator-level users can issue this command.

Example usage:

To configure STP with maxage 18, maxhops of 15, enabling lbd and defining the lbd recovery time as 55:

```
DGS3100# config stp maxage 18 maxhops 15 lbd enable
lbd_recover_time 55
```

Success.

```
DGS3100#
```

config stp ports

Purpose	To setup STP on the port level.
Syntax	config stp ports [<portlist> <ch1-32>] {externalcost [auto <value 1-200000000>] edge [true false] p2p [true false auto] state [enable disable] fbdpu [enable disable system]}
Description	The config stp ports command configures STP for a group of ports.
Parameters	<portlist> – A port or range of ports to be configured. The port list is

	<p>specified by listing switch number and the beginning port number on that switch, separated by a colon. Then the highest port number of the range is specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 1:22 specifies switch number 1, port 22. 1:3-22 specifies all of the ports of switch 1, between port 3 and port 22 – in numerical order.</p> <p><ch1-32> – a port-channel.</p> <p>externalCost – Defines a metric that indicates the relative cost of forwarding packets to the specified port list. Port cost can be set automatically or as a metric value. The default value is auto.</p> <ul style="list-style-type: none"> • auto – Automatically sets the speed for forwarding packets to the specified port(s) in the list for optimal efficiency. Default port cost:10Mbps port = 2000000. 100Mbps port = 200000. Gigabit port = 20000. Port-channel = 20000. • <value 1-200000000> - Defines a value between 1 and 200000000 to determine the external cost. The lower the number, the greater the probability the port will be chosen to forward packets. <p>edge [true false] – true designates the port as an edge port. Edge ports cannot create loops, however an edge port can lose edge port status if a topology change creates a potential for a loop. An edge port normally should not receive BPDU packets. If a BPDU packet is received it automatically loses edge port status. false indicates that the port does not have edge port status. The default setting for this parameter is false.</p> <p>p2p [true false auto] – true indicates a point-to-point (P2P) link. P2P ports transition to a forwarding state rapidly thus benefiting from RSTP. A p2p value of false indicates that the port cannot have p2p status. auto allows the port to have p2p status whenever possible and operate as if the p2p status were true. (A port that operates in full-duplex is assumed to be point-to-point, while a half-duplex port is considered as a shared port). If the port cannot maintain this status (for example if the port is forced to half-duplex operation) the p2p status changes to operate as if the p2p value were false. The default setting for this parameter is auto.</p> <p>state [enable disable] – Allows STP to be enabled or disabled for the ports specified in the port list. The default is enable.</p> <p>fbdpu [enable disable system] – If enabled - allows the forwarding of STP BPDU packets from other network devices Disable – blocking STP BPDU packets from other network devices. System – indicates that port will behave as global switch's fbdpu value configured. Fbdpu value valid only when STP port state is disabled or global STP state is disabled. The default is system.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To configure STP with path cost 19 and state enable for ports 1-5 of module 1.

```
DGS3100# config stp ports 1:1-5 externalCost 19 state enable
```

```
Success.
```

```
DGS3100#
```

config stp version

Purpose	To globally set the version of STP on the Switch.
Syntax	config stp version [mstp rstp stp]
Description	The config stp version command sets the version of the spanning tree to be implemented on the Switch.
Parameters	<p><i>mstp</i> – Sets the Multiple Spanning Tree Protocol (MSTP) globally on the Switch.</p> <p><i>rstp</i> – Sets the Rapid Spanning Tree Protocol (RSTP) globally on the Switch.</p> <p><i>stp</i> – Sets the Spanning Tree Protocol (STP) globally on the Switch.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To set the Switch globally for the Multiple Spanning Tree Protocol (MSTP):

```
DGS3100# config stp version mstp
```

Success.

```
DGS3100#
```

enable stp

Purpose	To globally enable STP on the Switch.
Syntax	enable stp
Description	The enable stp command sets the Spanning Tree Protocol to be globally enabled on the Switch.
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To enable STP, globally, on the Switch:

```
DGS3100# enable stp
```

Success.

```
DGS3100#
```

disable stp

Purpose	To globally disable STP on the Switch.
Syntax	disable stp
Description	The disable stp command sets the Spanning Tree Protocol to be globally disabled on the Switch.
Parameters	None.

Restrictions	Only administrator or operator-level users can issue this command.
--------------	--

Example usage:

To disable STP on the Switch:

```
DGS3100# disable stp
Success.

DGS3100#
```

show stp

Purpose	To display the Switch's current STP configuration.
Syntax	show stp
Description	The show stp command displays the Switch's current STP configuration.
Parameters	None.
Restrictions	None.

Example usage:

To display the status of STP on the Switch:

Status 1: STP enabled with STP compatible version

```
DGS3100# show stp

STP Status : Enabled
STP Version : STP Compatible
Max Age : 20
Hello Time : 2
Forward Delay : 15
Max Hops : 20
Forwarding BPDU : Enabled
Loopback Detection : Enabled
Loopback Detection Interval : 60

DGS3100#
```

Status 2: STP enabled for RSTP

```
DGS3100# show stp

STP Status : Enabled
STP Version : RSTP
Max Age : 20
Hello Time : 2
Forward Delay : 15
```

Max Age	: 20
Forwarding BPDU	: Enabled
Loopback Detection	: Enabled
Loopback Detection Interval	: 60

DGS3100#

Status 3: STP enabled for MSTP

DGS3100# show stp	
STP Status	: Enabled
STP Version	: MSTP
Max Age	: 20
Hello Time	: 2
Forward Delay	: 15
Max Age	: 20
Forwarding BPDU	: Enabled
Loopback Detection	: Enabled
Loopback Detection Interval	: 60

DGS3100#

show stp ports

Purpose	To display the Switch's current instance_id configuration.
Syntax	show stp ports {<portlist> <ch1-32>}
Description	The show stp ports command displays the STP Instance Settings and STP Instance Operational Status currently implemented on the Switch.
Parameters	<p><portlist> – A port or range of ports to be configured. The port list is specified by listing switch number and the beginning port number on that switch, separated by a colon. Then the highest port number of the range is specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 1:22 specifies switch number 1, port 22. 1:3-22 specifies all of the ports of switch 1, between port 3 and port 22 – in numerical order.</p> <p><ch1-32> – a port-channel.</p>
Restrictions	None.

Example usage:

To show stp port 9 on switch one:

DGS3100# show stp ports 1:9

MSTP Port Information

Port Index : 1:9,Port STP enabled

External PathCost : Auto/200000,Edge Port : No /No,P2P : Auto /Yes

Msti	Designated Bridge	Internal PathCost	Prio	Status	Role
0	8000 00:23:27:26:46:00	200000	128	Disabled	Disabled
DGS3100#					

show stp instance_id

Purpose	To display the Switch's STP instance configuration
Syntax	show stp instance_id <value 0-15>
Description	The show stp instance_id command displays the Switch's current STP Instance Settings and the STP Instance Operational Status.
Parameters	<value 0-15> - The value of the previously configured instance_id on the Switch. The value may be between 0 and 15. An entry of 0 displays the STP configuration for the CIST internally set on the Switch.
Restrictions	None.

Example usage:

To display the STP instance configuration for instance 0 (the internal CIST) on the Switch:

```
DGS3100# show stp instance 0

Instance Type : CIST
Instance Status : Enabled
Instance Priority : 32768

STP Instance Operational Status
-----
Designated Root Bridge : 32768/00:00:b9:89:46:79
External Root Cost : 200012
Regional Root Bridge : 32768/00:23:27:26:46:00
Internal Root Cost : 0
Root Port : 1:3
Max Age : 20
Forward Delay : 15
Last Topology Change : 23542964
Topology Changes Count : 6

DGS3100#
```

show stp mst_config_id

Purpose	To display the MSTP configuration identification.
Syntax	show stp mst_config_id

Description	The show stp mst_config_id command displays the Switch's current MSTP configuration identification.
Parameters	None.
Restrictions	None.

Example usage:

To show the MSTP configuration identification currently set on the Switch:

```
DGS3100# show stp mst_config_id

Current MST Configuration Identification
-----
Configuration Name : 00:53:13:1A:33:24 Revision Level :0
MSTI ID Vid list
-----
CIST 2-4094
1 1

DGS3100#
```

config stp instance_id

Purpose	To add or delete VLANs of STP instance ID.
Syntax	config stp instance_id <value 1-15> [add_vlan remove_vlan] <vidlist>
Description	The config stp instance_id command maps VIDs (VLAN IDs) STP instances on the Switch. A STP instance may have multiple members with the same MSTP configuration. There is no limit to the number of STP regions in a network but each region only supports a maximum of 16 spanning tree instances (instance 0 – is one unchangeable default entry). VIDs can belong to only one spanning tree instance at a time. Note that switches in the same spanning tree region having the same STP instance_id must be mapped identically, and have the same configuration revision_level number and the same name.
Parameters	<p><value 1-15> - The value of the instance_id. The value may be between 1 and 15. The Switch supports 16 STP regions with one unchangeable default instance ID set as 0.</p> <p>add_vlan – Indicates that VIDs specified in the <vidlist> parameter are to be added to the STP instance_id.</p> <p>remove_vlan – Indicates that VIDs specified in the <vidlist> parameter are to be removed from the STP instance_id.</p> <p><vidlist> – Specifies the range of VIDs to add to or remove from the STP instance_id. Supported VIDs on the Switch range from ID number 1 to 4094. By default each created vlan belongs to instance 0.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To configure instance id 2 to add VID 10:

```
DGS3100# config stp instance_id 2 add_vlan 10
Success.
DGS3100#
```

To remove VID 10 from instance id 2:

```
DGS3100# config stp instance_id 2 remove_vlan 10
Success.
DGS3100#
```

config stp priority

Purpose	To update the STP instance configuration.
Syntax	config stp priority <value 0-61440> instance_id <value 0-15>
Description	The config stp priority command updates the STP instance configuration settings on the Switch. The MSTP uses the priority in selecting the root bridge, root port and designated port. Assigning higher priorities to STP regions instructs the Switch to give precedence to the selected <i>instance_id</i> for forwarding packets. A lower value indicates a higher priority.
Parameters	<p><i>priority <value 0-61440></i> - The priority for a specified <i>instance_id</i> for forwarding packets. The value may be between 0 and 61440, and must be divisible by 4096. A lower value indicates a higher priority.</p> <p><i>instance_id <value 0-15></i> - The value of the previously configured instance id for which the user wishes to set the priority value. An <i>instance_id</i> of 0 denotes the default <i>instance_id</i> (CIST) internally set on the Switch.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To set the priority value for *instance_id* 2 as 4096:

```
DGS3100# config stp priority 4096 instance_id 2
Success.
DGS3100#
```

config stp mst_config_id

Purpose	To update the MSTP configuration identification.
Syntax	config stp mst_config_id [revision_level <int 0-65535> name <string>]
Description	The config stp mst_config_id command uniquely identifies the MSTP configuration currently configured on the Switch. Information

	entered here is attached to BDPU packets as an identifier for the MSTP region to which it belongs. Switches having the same revision_level, name and identical vlans mapped for STP instance_ids are considered to be part of the same MSTP region.
Parameters	<p><i>revision_level <int 0-65535></i> – The MSTP configuration revision number. The value may be between 0 and 65535. This value, along with the name and identical vlans mapped for STP instance_ids identifies the MSTP region configured on the Switch. The default setting is 0.</p> <p><i>name <string></i> - A string of up to 32 alphanumeric characters to uniquely identify the MSTP region on the Switch. This name, along with the revision_level value and identical vlans mapped for STP instance_ids identifies the MSTP region configured on the Switch. If no name is entered, the default name is the MAC address of the device.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To configure the MSTP region of the Switch with revision_level 10 and the name ‘Trinity’:

```
DGS3100# config stp mst_config_id revision_level 10 name Trinity
```

Success.

```
DGS3100#
```

config stp mst_ports

Purpose	To update the port configuration for a MSTP instance.
Syntax	config stp mst_ports [<portlist> <ch1-32>] instance_id<value 0-15> {internalCost [auto value 1-200000000] priority <value 0-240>}
Description	The config stp mst_ports command updates the port configuration for a STP instance_id. If a loop occurs, the MSTP function uses the port cost to select an interface to put into the forwarding state (if the switch isn't Root). If the switch is Root, then higher priority value for interfaces will influence on selected ports to be forwarding first at connected network devices. In instances where the priority value is identical, the MSTP function implements the lowest port number into the forwarding state and other interfaces are blocked. Remember that lower priority values mean higher priorities for forwarding packets.
Parameters	<p><i><portlist></i> – A port or range of ports to be configured. The port list is specified by listing switch number and the beginning port number on that switch, separated by a colon. Then the highest port number of the range is specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 1:22 specifies switch number 1, port 22. 1:3-22 specifies all of the ports of switch 1, between port 3 and port 22 – in numerical order.</p> <p><i><ch1-32></i> – a port-channel.</p> <p><i>instance_id <value 0-15></i> - The value may be between 0 and 15. An entry of 0 denotes the CIST (Common and Internal Spanning Tree).</p>

<i>internalCost</i> – The relative cost of forwarding packets to specified ports when an interface is selected within an STP instance. The default setting is auto. There are two options:
<ul style="list-style-type: none"> • <i>auto</i> – Specifies setting the quickest route automatically and optimally for an interface. The default value is derived from the media speed of the interface. • <i>value 1-200000000</i> – Specifies setting the quickest route when a loop occurs. The value may be in the range of 1-200000000. A lower <i>internalCost</i> represents a quicker transmission.
<i>priority <value 0-240></i> - The priority for the port interface. The value may be between 0 and 240. A lower number denotes a higher priority. A higher priority designates the interface to forward packets first.
Restrictions Only administrator or operator-level users can issue this command.

Example usage:

To designate ports 1 through 5 on module one, with instance ID 2, to have an auto internalCost and a priority of 16:

```
DGS3100# config stp mst_ports 1:1-5 instance_id 2 internalCost auto
priority 16
```

Success.

```
DGS3100#
```

FORWARDING DATABASE COMMANDS

The Forwarding Database commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
create fdb	<vlan_name 32> <macaddr> port <port>
create multicast_fdb	<vlan_name 32> <macaddr>
config multicast_fdb	<vlan_name 32><macaddr> [add delete] <portlist>
config fdb aging_time	<value 10-630>
delete fdb	<vlan_name 32> <macaddr>
clear fdb	All
show multicast_fdb	{vlan <vlan_name 32> mac_address <macaddr>}
show fdb	{port <port> vlan <vlan_name 32> mac_address <macaddr> static aging_time}
config multicast filtering_mode	[<portlist> <ch1-32> all][forward_unregistered_groups filter_unregistered_groups]
show multicast filtering_mode	{<portlist><ch1-32> all}
config dlf filtering_mode	[<portlist> <ch1-32> all][forward_dlf filter_dlf]
show dlf filtering_mode	{ports<portlist> <ch1-32> all}

Each command is listed in detail, as follows:

create fdb

Purpose	To create a static entry in the unicast MAC address forwarding table (database)
Syntax	create fdb <vlan_name 32> <macaddr> port <port>
Description	The create fdb command creates a static entry in the Switch's unicast MAC address forwarding database.
Parameters	<p><vlan_name 32> – The name of the VLAN on which the MAC address resides.</p> <p><macaddr> – The MAC address to be added to the forwarding table.</p> <p><i>port <port></i> – The port number corresponding to the MAC destination address. The Switch will always forward traffic to the specified device through this port.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To create a unicast MAC FDB entry:

```
DGS3100# create fdb default 00-00-00-00-01-02 port 2
```

Success.

```
DGS3100#
```

create multicast_fdb

Purpose	To create a static entry in the multicast MAC address forwarding table (database).
Syntax	create multicast_fdb <vlan_name 32> <macaddr>
Description	The create multicast_fdb command creates a static entry in the multicast MAC address forwarding table (database).
Parameters	<p><<i>vlan_name 32</i>> – The name of the VLAN on which the MAC address resides.</p> <p><<i>macaddr</i>> – The MAC address that will be added to the forwarding table.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To create multicast MAC forwarding:

```
DGS3100# create multicast_fdb default 01-00-5E-00-00-00
```

Success.

```
DGS3100#
```

config multicast_fdb

Purpose	To configure the Switch's multicast MAC address forwarding database.
Syntax	config multicast_fdb <vlan_name 32><macaddr> [add delete] <portlist>
Description	The config multicast_fdb command configures the multicast MAC address forwarding table.
Parameters	<p><<i>vlan_name 32</i>> – The name of the VLAN on which the MAC address resides.</p> <p><<i>macaddr</i>> – The MAC address that will be added to the forwarding table.</p> <p><i>add</i> – Specifies that the MAC address is to be added to the forwarding table. Delete will remove the MAC address from the forwarding table.</p> <p><i>delete</i> – Specifies that the MAC address is to be removed from the forwarding table.</p> <p><<i>portlist</i>> – A port or range of ports to be configured.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To add multicast MAC forwarding:

```
DGS3100# config multicast_fdb default 01-00-5E-00-00-00 add 1
```

Success.

```
DGS3100#
```

config fdb aging_time

Purpose	To set the aging time of the forwarding database.
Syntax	config fdb aging_time <value 10-630>
Description	The config fdb aging_time command sets the aging time of the forwarding database. The aging time affects the learning process of the Switch. Dynamic forwarding table entries, which are made up of the source MAC addresses and their associated port numbers, are deleted from the table if they are not accessed within the aging time. The aging time can be from 0 to 630 minutes with a default value of 5 minutes. A very long aging time can result in dynamic forwarding table entries that are out-of-date or no longer exist. This may cause incorrect packet forwarding decisions by the Switch. If the aging time is too short however, many entries may be aged out too soon. This will result in a high percentage of received packets whose source addresses cannot be found in the forwarding table, in which case the Switch will broadcast the packet to all ports, negating many of the benefits of having a Switch.
Parameters	<value 0-630> – The aging time for the MAC address forwarding database value, in minutes.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To set the fdb aging time:

```
DGS3100# config fdb aging_time 300
```

Success.

```
DGS3100#
```

delete fdb

Purpose	To delete an entry in the Switch's forwarding database.
Syntax	delete fdb <vlan_name 32> <macaddr>
Description	The delete fdb command deletes an entry in the Switch's MAC address forwarding database.
Parameters	<vlan_name 32> – The name of the VLAN on which the MAC address resides. <macaddr> – The MAC address to be removed from the forwarding table.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To delete a permanent FDB entry:

```
DGS3100# delete fdb default 00-00-00-00-01-02
Success.
DGS3100#
```

clear fdb

Purpose	To clear the Switch's forwarding database of all dynamically learned MAC addresses.
Syntax	clear fdb all
Description	The clear fdb command clears dynamically learned entries from the Switch's forwarding database.
Parameters	<i>all</i> – Clears all dynamic entries in the Switch's forwarding database.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To clear all FDB dynamic entries:

```
DGS3100# clear fdb all
Success.
DGS3100#
```

show multicast_fdb

Purpose	To display the contents of the Switch's multicast forwarding database.
Syntax	show multicast_fdb {vlan <vlan_name 32> mac_address <macaddr>}
Description	The show multicast_fdb command displays the current contents of the Switch's multicast MAC address forwarding database.
Parameters	<i>vlan <vlan_name 32></i> – The name of the VLAN on which the MAC address resides. <i>mac_address <macaddr></i> – The MAC address that will be added to the forwarding table.
Restrictions	None.

Example usage:

To display multicast MAC address table:

```
DGS3100# show multicast_fdb
VLAN Name    : default
MAC Address  : 01-00-5E-00-00-00
Egress Ports : 1-5,26
```

Mode	: Static
Total Entries : 1	
DGS3100#	

show fdb

Purpose	To display the current unicast MAC address forwarding database.
Syntax	show fdb {port <port> vlan <vlan_name 32> mac_address <macaddr> static aging_time}
Description	The show fdb command displays the current contents of the Switch's forwarding database.
Parameters	<p><port> – The port number corresponding to the MAC destination address. The Switch always forwards traffic to the specified device through this port.</p> <p><vlan_name 32> – The name of the VLAN on which the MAC address resides.</p> <p><macaddr> – The MAC address entry in the forwarding table.</p> <p><i>static</i> – Specifies that static MAC address entries are to be displayed.</p> <p><i>aging_time</i> – Displays the aging time for the MAC address forwarding database.</p>
Restrictions	None.

Example usage:

To display unicast MAC address table:

DGS3100# show fdb					
Unicast MAC Address Ageing Time = 300					
VID	VLAN Name	MAC Address	Port	Type	
1	default	00-00-39-34-66-9A	10	Dynamic	
1	default	00-00-51-43-70-00	10	Dynamic	
1	default	00-00-5E-00-01-01	10	Dynamic	
1	default	00-00-74-60-72-2D	10	Dynamic	
1	default	00-00-81-05-00-80	10	Dynamic	
1	default	00-00-81-05-02-00	10	Dynamic	
1	default	00-00-81-48-70-01	10	Dynamic	
1	default	00-00-E2-4F-57-03	10	Dynamic	
1	default	00-00-E2-61-53-18	10	Dynamic	
1	default	00-00-E2-6B-BC-F6	10	Dynamic	
1	default	00-00-E2-7F-6B-53	10	Dynamic	
1	default	00-00-E2-82-7D-90	10	Dynamic	
1	default	00-00-F8-7C-1C-29	10	Dynamic	
1	default	00-01-02-03-04-00	CPU	Self	
1	default	00-01-02-03-04-05	10	Dynamic	

```

1 default 00-01-30-10-2C-C7 10 Dynamic
1 default 00-01-30-FA-5F-00 10 Dynamic
1 default 00-02-3F-63-DD-68 10 Dynamic
More: <space>, Quit: q, One line: <return>I

```

To display the aging time:

```

DGS3100# show fdb aging_time

Unicast MAC Address Aging Time = 5

DGS3100#

```

config multicast filtering_mode

Purpose	To configure multicast filtering.
Syntax	config multicast filtering_mode [<portlist> <ch1-32> all][forward_unregistered_groups filter_unregistered_groups]
Description	The config multicast filtering_mode command enables filtering of multicast addresses.
Parameters	<p><portlist> - A port or range of ports to be configured.</p> <p><ch1-32> - A LAG or range of LAGs to be configured.</p> <p>all - All ports to be configured.</p> <p>forward_unregistered_groups - Forwards unregistered multicast packets.</p> <p>filter_unregistered_groups - Filter unregistered multicast packets.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure multicast filtering

```

DGS3100# config multicast filtering_mode 1
filter_unregistered_groups

Success.

DGS3100#

```

show multicast filtering_mode

Purpose	To display multicast filtering settings on the Switch.
Syntax	show multicast filtering_mode {portlist}<ch1-32> all }
Description	The show multicast filtering_mode command displays the multicast filtering settings..
Parameters	<p><portlist> - A port or range of ports to be configured.</p> <p><ch1-32> - A LAG or range of LAGs to be configured.</p> <p>all - All ports to be configured.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To show multicast filtering settings:

```
DGS3100# show multicast filtering_mode
Success.

DGS3100#
```

config dlf filtering_mode

Purpose	To configure DLF filtering on the Switch.
Syntax	config dlf filtering_mode [<portlist> <ch1-32> all][forward_dlf filter_dlf]
Description	The config DLF filtering_mode command defines DLF filtering or forwarding on selected ports/LAGs or all ports and LAGs.
Parameters	<p><portlist> – A port or range of ports to be configured.</p> <p><ch1-32> – A LAG or range of LAGs to be configured.</p> <p>all – All ports and LAGs to be configured.</p> <p>forward_dlf – Forwards DLF packets.</p> <p>filter_dlf – Filters DLF packets.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure DLF filtering

```
DGS-3100# config dlf filtering_mode all filter_dlf
Success.

DGS-3100#
```

show dlf filtering_mode

Purpose	To display DLF filtering settings on the Switch.
Syntax	show dlf filtering_mode {portlist}<ch1-32> all }
Description	The show dlf filtering_mode command displays the DLF filtering settings.
Parameters	<p><portlist> – A port or range of ports to be configured.</p> <p><ch1-32> – A LAG or range of LAGs to be configured.</p> <p>all – All ports and LAGs to be configured.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To show DLF filtering settings:

```
DGS-3100# show dlf filtering
```

Port DLF Filtering Mode

1:1 Forward_DLF_Packets
1:2 Forward_DLF_Packets
1:3 Forward_DLF_Packets
1:4 Forward_DLF_Packets
1:5 Forward_DLF_Packets
1:6 Forward_DLF_Packets
1:7 Forward_DLF_Packets
1:8 Forward_DLF_Packets
1:9 Forward_DLF_Packets
1:10 Forward_DLF_Packets
1:11 Forward_DLF_Packets
1:12 Forward_DLF_Packets
1:13 Forward_DLF_Packets
1:14 Forward_DLF_Packets
1:15 Forward_DLF_Packets
1:16 Forward_DLF_Packets
1:17 Forward_DLF_Packets
1:18 Forward_DLF_Packets
1:19 Forward_DLF_Packets

DGS-3100#

BROADCAST STORM CONTROL COMMANDS

The Broadcast Storm Control commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config traffic control	{[<portlist> all] state [enable disable] storm_type [broadcast multicast _broadcast dlf_ multicast _broadcast] threshold <int 3500-1000000>} action [drop shutdown] time_interval <int 5-30>}
show traffic control	{ports <portlist>}
config traffic trap	[none storm_occurred]
config traffic control_recover	[<portlist> all]

Each command is listed in detail, as follows:

config traffic control	
Purpose	To configure broadcast / multicast / unknown unicast traffic control.
Syntax	config traffic control {[<portlist> all] state [enable disable] storm_type [broadcast broadcast_multicast broadcast_multicast_dlf] threshold <int 3500-1000000>} action [drop shutdown] time_interval <int 5-30>}
Description	The config traffic control command configures broadcast, multicast and unknown unicast storm control.
Parameters	<p><portlist> - A port or range of ports to be configured.</p> <p><i>all</i> – Specifies all ports on the Switch are to be configured.</p> <p><i>storm_type</i> – The type of broadcast storm for which to configure the traffic control. The options are:</p> <ul style="list-style-type: none"> • <i>broadcast</i> – Enables broadcast storm control only. • <i>multicast_broadcast</i> – Enables broadcast and multicast storm control. • <i>dlf_multicast_broadcast</i> - Enables broadcast, multicast and unknown unicast storm control. <p><int 3500-1000000> – The upper threshold at which the specified traffic control is switched on. The value is the number of broadcast/multicast/dlf packets, in Kbps, received by the Switch that will trigger the storm traffic control measures. The value ranges in size from 3500 to 1000000 Kbps.</p> <p>Action:</p> <p><i>Drop</i> – If threshold is reached, drop packet.</p> <p><i>Shutdown</i> – If packets are dropped for the time interval specified, the port is shut down..</p> <p><i>time_interval <int 5-30></i> - time interval after packets are dropped until the port is shut down.</p>

Restrictions	Only administrator or operator-level users can issue this command.
--------------	--

Example usage:

To configure traffic control and enable broadcast storm control system wide:

```
DGS3100# config traffic control all state enable threshold 15000
storm_type multicast_broadcast
```

Success.

```
DGS3100#
```

show traffic control

Purpose	To display current traffic control settings.
Syntax	show traffic control {ports <portlist>}
Description	The show traffic control command displays the current storm traffic control configuration on the Switch.
Parameters	<i>ports <portlist></i> - A port or range of ports whose settings are to be displayed.
Restrictions	None.

Example usage:

To display traffic control setting for ports 1-5:

```
DGS3100# show traffic control
```

Traffic Control

Port	Threshold	Broadcast Storm	Multicast Storm	Destination Lookup Fail
1:1	3500	disable	disable	disable
1:2	3500	disable	disable	disable
1:3	3500	disable	disable	disable
1:4	3500	disable	disable	disable
1:5	3500	disable	disable	disable
1:6	3500	disable	disable	disable
1:7	3500	disable	disable	disable
1:8	3500	disable	disable	disable
1:9	3500	disable	disable	disable
1:10	3500	disable	disable	disable
1:11	3500	disable	disable	disable
1:12	3500	disable	disable	disable
1:13	3500	disable	disable	disable
1:14	3500	disable	disable	disable
1:15	3500	disable	disable	disable
1:16	3500	disable	disable	disable
1:17	3500	disable	disable	disable

CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a ALL

config traffic trap

Purpose	To enable or disable the trap regarding occurrence of Storm Control
Syntax	config traffic trap [none storm_occurred]
Description	Use this command to configure the system to show a trap when a storm attack occurred on a port
Parameters	<i>none</i> – no trap will be shown <i>storm_occurred</i> – a trap will be shown when a storm occurred
Restrictions	None

Example usage:

To configure the traffic trap:

```
DGS-3100# config traffic trap storm_occurred

Success.
DGS-3100#
```

config traffic control_recover

Purpose	To recover a port that was shutdown due to a storm traffic
Syntax	config traffic control_recover [<portlist> all]
Description	After a port is shut down due to a storm traffic, use this command to recover it manually.
Parameters	<i>ports <portlist></i> – A port or range of ports whose need to be recovered
Restrictions	Only ports that were shutdown due to a storm traffic will be recovered

Example usage:

To configure the traffic control recover port settings:

```
DGS-3100# config traffic control_recover 1:3

Success.
DGS-3100#
```

QOS COMMANDS

The QoS commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config scheduling	<class_id 0-3> max_packet <value 0-15>
show scheduling	
config bandwidth_control	[<portlist> all] {rx_rate [no_limit <value 3500-1000000>] tx_rate [no_limit <value 64-1000000>]}
show bandwidth_control	[<portlist> all]
config 802.1p user_priority	<priority 0-7> <class_id 0-3>
show 802.1p user_priority	
config 802.1p default_priority	[<portlist> all] <priority 0-7>
show 802.1p default_priority	{<portlist>}
config scheduling_mechanism	<class_id 0-3> [strict round_robin]
show scheduling_mechanism	
config rate_limit	[<portlist> all] [disable <value 3500-1000000>]
show rate_limit	[<portlist> all]
config dscp user_priority	[<priority 0-63> <class_id 0-3>]
show dscp user_priority	

Each command is listed in detail, as follows:

config scheduling

Purpose	To configure traffic scheduling for each of the Switch's QoS queues.
Syntax	config scheduling <class_id 0-3> max_packet <value 0-15>
Description	The config scheduling command configures traffic scheduling for each of the Switch's QoS queues. The Switch contains four hardware classes of service. Incoming packets must be mapped to one of these four hardware queues. This command is used to specify the rotation by which these four

	<p>hardware queues are emptied.</p> <p>The Switch's default (if the config scheduling command is not used) is to empty the hardware queues in order – from the highest priority queue (hardware class 3) to the lowest priority queue (hardware class 0). Each hardware queue transmits all of the packets in its buffer before allowing the next lower priority queue to transmit its packets. When the lowest hardware priority queue has finished transmitting all of its packets, the highest hardware priority queue can again transmit any packets it may have received.</p> <p>The max_packets parameter allows the user to specify the maximum number of packets a given hardware priority queue can transmit before allowing the next lowest hardware priority queue to begin transmitting its packets. A value between 0 and 15 can be specified. For example, if a value of 3 is specified for all the queues, then the highest hardware priority queue (number 3) will be allowed to transmit 3 packets – then the next lowest hardware priority queue (number 2) will be allowed to transmit 3 packets, and so on, until all of the queues have transmitted 3 packets. The process will then repeat.</p>
Parameters	<p><class_id 0-3> – The hardware classes of service to which the config scheduling command is to be applied. The four hardware classes of service are identified by number (from 0 to 3) with class 3 having the highest priority.</p> <p>max_packet <value 0-15> – Specifies the maximum number of packets the above specified priority class of service is allowed to transmit before allowing the next lower priority class of service to transmit its packets. The value may be between 0 and 15 packets. The default value is 1 for <i>class_id</i> 0, 2 for <i>class_id</i> 1, 4 for <i>class_id</i> 2, and 8 for <i>class_id</i> 3.</p>
Restrictions	Only administrator or operator level users can issue this command. This command is usable only if the device was configured to work in round robin scheduling (config scheduling mechanism)

Example usage:

To configure traffic scheduling:

```
DGS3100# config scheduling 3 max_packet 15
Success.

DGS3100#
```

show scheduling

Purpose	To display the currently configured traffic scheduling on the Switch.
Syntax	show scheduling
Description	The show scheduling command displays the current configuration for the maximum number of packets (<i>max_packet</i>) value assigned to the four priority classes of service on the Switch. The Switch empties the four hardware queues in order, from the highest priority (class 3) to the lowest priority (class 0).
Parameters	None.
Restrictions	None.

Example usage:

To display the current scheduling configuration:

```
DGS3100# show scheduling
```

QOS Output Scheduling

MAX. Packet

Class-0	1
Class-1	2
Class-2	3
Class-3	4

```
DGS3100#
```

config bandwidth_control

Purpose	To configure bandwidth control on the Switch.
Syntax	config bandwidth control [<portlist> all] {rx_rate [no_limit <value 3500-1000000>] tx_rate [no_limit <value 64-1000000>]}
Description	The config bandwidth_control command defines bandwidth control.
Parameters	<p><i>portlist</i> - A port or range of ports to be configured.</p> <p><i>all</i> - Specifies that the config bandwidth_control command applies to all ports on the Switch.</p> <p><i>rx_rate</i> - Enables ingress rate limiting <ul style="list-style-type: none"> • <i>no_limit</i> – Indicates no limit is defined. • <i><value 3500–1000000></i> – Indicates a range between 3500-100000 kbps. <p><i>tx_rate</i> – Enables egress rate limiting. <ul style="list-style-type: none"> • <i>no_limit</i> – Indicates no limit is defined. • <i><value 64-1000000></i> – Indicates a range between 64-1000000 kbps. </p> </p>
Restrictions	None.

Example usage:

To configure bandwidth control configuration::

```
DGS3100# config bandwidth_control all rx_rate no_limit
```

Success.

```
DGS3100#
```

show bandwidth_control

Purpose	To display bandwidth control settings on the Switch.
---------	--

Syntax	show bandwidth control [<portlist> all]
Description	The show bandwidth_control command displays bandwidth control.
Parameters	<i>portlist t</i> – A port or range of ports to be configured. <i>all</i> – Specifies that the show bandwidth_control command applies to all ports on the Switch.
Restrictions	None.

Example usage:

To display the bandwidth control configuration:

```
DGS3100# show bandwidth_control all
Bandwidth Control Table

Port RX Rate TX Rate
_____
1 no_limit no_limit
2 no_limit no_limit
3 no_limit no_limit
4 no_limit no_limit
5 no_limit no_limit
6 no_limit no_limit
7 no_limit no_limit
8 no_limit no_limit
9 no_limit no_limit
10 no_limit no_limit
11 no_limit no_limit
12 no_limit no_limit
13 no_limit no_limit
14 no_limit no_limit
15 no_limit no_limit
16 no_limit no_limit
17 no_limit no_limit

Total entries : 17
DGS3100#
```

config 802.1p user_priority

Purpose	To map the 802.1p user priority of an incoming packet to one of the four hardware classes of service available on the Switch.
Syntax	config 802.1p user_priority <priority 0-7> <class_id 0-3>
Description	The config 802.1p user_priority command configures the way the Switch maps an incoming packet, based on its 802.1p user priority tag, to one of the four hardware priority classes of service available on the Switch. The Switch's default is to map the incoming 802.1p priority values to the four hardware classes of service according to the following chart:

	802.1p value	Switch Priority Queue	Switch Priority Queue(stack)
0	1	0	0
1	0	0	0
2	0	0	0
3	1	0	0
4	2	1	1
5	2	1	1
6	3	2	2
7	3	2	2

Parameters <priority 0-7> – The 802.1p priority value (0 to 7) to map to one of the Switch's four hardware priority classes of service.
 <class_id 0-3> – The Switch's hardware priority class of service (0 to 3) to map to the 802.1p priority value specified above.

Restrictions Only administrator or operator level users can issue this command.

Example usage:

To configure 802.1 user priority on the Switch:

```
DGS3100# config 802.1p user_priority 1 3

Success.

DGS3100#
```

show 802.1p user_priority

Purpose	To display the current mapping between an incoming packet's 802.1p priority value and one of the Switch's eight hardware priority classes of service.
Syntax	show 802.1p user_priority
Description	The show 802.1p user_priority command displays the current mapping of an incoming packet's 802.1p priority value to one of the Switch's four hardware priority queues.
Parameters	None.
Restrictions	None.

Example usage:

To show 802.1p user priority:

```
DGS3100# show 802.1p user_priority

QOS Class of Traffic

Priority-0 -> <Class-0>
Priority-1 -> <Class-0>
Priority-2 -> <Class-0>
Priority-3 -> <Class-1>
Priority-4 -> <Class-1>
```

```

Priority-5 -> <Class-2>
Priority-6 -> <Class-2>
Priority-7 -> <Class-3>

```

```
DGS3100#
```

config 802.1p default_priority

Purpose	To assign an 802.1p priority tag to an incoming untagged packet that has no 802.1p priority tag.
Syntax	config 802.1p default_priority [<portlist> all] <priority 0-7>
Description	The config 802.1p default_priority command specifies the 802.1p priority value an untagged, incoming packet is assigned before being forwarded to its destination.
Parameters	<p><portlist> – A port or range of ports to be configured.</p> <p><i>all</i> – Specifies that the config 802.1p default_priority command applies to all ports on the Switch.</p> <p><priority 0-7> – The 802.1p priority value that an untagged, incoming packet is granted before being forwarded to its destination.</p>
Restrictions	Only administrator or operator level users can issue this command.

Example usage:

To configure 802.1p default priority on the Switch:

```

DGS3100# config 802.1p default_priority all 5

Success.

DGS3100#

```

show 802.1p default_priority

Purpose	To display the currently configured 802.1p priority value that is assigned to an incoming, untagged packet before being forwarded to its destination.
Syntax	show 802.1p default_priority {<portlist>}
Description	The show 802.1p default_priority command displays the currently configured 802.1p priority value that is assigned to an incoming, untagged packet before being forwarded to its destination.
Parameters	<portlist> – A port or range of ports to be displayed.
Restrictions	None.

Example usage:

To display the current 802.1p default priority configuration on the Switch:

```

DGS3100# show 802.1p default_priority

Port  Priority
----- -----

```

```

1 0
2 0
3 0
4 0
5 0
6 0
7 0
8 0
9 0
10 0
11 0
12 0
13 0
14 0
15 0
16 0
17 0
18 0
19 0
20 0

```

More: <space>, Quit: q, One line: <return>!

config scheduling_mechanism

Purpose	To configure the scheduling mechanism for the QoS function.
Syntax	config scheduling_mechanism <class_id 0-3> [strict round_robin]
Description	<p>The config scheduling_mechanism command configures the scheduling mechanism for the QoS function. It allows the user to select between a round robin (WRR) and a strict mechanism for emptying the priority classes of service of the QoS function. The Switch contains four hardware priority classes of service. Incoming packets must be mapped to one of these four hardware priority classes of service, or queues. This command is used to specify the rotation by which these four hardware priority queues are emptied.</p> <p>The Switch's default is to empty the four hardware priority queues in order – from the highest priority hardware queue (class 3) to the lowest priority hardware queue (class 0). Each queue will transmit all of the packets in its buffer before allowing the next lower priority queue to transmit its packets. A lower priority hardware queue will be pre-empted from emptying its queue if a packet is received on a higher priority hardware queue. The packet received on the higher priority hardware queue transmits its packet before allowing the lower priority hardware queue to resume clearing its queue.</p>
Parameters	<p><<i>class_id 0-3</i>> – This specifies to which of the four hardware classes of service the config scheduling_mechanism command applies. The four hardware classes of service are identified by number (from 0 to 3), with the 0 queue having the lowest priority.</p> <p><i>strict</i> – Specifies that the highest class of service is the first to be</p>

Restrictions	processed. That is, the highest class of service should finish emptying before the others begin. <i>round_robin</i> – Specifies that the priority classes of service are to empty packets in a weighted roundrobin (WRR) order.
	Only administrator or operator level users can issue this command.

Example usage:

To configure the traffic scheduling mechanism for each COS queue:

```
DGS3100# config scheduling_mechanism 2 strict

Success.

DGS3100#
```

show scheduling_mechanism

Purpose	To display the current traffic scheduling mechanisms in use on the Switch.
Syntax	show scheduling_mechanism
Description	The show scheduling_mechanism command displays the current traffic scheduling mechanisms in use on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To show the scheduling mechanism:

```
DGS3100# show scheduling_mechanism

QOS scheduling_mechanism
CLASS ID  Mechanism
-----
Class-0    strict
Class-1    strict
Class-2    strict
Class-3    strict

DGS3100#
```

config rate_limit

Purpose	To enable rate limitation of specific ingress ports.
Syntax	config rate_limit [<portlist> all] [disable <value 3500-1000000>]
Description	The config rate_limit command enables setting of rate limitation of ingress ports.
Parameters	<portlist> – A port or range of ports to be set.

all – Specifies that all ports are to be configured.
disable – Disables rate limiting.
<value 3500-1000000> The rate limit value. The value may be between 3500 and 1000000.

Restrictions None.

Example usage:

To configure a rate limit of egress port 1:

```
DGS3100# config rate_limit 1:1
```

```
Success.
```

```
DGS3100#
```

show rate_limit

Purpose	To show the rate limit of specific egress ports.
Syntax	show rate_limit [<portlist> all]
Description	The show rate_limit command displays the rate limit of an egress port.
Parameters	<i><portlist></i> – A port or range of ports whose rate limit is to be displayed. <i>all</i> – Specifies that all ports are to be displayed.
Restrictions	None.

Example usage:

To show a port's rate limit:

```
DGS3100# show rate_limit all
```

Current rate limit

Port	Rate Limit
1	3500
2	3500
3	3500
4	3500
5	3500
6	3500
7	3500
8	3500
9	3500
10	3500
11	3500
12	3500
13	3500
14	3500
15	3500

```

16 3500
17 3500
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a ALL

```

config dscp user_priority

Purpose	To enable setting the DSCP User Priority
Syntax	config dscp user_priority [<priority 0-63> <class_id 0-3>]
Description	The config dscp user_priority command enables mapping the DSCP value (the priority) to a specific queue (the class_id)
Parameters	<priority 0-63> – The selected priority. The value may be between 0 and 63. <class_id 0-3> The class_id (queue) mapped to the priority. The value may be between 0 and 3.
Restrictions	None.

Example usage:

To map the dscp user priority 22 to the class_id 1:

```

DGS-3100# config dscp user_priority 22 1

Success.
DGS-3100#

```

show dscp user_priority

Purpose	To show the DSCP User Priority settings.
Syntax	show dscp user_priority
Description	The show dscp user_priority command displays the class_ids assigned to each user priority.
Restrictions	None.

Example usage:

To show the dscp user priority:

```

DGS-3100# show dscp user_priority

QOS Class of Traffic

Priority-0 -> <Class-0>
Priority-1 -> <Class-0>
Priority-2 -> <Class-0>
Priority-3 -> <Class-0>
Priority-4 -> <Class-0>
Priority-5 -> <Class-0>
Priority-6 -> <Class-0>
Priority-7 -> <Class-0>

```

```
Priority-8 -> <Class-0>
Priority-9 -> <Class-0>
Priority-10 -> <Class-0>
Priority-11 -> <Class-0>
Priority-12 -> <Class-0>
Priority-13 -> <Class-0>
Priority-14 -> <Class-0>
Priority-15 -> <Class-0>
Priority-16 -> <Class-1>
Priority-17 -> <Class-1>
Priority-18 -> <Class-1>
Priority-19 -> <Class-1>
Priority-20 -> <Class-1>
Priority-21 -> <Class-1>
DGS-3100#CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a ALL
```

PORT MIRRORING COMMANDS

The Port Mirroring commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config mirror	target <port> source <port> direction [ingress egress both]
delete mirror	target <port> source <port>
show mirror	

Each command is listed in detail, as follows:

config mirror

Purpose	To configure a mirror port – source port pair on the Switch.
Syntax	config mirror target <port> source <port> direction [ingress egress both]
Description	The config mirror command allows a port to have all of its traffic also sent to a designated port, where a network sniffer or other device can monitor the network traffic. In addition, one can specify that only traffic received by or sent by one or both is mirrored to the target port.
Parameters	<p><i>target <port></i> – Specifies the port that mirrors traffic forwarding.</p> <p><i>source <port></i> – Specifies the port or ports being mirrored. This cannot include the target port.</p> <p><i>ingress</i> – Allows mirroring of packets received by (flowing into) the source port.</p> <p><i>egress</i> – Allows mirroring of packets sent to (flowing out of) the source port.</p> <p><i>both</i> – Allows mirroring of all the packets received or sent by the source port.</p> <p><i>Comment:</i> The user can define up to 8 source ports and one destination port. One source port can be configured each time using one CLI command, So in order to configure multiple source ports, multiple CLI commands should be used.</p>
Restrictions	A target port cannot be listed as a source port. Only Administrator or operator-level users can issue this command.

Example usage:

To add the mirroring ports:

```
DGS3100# config mirror source 1 target port 2 direction ingress
```

Success.

```
DGS3100#
```

delete mirror

Purpose	To remove a previously entered port mirroring configuration.
Syntax	delete mirror target <port> source <port>
Description	The delete mirror command removes a previously configured mirror port – source port pair on the Switch.
Parameters	<p><i>target <port></i> – Specifies the port that mirrors traffic forwarding.</p> <p><i>source <port></i> – Specifies the port or ports being mirrored. This cannot include the target port.</p> <p><i>Comment:</i> One source port can be deleted each time using one CLI command, So in order to delete multiple source ports, multiple CLI commands should be used.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To delete a mirroring configuration:

```
DGS3100# delete mirror source 1 target port 2 ingress
Success.
DGS3100#
```

show mirror

Purpose	To show the current port mirroring configuration on the Switch.
Syntax	show mirror
Description	The show mirror command displays the current port mirroring configuration on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display mirroring configuration:

```
DGS3100# show mirror

Current Settings
Mirror Status      : Enabled
Target Port for Ingress : 2
Target Port for Egress  : 3
Mirrored Port       : 1

DGS3100#
```

VLAN COMMANDS

The VLAN commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
create vlan	<vlan_name 32> {tag <vlanid 2-4094>}
delete vlan	<vlan_name 32>
config vlan	vlanid <vlanid 1-4094> [[add [tagged untagged forbidden] delete] [<portlist> <ch1-32>] vlan_name <vlan_name 32>]
config gvrp	[<portlist> <ch1-32> all] { state [enable disable] { ingress_checking [enable disable] acceptable_frame [tagged_only admit_all] pvid <vlanid 1-4094>} }
enable gvrp	
disable gvrp	
show vlan	{<vlan_name 32>}
show gvrp	{<portlist> <ch1-32>}
enable vlan_trunk	
disable vlan_trunk	
show vlan_trunk	
config vlan_trunk ports	<portlist> state [enable disable]
enable asymmetric_vlan	
disable asymmetric_vlan	
show asymmetric_vlan	
config voice_vlan	[enable [<vlan_name 32> vlanid <vlanid 1-4094>] disable] oui-table [add <mac-address-prefix> description <string 32> delete <mac-address-prefix>] [add <portlist> {mode secure} delete <portlist>] cos <0-7> {remark} aging_time <1-43200>
show voice vlan	[ethernet <interface> port-channel port-channel]

Each command is listed in detail, as follows:

create vlan

Purpose	To create a VLAN on the Switch.
Syntax	create vlan <vlan_name 32> {tag <vlanid 2-4094>}
Description	The create vlan command creates a VLAN on the Switch.

Parameters	<code><vlan_name 32></code> – The name of the VLAN to be created. <code>tag <vlanid 2-4094></code> – The VLAN ID of the VLAN to be created. The allowed values range from 2 to 4094.
Restrictions	Each VLAN name can be up to 32 characters. If the VLAN is not given a tag, it will be a port-based VLAN. Only administrator or operator-level users can issue this command.

Example usage:

To create a VLAN v1, tag 2:

```
DGS3100# create vlan v1 tag 2
```

Success.

```
DGS3100#
```

delete vlan

Purpose	To delete a previously configured VLAN on the Switch.
Syntax	delete vlan <vlan_name 32>
Description	The delete vlan command deletes a previously configured VLAN on the Switch.
Parameters	<code><vlan_name 32></code> – The name of the VLAN to be deleted.
Restrictions	Only administrator or operator-level users can issue this command. A user is required to disable Guest VLAN before deleting a VLAN.

Example usage:

To remove a vlan v1:

```
DGS3100# delete vlan v1
```

Success.

```
DGS3100#
```

config vlan

Purpose	To add additional ports to a previously configured VLAN and to modify a VLAN name.
Syntax	config vlan vlanid <vlanid 1-4094> [[add [tagged untagged forbidden] delete] [<portlist> <ch1-32>] vlan_name <vlan_name 32>]
Description	The config vlan command allows the user to add or delete ports to the port list of a previously configured VLAN. You can specify the additional ports as tagging, untagging, or forbidden. The default is to assign the ports as untagged.
Parameters	<code><vlan_id></code> – The ID of the VLAN to which to add ports. <code>add</code> – Specifies that ports are to be added to a previously created

vlan.
<i>delete</i> - Specifies that ports are to be deleted from a previously created vlan.
<i>tagged</i> - Specifies the additional ports as tagged.
<i>untagged</i> - Specifies the additional ports as untagged.
<i>forbidden</i> - Specifies the additional ports as forbidden.
<i><portlist></i> - A port or range of ports to be added to or deleted from the VLAN.
<i><ch1-32></i> - assigns ports to a port-channel.
<i><vlan_name 32></i> - The name of the configured VLAN ID.
Restrictions
Only administrator or operator-level users can issue this command.

Example usage:

To add ports 4 through 8 at device #1 as tagged ports to the VLAN v2:

```
DGS3100# config vlan vlanid 2 add tagged 1:4-8
```

Success.

```
DGS3100#
```

config gvrp

Purpose	To configure GVRP on the Switch.
Syntax	config gvrp [<portlist> <ch1-32> all] { state [enable disable] { ingress_checking [enable disable] acceptable_frame [tagged_only admit_all] pvid <vlanid 1-4094>} }
Description	The config gvrp command configures the Group VLAN Registration Protocol on the Switch. The user can configure ingress checking and acceptable frame tagged only, the sending and receiving of GVRP information, and the Port VLAN ID (PVID).
Parameters	<p><i><portlist></i> - A port or range of ports for which to configure GVRP.</p> <p><i>ch 1-32</i> - configure GVRP on LAGs.</p> <p><i>all</i> - configure GVRP on ports.</p> <p><i>state [enable disable]</i> - enable and disable GVRP</p> <p><i>ingress_checking [enable disable]</i> - Enables or disables ingress checking for the specified port list.</p> <p><i>acceptable_frame [tagged_only admit_all]</i> - Defines the type of frame accepted. Acceptable frames can be limited to tagged frames only (<i>tagged_only</i>) or can accept tagged and untagged (<i>admit_all</i>).</p> <p><i>pvid <vlanid 1-4094></i> - Specifies the default VLAN associated with the port, by VLAN ID.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To set the ingress checking status, the sending and receiving GVRP information :

```
DGS3100# config gvrp 1-4 state enable ingress_checking enable
acceptable_frame tagged_only pvid 2
```

Success.

DGS3100#

enable gvrp

Purpose	To enable GVRP on the Switch.
Syntax	enable gvrp
Description	The enable gvrp command, along with the disable gvrp command below, is used to enable and disable GVRP on the Switch, without changing the GVRP configuration on the ports and the LAGs.
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To enable the generic VLAN Registration Protocol (GVRP):

DGS3100# enable gvrp

Success.

DGS3100#

disable gvrp

Purpose	To disable GVRP on the Switch.
Syntax	disable gvrp
Description	The disable gvrp command, along with the enable gvrp command above, is used to enable and disable GVRP on the Switch, without changing the GVRP configuration on the ports and the LAGs.
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To disable the Generic VLAN Registration Protocol (GVRP):

DGS3100# disable gvrp

Success.

DGS3100#

show vlan

Purpose	To display the current VLAN configuration on the Switch
Syntax	show vlan {<vlan_name 32>}
Description	The show vlan command displays summary information about each

	VLAN including the VLAN ID, VLAN name, the Tagging/Untagging status, and the Member/Non-member/Forbidden status of each port that is a member of the VLAN.
Parameters	<vlan_name 32> – The name of the VLAN whose settings are to be displayed.
Restrictions	None.

Example usage:

To display the Switch's current VLAN settings:

```
DGS3100# show vlan

VID : 1           VLAN Name : default
VLAN TYPE : static
Member ports : 1-24
Static ports : 1-24
Untagged ports : 1-24g
Forbidden ports :

Total Entries : 1

DGS3100#
```

show gvrp

Purpose	To display the GVRP status for a port list or port channel on the Switch.
Syntax	show gvrp {<portlist> <ch1-32>}
Description	The show gvrp command displays the GVRP status for a port list or a port channel on the Switch.
Parameters	<portlist> – Specifies a port or range of ports for which the GVRP status is to be displayed. <ch1-32> – Specifies a port-channel.
Restrictions	None.

Example usage:

To display GVRP port status:

```
DGS3100# show gvrp 1:1-5

Global GVRP : Disabled

Port  PVID  GVRP      Ingress Checking  Acceptable Frame Type
-----  -----  -----  -----  -----
1:1    1     Disabled  Enabled        All Frames
1:2    1     Disabled  Enabled        All Frames
1:3    1     Disabled  Enabled        All Frames
1:4    1     Disabled  Enabled        All Frames
1:5    1     Disabled  Enabled        All Frames
```

Total Entries : 5

enable vlan_trunk

Purpose	To enable VLAN trunking on the switch.
Syntax	enable vlan_trunk
Description	The enable vlan_trunk command, along with the disable vlan_trunk command below, is used to enable and disable VLAN trunking on the Switch, without changing the VLAN trunking configuration on the ports.
Parameters	<i>None.</i>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To enable vlan_trunk on the switch:

DGS-3100# enable vlan_trunk

Success.

DGS-3100#

disable vlan_trunk

Purpose	To disable VLAN Trunking on the switch.
Syntax	disable vlan_trunk
Description	The disable vlan_trunk command, along with the enable vlan_trunk command below, is used to disable and enable VLAN Trunking on the Switch, without changing the VLAN Trunking configuration on the ports.
Parameters	<i>None.</i>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To disable vlan_trunk on the switch:

DGS-3100# disable vlan_trunk

Success.

DGS-3100#

show vlan_trunk

Purpose	To display the current VLAN Trunking configuration on the Switch
Syntax	show vlan_trunk

Description	The show vlan_trunk command displays summary information about VLAN trunking status and configured ports.
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To display the Switch's current VLAN_trunk settings:

```
DGS-3100# show vlan_trunk

Vlan Trunking : Enabled

Configured Ports : 1:(1-2)

DGS-3100#
```

config vlan_trunk ports

Purpose	To configure VLAN Trunking port settings on the Switch.
Syntax	config vlan_trunk ports <portlist> state [enable disable]
Description	The config vlan_trunk ports command configures the VLAN trunking port settings on the Switch. The user can enable VLAN Trunking and define ports to be added to the VLAN Trunking settings.
Parameters	<p><i><portlist></i> – A port or range of ports for which to configure VLAN Trunking.</p> <p><i>state [enable disable]</i> – enable and disable VLAN trunking.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To define VLAN Trunking:

```
DGS3100# config vlan_trunk ports 1-2 state disable

Success.

DGS3100#
```

enable asymmetric_vlan

Purpose	To enable Asymmetric VLAN on the switch.
Syntax	enable asymmetric_vlan
Description	The enable asymmetric_vlan command, along with the disable asymmetric_vlan command below, is used to enable and disable Asymmetric VLAN on the Switch
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To enable Asymmetric VLAN on the switch:

```
DGS-3100# enable asymmetric_vlan
```

Success.

```
DGS-3100#
```

disable asymmetric_vlan

Purpose	To disable Asymmetric VLAN on the switch.
Syntax	disable asymmetric_vlan
Description	The disable asymmetric_vlan command, along with the enable asymmetric_vlan command below, is used to disable and enable Asymmetric VLAN on the Switch.
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To disable asymmetric_vlan on the switch:

```
DGS-3100# disable asymmetric_vlan
```

Success.

```
DGS-3100#
```

show asymmetric_vlan

Purpose	To display the Asymmetric VLAN status on the Switch.
Syntax	show asymmetric_vlan
Description	The show asymmetric_vlan command displays the Asymmetric VLAN status on the Switch.
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To display Asymmetric VLAN status:

```
DGS-3100# show asymmetric_vlan
```

Asymmetric VLAN : Enable

```
DGS-3100#
```

config voice_vlan

Purpose	To configure the Voice_VLAN settings on the Switch.
Syntax	config voice_vlan [enable [<vlan_name 32> vlanid <vlanid 1-4094> disable] oui-table [add <mac-address-prefix> description <string 32> delete <mac-address-prefix>] [add <portlist> {mode secure} delete <portlist>] cos <0-7> {remark} aging_time <1-43200>
Description	The config voice vlan command configures the various parameters of Voice VLAN.
Parameters	<p><i>add <mac-address-prefix></i> - adds the specified MAC address to the voice VLAN OUI table. (Length: 3 bytes)</p> <p><i>description <string 32></i> - adds the specified text as a description of the specified MAC address to the voice VLAN OUI table. (Length: 1-32 characters)</p> <p><i>delete < mac-address-prefix></i> - removes the specified MAC address from the voice VLAN OUI table. (Length: 3 bytes)</p> <p><i>add <portlist></i> - configure specific ports to be joined automatically to the Voice VLAN.</p> <p><i>mode secure</i> - If mode secured is stated, the ports will be added automatically in secure mode, so that packets that are classified to the voice VLAN with a source MAC address that is not a telephony MAC address(defined by the voice VLAN OUI table) are discarded.</p> <p><i>delete <portlist></i> - remove a port list from the Voice VLAN</p> <p><i>vlanid <vlanid 1-4094></i> - .The VLAN ID number.</p> <p><i>cos <0-7></i> - Defines the Class of Service tag , the default is 6.</p> <p><i>remark</i> – the modified CoS tag will be written in the Voice packet.</p> <p><i>aging_time <1-43200></i> - Voice VLAN ageing timeout interval (in minutes), the default is 1440 minutes.</p>
Restrictions	None.

Example usage:

To configure the Voice VLAN status:

```
DGS-3100# config voice_vlan add 1-2 mode secure
```

```
Success.
```

```
DGS-3100#
```

show voice vlan

Purpose	To display the Voice VLAN status on the Switch.
Syntax	show voice vlan [ethernet <interface> port-channel port-channel]
Description	The show voice vlan command displays the Voice VLAN status on the Switch.
Parameters	<i>ethernet <interface></i> - specifies the Ethernet port number.

port-channel <port-channel> - specifies the port-channel number.

Restrictions	None.
--------------	-------

Example usage:

To display Voice VLAN status:

DGS-3100# show voice vlan			
Aging timeout: 1440 minutes			
OUI table			
MAC Address - Prefix Description			
<hr/>			
00:E0:BB	3COM		
00:03:6B	Cisco		
00:E0:75	Veritel		
00:D0:1E	Pingtel		
00:01:E3	Siemens		
00:60:B9	NEC/Philips		
00:0F:E2	Huawei-3COM		
Voice VLAN ID: 8			
CoS: 6			
Remark: Yes			
 Interface[Stacking] Enabled Secure Activated			
<hr/>			
1/1	Yes	Yes	yes
1/2	Yes	Yes	no
1/3	Yes	Yes	yes
1/4	Yes	Yes	yes
1/5	No	No	—
1/6	No	No	—
1/7	No	No	—
1/8	No	No	—
1/9	No	No	—

LINK AGGREGATION COMMANDS

The Link Aggregation commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
create link_aggregation	group_id <value 1-32> {type [lacp static]}
delete link_aggregation	group_id <value 1-32>
config link_aggregation	group_id <value 1-32> { ports <portlist> state [enable disable] algorithm [mac_source_dest ip_source_dest both_ip_mac_source_dest]}
show link_aggregation	{group_id <value 1-32>} {algorithm}

Each command is listed in detail, as follows:

create link_aggregation

Purpose	To create a link aggregation group on the Switch.
Syntax	create link_aggregation group_id <value 1-32> {type [lacp static]}
Description	The create link_aggregation command creates a link aggregation group with a unique identifier.
Parameters	<p><i>group_id <value 1-32></i> – Specifies the group ID. The Switch allows up to 32 link aggregation groups to be configured. The group number identifies each of the groups.</p> <p><i>type</i> – Specify the type of link aggregation used for the group. If the type is not specified the default type is <i>static</i>.</p> <ul style="list-style-type: none"> • <i>lacp</i> – This designates the port group as LACP compliant. LACP allows dynamic adjustment to the aggregated port group. LACP compliant ports may be further configured (see config lacp_ports). LACP compliant must be connected to LACP compliant devices. The maximum ports that can be configure in the same LACP are 16. • <i>static</i> – This designates the aggregated port group as static. Static port groups can not be changed as easily as LACP compliant port groups since both linked devices must be manually configured if the configuration of the trunked group is changed. If static link aggregation is used, be sure that both ends of the connection are properly configured and that all ports have the same speed/duplex settings. The maximum ports that can be configure in the same static LAG are 8
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To create a link aggregation group:

```
DGS3100# create link_aggregation group_id 1
```

Success.

DGS3100#

delete link_aggregation

Purpose	To delete a previously configured link aggregation group.
Syntax	delete link_aggregation group_id <value 1-32>
Description	The delete link_aggregation group_id command deletes a previously configured link aggregation group.
Parameters	<i>group_id <value 1-32></i> – Specifies the group ID. The Switch allows up to 32 link aggregation groups to be configured. The group number identifies each of the groups.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To delete link aggregation group:

DGS3100# delete link_aggregation group_id 1

Success.

DGS3100#

config link_aggregation

Purpose	To configure a previously created link aggregation group.
Syntax	config link_aggregation group_id <value 1-32> { ports <portlist> state [enable disable] algorithm [mac_source_dest ip_source_dest both_ip_mac_source_dest] }
Description	The config link_aggregation command configures a link aggregation group created with the create link_aggregation command above.
Parameters	<p><i>group_id <value 1-32></i> – Specifies the group ID. The Switch allows up to 32 link aggregation groups to be configured. The group number identifies each of the groups.</p> <p><i>ports <portlist></i> – Specifies a list of ports to belong to the link aggregation group. Ports will be listed in only one aggregation group and link aggregation groups can not overlap to each other. The user must configure at least two ports in LAG.</p> <p><i>state [enable disable]</i> – Enables or disables the specified link aggregation group.</p> <p><i>algorithm</i> – Specifies the source for the link aggregation hash algorithm, MAC address, IP address, or both addresses.</p>
Restrictions	Only administrator or operator-level users can issue this command. Link aggregation groups may not overlap.

Example usage:

To define a load-sharing group of ports, group-id 1 with group members ports 5-7 plus port 9:

```
DGS3100# config link_aggregation group_id 1 ports 5-7,9
Success.

DGS3100#
```

show link_aggregation

Purpose	To display the current link aggregation configuration on the Switch.
Syntax	show link_aggregation {group_id <value 1-32>} {algorithm}
Description	The show link_aggregation command displays the current link aggregation configuration of the Switch.
Parameters	<p><i>group_id <value 1-32></i> – Specifies the group ID. The Switch allows up to 32 link aggregation groups to be configured. The group number identifies each of the groups.</p> <p><i>algorithm</i> – shows which hash Algorithm is used for link aggregation distribution.</p>
Restrictions	None.

Example usage:

To display Link Aggregation configuration:

```
DGS3100# show link_aggregation

Group ID      : 1
Member Port   : 5-7,9
Active Port    :
Status        : Disabled

DGS3100#
```

BASIC IP COMMANDS

The Basic IP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config ipif system	[{ipaddress <network_address> vlan <vlan_name 32> state [enable disable]} {dhcp vlan <vlan_name 32>}]
show ipif	{system}

Each command is listed in detail, as follows:

config ipif system

Purpose	To configure the System IP interface.
Syntax	config ipif system [{ipaddress <network_address> vlan <vlan_name 32> state [enable disable]} dhcp vlan <vlan_name 32>]
Description	The config ipif system command configures the System IP interface on the Switch.
Parameters	<p>system - The IP interface name to be configured. The default IP Interface name on the Switch is 'System'. All IP interface configurations done are executed through this interface name.</p> <p><network_address> – IP address and netmask of the IP interface to be created. The address and mask information may be specified by using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/16).</p> <p><vlan_name 32> – The name of the VLAN corresponding to the System IP interface.</p> <p>state [enable disable] – Enables or disables the IP interface.</p> <p>dhcp vlan <vlan_name 32 – Specifies the DHCP protocol for the assignment of an IP address to the Switch's System IP interface and the VLAN name to use for the DHCP Protocol..</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure the IP interface System:

```
DGS3100# config ipif System ipaddress 10.48.74.122/8
```

```
Success.
```

```
DGS3100#
```

show ipif

Purpose	To display the configuration of an IP interface on the Switch.
Syntax	show ipif {system}
Description	The show ipif command displays the configuration of an IP interface on the Switch.
Parameters	<system> - The name of the IP interface whose settings are to be displayed (Always System).
Restrictions	None.

Example usage:

To display IP interface settings:

```
DGS3100# show ipif System

Interface Name : System
IP Address     : 10.6.41.46 (dhcp)
Subnet Mask    : 255.255.255.224
Vlan Name      : default
Member port    : 1-24
Admin. State   : Enabled
Link Status    : Link Up

DGS3100#
```

IGMP SNOOPING COMMANDS

The IGMP Snooping commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config igmp_snooping	[<vlan_name 32> all] {host_timeout <sec 60-16711450> router_timeout <sec 1-16711450> leave_timer <sec 0-16711450> state [enable disable]}
config igmp_snooping querier	[vlan <vlan_name 32> all] state [enable disable] {querier_version [IGMPv2 IGMPv3]}
config router_port	<vlan_name 32> [add delete] <portlist>
config router_port_forbidden	<vlan_name 32> [add delete] <portlist>
enable igmp_snooping	
disable igmp_snooping	
show igmp_snooping	{vlan <vlan_name 32>}
show igmp_snooping group	{vlan <vlan_name 32>}
show igmp_snooping forwarding	{vlan <vlan_name 32>}
show router_port	{vlan <vlan_name 32> static dynamic forbidden}

Each command is listed in detail, as follows:

config igmp_snooping

Purpose	To configure IGMP snooping on the Switch.
Syntax	config igmp_snooping [<vlan_name 32> all] {host_timeout <sec 60-16711450> router_timeout <sec 1-16711450> leave_timer <sec 0-16711450> state [enable disable]}
Description	The config igmp_snooping command configures IGMP snooping on the Switch.
Parameters	<p><vlan_name 32> – The name of the VLAN for which IGMP snooping is to be configured.</p> <p><i>all</i> – Specifies that IGMP snooping is to be configured for all VLANs on the Switch.</p> <p><i>host_timeout <sec 60-16711450></i> – Specifies the maximum amount of time a host can be a member of a multicast group without the Switch receiving a host membership report. The default is 260 seconds.</p> <p><i>router_timeout <sec 1-16711450></i> – Specifies the maximum amount of time a route can be a member of a multicast group without the Switch receiving a host membership report. The default is 300</p>

	seconds.
	<i>leave_timer <sec 0-16711450></i> – Leave timer. The default is 10 seconds.
	<i>state [enable disable]</i> – Enables or disables IGMP snooping for the specified VLAN.
Restrictions	Only administrator or operator-level users can issue this command

Example usage:

To configure the igmp snooping:

```
DGS3100# config igmp_snooping default host_timeout 250 state enable
```

Success.

```
DGS3100#
```

config igmp_snooping querier

Purpose	To configure IGMP snooping querier on the Switch.
Syntax	config igmp_snooping querier [vlan <vlan_name 32> all] state [enable disable] {querier_version [IGMPv2 IGMPv3]}
Description	The config igmp_snooping querier command enables IGMP snooping querier on a specific VLAN.
Parameters	<p><i><vlan_name 32></i> – The name of the VLAN for which IGMP snooping is to be configured. Up to 32 characters can be used.</p> <p><i>all</i> – Specifies that IGMP snooping is to be configured for all VLANs on the Switch.</p> <p><i>state [enable disable]</i> – Enables/Disables IGMP Snooping Querier.</p> <p><i>querier_version [IGMPv2 IGMPv3]</i> – Specifies the IGMP Querier version on the VLAN.</p>
Restrictions	Only administrator or operator-level users can issue this command

Example usage:

To configure the igmp snooping:

```
DGS3100#config igmp_snooping all state enable
querier_version IGMPv2
```

Success.

```
DGS3100#
```

config router_port

Purpose	To configure ports as router ports.
Syntax	config router_port <vlan_name 32> [add delete] <portlist>
Description	The config router_port command designates a range of ports as being connected to multicast-enabled routers. This ensures all packets with such a router as its destination will reach the multicast-

	enabled router – regardless of protocol, etc.
Parameters	<p><vlan_name 32> – The name of the VLAN on which the router port resides. Up to 32 characters can be used.</p> <p>[add delete] – Specifies whether to add or delete ports defined in the following parameter <portlist>, to the router port function.</p> <p><portlist> – A port or range of ports that will be configured as router ports.</p>
Restrictions	Only administrator or operator-level users can issue this command

Example usage:

To set up static router ports:

```
DGS3100# config router_port default add 1-10
Success.
DGS3100#
```

config router_port_forbidden

Purpose	To deny ports becoming router ports.
Syntax	config router_port forbidden <vlan_name 32> [add delete] <portlist>
Description	The config router_port forbidden command denies a range of ports access to multicast-enabled routers. This ensures all packets with such a router as its destination will not reach the multicast-enabled router – regardless of protocol, etc.
Parameters	<p><vlan_name 32> – The name of the VLAN on which the router port resides. Up to 32 characters can be used.</p> <p>[add delete] – Specifies whether to deny ports defined in the following parameter <portlist>, to the router port function.</p> <p><portlist> – A port or range of ports that will be denied access as router ports.</p>
Restrictions	Only administrator or operator-level users can issue this command

Example usage:

To deny router ports:

```
DGS3100# config router_port_forbidden default add all
Success.
DGS3100#
```

enable igmp_snooping

Purpose	To enable IGMP snooping on the Switch.
Syntax	enable igmp_snooping
Description	The enable igmp_snooping command enables IGMP snooping on

	the Switch.
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command

Example usage:

To enable IGMP snooping on the Switch:

```
DGS3100# enable igmp_snooping
Success.
DGS3100#
```

disable igmp_snooping

Purpose	To disable IGMP snooping on the Switch.
Syntax	disable igmp_snooping
Description	The disable igmp_snooping command disables IGMP snooping on the Switch. IGMP snooping can be disabled only if IP multicast routing is not being used. Disabling IGMP snooping allows all IGMP and IP multicast traffic to flood within a given IP interface.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To disable IGMP snooping on the Switch:

```
DGS3100# disable igmp_snooping
Success.
DGS3100#
```

show igmp_snooping

Purpose	To show the current status of IGMP snooping on the Switch.
Syntax	show igmp_snooping {vlan <vlan_name 32>}
Description	The show igmp_snooping command displays the current IGMP snooping configuration on the Switch.
Parameters	<vlan_name 32> – The name of the VLAN for which IGMP snooping configuration is to be displayed. Up to 32 characters can be used.
Restrictions	None.

Example usage:

To show igmp snooping:

```
DGS3100# show igmp_snooping
IGMP Snooping Global State : Disabled
```

Multicast Filtering	: Enabled
Vlan Name	: default
Host Timeout	: 260
Leaver Timer	: 10
Route Timeout	: 300
State	: Disabled
DGS3100#	

show igmp_snooping group

Purpose	To display the current IGMP snooping group configuration on the Switch.
Syntax	show igmp_snooping group {vlan <vlan_name 32>}
Description	The show igmp_snooping group command displays the current IGMP snooping group configuration on the Switch.
Parameters	<vlan_name 32> – The name of the VLAN for which IGMP snooping group configuration information is to be displayed. Up to 32 characters can be used.
Restrictions	None.

Example usage:

To show igmp snooping group:

DGS3100# show igmp_snooping group
VLAN Name : default
Multicast group: 224.0.0.2
MAC address : 01-00-5E-00-00-02
Reports : 1
Port Member : 3,4
Total Entries : 1
DGS3100#

show igmp_snooping forwarding

Purpose	To display the IGMP snooping forwarding table entries on the Switch.
Syntax	show igmp_snooping forwarding {vlan <vlan_name 32>}
Description	The show igmp_snooping forwarding command displays the current IGMP snooping forwarding table entries currently configured on the Switch.
Parameters	<vlan_name 32> – The name of the VLAN for which IGMP snooping forwarding table information is to be displayed. Up to 32 characters can be used.

Restrictions	None.
--------------	-------

Example usage:

To view the IGMP snooping forwarding table for VLAN ‘Trinity’:

```
DGS3100# show igmp_snooping forwarding vlan default

VLAN Name      : Trinity
Multicast group : 224.0.0.2
MAC address    : 01-00-5E-00-00-02
Port Member    : 3,4
Total Entries  : 1

DGS3100#
```

show router_port

Purpose	To display the currently configured router ports on the Switch.
Syntax	show router_port {vlan <vlan_name 32> static dynamic forbidden}
Description	The show router_port command displays the router ports currently configured on the Switch.
Parameters	<p><i>vlan <vlan_name 32></i> – The name of the VLAN on which the router port resides. Up to 32 characters can be used.</p> <p><i>static</i> – Displays router ports that have been statically configured.</p> <p><i>dynamic</i> – Displays router ports that have been dynamically learned.</p> <p><i>forbidden</i> – Displays router ports that have been forbidden configured.</p>
Restrictions	None.

Example usage:

To display the router ports.

```
DGS3100# show router_port

VLAN Name      : default
Static router port : 1-10
Dynamic router port : 

Total Entries: 1

DGS3100#
```

MLD SNOOPING COMMANDS

The MLD Snooping commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
enable mld_snooping	
disable mld_snooping	
config mld_snooping	[<vlan_name 32> all] {host_timeout <sec 60-16711450> router_timeout <sec 1-16711450> done_timer <sec 0-16711450> state [enable disable]}
config mld_snooping mrouter_port	<vlan_name 32> [add delete] <portlist>
config mld_snooping mrouter_port_forbidden	<vlan_name 32> [add delete] <portlist>
show mld_snooping	{vlan <vlan_name 32>}
show mld_snooping forwarding	{vlan <vlan_name 32>}
show mld_snooping group	{vlan <vlan_name 32>}
show mld_snooping mrouter_port	{vlan <vlan_name 32> static dynamic forbidden }

Each command is listed in detail, as follows:

enable mld_snooping

Purpose	To enable MLD snooping on the Switch.
Syntax	enable mld_snooping
Description	The enable mld_snooping command enables MLD snooping on the Switch.
Parameters	None
Restrictions	Only administrator or operator-level users can issue this command

Example usage:

To enable the MLD snooping:

```
DGS3100# enable mld_snooping
```

```
Success.
```

```
DGS3100#
```

disable mld_snooping

Purpose	To disable MLD snooping on the Switch.
Syntax	disable mld snooping
Description	The disable mld snooping command disables MLD snooping on the Switch.
Parameters	None
Restrictions	Only administrator or operator-level users can issue this command

Example usage:

To disable the MLD snooping:

```
DGS3100# disable mld_snooping
```

Success.

```
DGS3100#
```

config mld_snooping

Purpose	To configure mld snooping.
Syntax	config mld_snooping [<vlan_name 32> all] {host_timeout <sec 60-16711450> router_timeout <sec 1-16711450> done_timer <sec 0-16711450> state [enable disable]}
Description	The config mld_snooping command defines mld snooping on the VLAN.
Parameters	<p><i>vlan_name 32</i> – specifies that the mld snooping applies only to this previously created VLAN.</p> <p><i>all</i> – specifies that MLD snooping is to be configured for all VLANs on the Switch.</p> <p><i>host_timeout</i> – Specifies the maximum amount of time a host can be a member of a multicast group without the Switch receiving a host membership report. The default is 260 seconds.</p> <p><i>router_timeout</i> – Specifies the maximum amount of time a route can be a member of a multicast group without the Switch receiving a host membership report done timer. The default is 300 seconds.</p> <p><i>done_timer</i> – Specifies the maximum amount of time a host can be a member of a multicast group after sending a done timer membership report. The default is 10 seconds.</p> <p><i>state</i> – Allows the user to enable or disable MLD snooping for the specified VLAN.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To configure mld snooping:

```
DGS3100# config mld_snooping
```

Command: config mld_snooping

mrouter_port Config Mld Snooping Router Port

mrouter_port_forbidden Config Mld Snooping Forbidden Router Port

all WORD<1-32> DGS3100#	all input vlan name
--------------------------------------	------------------------

config mld_snooping mrouter_port

Purpose	To enable mld mrouter ports.
Syntax	config mld_snooping mrouter_port <vlan_name 32> [add delete] <portlist>
Description	The config mld_snooping mrouter_port command defines a port that is connected to a multicast router port.
Parameters	<p><i>vlan_name 32</i> – specifies that the mld snooping applies only to this previously created VLAN.</p> <p><i>add</i> – Adds a specified port to the mld snooping mrouter port.</p> <p><i>delete</i> – Deletes a specified port to the mld snooping mrouter port.</p> <p><i>portlist</i> – Defines the ports to be included from the mld snooping mrouter group.</p>
Restrictions	Only administrator or operator-level users can issue this command Separate non-consecutive Ethernet ports with a comma and no spaces; use a hyphen to designate a range of ports. These ports are defined as connected to a multicast router.

Example usage:

To enable mld mrouter ports:

DGS3100# config mld_snooping mrouter_port default add 1
--

Success.

DGS3100#

config mld_snooping mrouter_port_forbidden

Purpose	To define mld mrouter ports forbidden on the Switch.
Syntax	config mld_snooping mrouter_port_forbidden <vlan_name 32> [add delete] <portlist>
Description	The config mld_snooping mrouter_port_forbidden command forbids a port from being defined as a multicast router port by static configuration or by automatic learning.
Parameters	<p><i>vlan_name 32</i> – Specifies that the mld snooping applies only to this previously created VLAN.</p> <p><i>add</i> – Adds a specified port to the mld snooping mrouter port.</p> <p><i>delete</i> – Deletes a specified port to the mld snooping mrouter port.</p> <p><i>portlist</i> – Defines the ports to be included from the mld snooping mrouter group.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To define the MLD snooping mrouter forbidden:

```
DGS3100# config mld_snooping mrouter_port_forbidden default add all

Success.
DGS3100#
```

show mld snooping

Purpose	To display mld snooping settings on the Switch.
Syntax	show mld snooping {vlan <vlan_name 32>}
Description	The show mld snooping command displays a port from being defined as a multicast router port by static configuration or by automatic learning.
Parameters	<i>vlan_name 32</i> – Specifies that the mld snooping applies only to this previously created VLAN..
Restrictions	Only administrator or operator-level users can issue this command Separate non-consecutive Ethernet ports with a comma and no spaces; use a hyphen to designate a range of ports. These ports are defined as connected to a multicast router.

Example usage:

To show the MLD snooping:

```
DGS3100# show mld_snooping
MLD Snooping Global State : Disabled
Multicast Filtering      : Enabled

Vlan Name      : default
Host Timeout   : 260
Done Timer     : 10
Route Timeout  : 300
State          : Disabled

DGS3100#
```

show mld_snooping forwarding

Purpose	To display mld snooping settings on the Switch.
Syntax	show mld_snooping forwarding {vlan <vlan_name 32>}
Description	The show mld_snooping forwarding command displays the current MLD snooping forwarding table entries currently configured on the Switch.
Parameters	<i>vlan_name 32</i> – Specifies that the mld snooping applies only to this previously created VLAN.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To display the MLD snooping forwarding:

```
DGS3100# show mld_snooping forwarding
Total Entries : 0

DGS3100#
```

show mld_snooping groups

Purpose	To display mld snooping group settings on the Switch.
Syntax	show mld_snooping groups {vlan <vlan_name 32>}
Description	The show mld_snooping groups command displays the multicast groups that were learned by MLD snooping.
Parameters	vlan <vlan_name 32> – Specifies on which VLAN mld snooping groups should be shown.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To show the MLD snooping groups:

```
DGS3100#
TBD
DGS3100#
```

show mld_snooping mrouter_port

Purpose	To display information on dynamically learnt and static multicast router interfaces.
Syntax	show mld_snooping mrouter_port {vlan <vlan_name 32> static dynamic forbidden}
Description	The show mld_snooping mrouter_port command displays on dynamically learnt and static multicast router interfaces.
Parameters	<p><i>vlan_name 32</i> – Displays MLD router ports on specific VLAN.</p> <p><i>Static</i> – Displays statically configured MLD router ports.</p> <p><i>Dynamic</i> – Displays dynamically configured MLD router ports.</p> <p><i>Forbidden</i> – Displays forbidden MLD ports</p>
Restrictions	Only administrator or operator-level users can issue this command Separate non-consecutive Ethernet ports with a comma and no spaces; use a hyphen to designate a range of ports. These ports are defined as connected to a multicast router.

Example usage:

To show the MLD_snooping mrouterport:

```
DGS3100# show mld_snooping mrouter_port
VLAN Name      : default
Static router port : (1-48)
```

Dynamic router port :
Forbidden router port :

Total Entries: 1

DGS3100#

Success.

DGS3100#

802.1X COMMANDS

The 802.1X commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
enable 802.1x	
disable 802.1x	
config 802.1x	<feap> [enable disable]
show 802.1x auth_state	{ports <portlist>}
show 802.1x auth_configuration	{ports <portlist>}
config 802.1x auth_parameter ports	[<portlist> all] [default { port_control [force_unauth auto force_auth] quiet_period <sec 0-65535> tx_period <sec 1-65535> supp_timeout <sec 1-65535> server_timeout <sec 1-65535> max_req <value 1-10> reauth_period <sec 300-4294967295> enable_reauth [enable disable]}]
config 802.1x init	port_based ports [<portlist> all]
config 802.1x auth_protocol	[radius none]
config 802.1x reauth	port_based ports [<portlist> all]
config radius add	<server_ip> [key <passwd 128>] [default {auth_port <udp_port_number 1-65535> acct_port <udp_port_number 1-65535>}]
config radius delete	<server_ip>
config radius	<server_ip> { key <passwd 128> auth_port <udp_port_number 1-65535> acct_port <udp_port_number 1-65535>}
show radius	
config 802.1x auth_mode	ports <portlist> [port_based mac_based]
create 802.1x guest_vlan	<vlan_name 32> state [enable disable]
delete 802.1x guest_vlan	
config 802.1x guest_vlan ports	<portlist> state [enable disable]
config 802.1x radius-attributes	<portlist> vlan state [enable disable]
show 802.1x guest_vlan	

Each command is listed in detail, as follows:

enable 802.1x

Purpose	To enable the 802.1x server on the Switch.
Syntax	enable 802.1x
Description	The enable 802.1x command enables the 802.1x Port-based Network Access control server application on the Switch.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To enable 802.1x switch wide:

```
DGS3100# enable 802.1x
Success.
DGS3100#
```

disable 802.1x

Purpose	To disable the 802.1x server on the Switch.
Syntax	disable 802.1x
Description	The disable 802.1x command disables the 802.1x Port-based Network Access control server application on the Switch.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To disable 802.1x on the Switch:

```
DGS3100# disable 802.1x
Success.
DGS3100#
```

config 802.1x

Purpose	To configure the 802.1x feap on the Switch.
Syntax	config 802.1x <feap> [enable disable]
Description	The config 802.1x command configure the 802.1x feap on the Switch.
Parameters	<i><feap> [enable disable]</i> – enables or disables the 802.1x feap on the switch.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure 802.1x feap on the Switch:

```
DGS3100# config 802.1x feap enable
```

Success.

```
DGS3100#
```

Success.

```
DGS3100#
```

show 802.1x auth_state

Purpose	To display the current authentication state of the 802.1x server on the Switch.
Syntax	show 802.1x auth_state {ports <portlist>}
Description	The show 802.1x auth_state command displays the current 802.1x authentication state of the specified ports of the Port-based Network Access Control server application on the Switch. The following details are displayed: Port number – Shows the physical port number on the Switch. Auth PAE State: Initialize / Disconnected / Connecting / Authenticating / Authenticated / Held / ForceAuth / ForceUnauth – Shows the current state of the Authenticator PAE. Backend State: Request / Response / Fail / Idle / Initialize / Success / Timeout – Shows the current state of the Backend Authenticator. Port Status: Authorized / Unauthorized – Shows the result of the authentication process. Authorized means that the user was authenticated, and can access the network. Unauthorized means that the user was not authenticated, and cannot access the network.
Parameters	<i>ports <portlist></i> – A port or range of ports whose settings are to be displayed.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To display the 802.1x authentication states (stacking disabled) for Port-based 802.1x:

```
DGS3100# show 802.1x auth_state ports 1:1-5
```

Port	Auth PAE State	Backend State	Port Status
1	forceAuth	initialize	authorized
2	initialize	initialize	authorized
3	initialize	initialize	authorized
4	initialize	initialize	authorized
5	forceAuth	initialize	authorized

```
CTRL+C ESC q Quit SPACE n Next Page Enter Next Entry a All
```

show 802.1x auth_configuration

Purpose	To display the current configuration of the 802.1x server on the Switch.
Syntax	show 802.1x auth_configuration {ports <portlist>}
Description	<p>The show 802.1x auth_configuration command displays the current configuration of the 802.1x Port-based Network Access Control server application on the Switch.</p> <p>The following details are displayed:</p> <ul style="list-style-type: none"> 802.1x: Enabled/Disabled – Shows the current status of 802.1x functions on the Switch. Authentication Mode: Port-based/Mac-based/None – Shows the 802.1x authorization mode. Authentication Method: Remote/none – Shows the type of authentication protocol suite in use between the Switch and a RADIUS server. Port number – Shows the physical port number on the Switch. AdminCrlDir: Both/In – Shows whether a controlled Port that is unauthorized will exert control over communication in both receiving and transmitting directions, or just the receiving direction. OpenCrlDir: Both/In – Shows whether a controlled Port that is unauthorized will exert control over communication in both receiving and transmitting directions, or just the receiving direction. Port Control: ForceAuth/ForceUnauth/Auto – Shows the administrative control over the port's authorization status. ForceAuth forces the Authenticator of the port to become Authorized. ForceUnauth forces the port to become Unauthorized. QuietPeriod – Shows the time interval between authentication failure and the start of a new authentication attempt. TxPeriod – Shows the time to wait for a response from a supplicant (user) to send EAP Request/Identity packets. SuppTimeout – Shows the time to wait for a response from a supplicant (user) for all EAP packets, except for the Request/Identity packets. ServerTimeout – Shows the length of time to wait for a response from a RADIUS server. MaxReq – Shows the maximum number of times to retry sending packets to the supplicant. ReAuthPeriod – Shows the time interval between successive reauthentications. ReAuthenticate: true/false – Shows whether or not to reauthenticate.
Parameters	<i>ports <portlist></i> – Specifies a port or range of ports to be viewed.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To display the 802.1x configurations:

```
DGS3100# show 802.1x auth_configuration ports 1
```

802.1X	: Enabled
Authentication Mode	: Port_based
Authentication Method	: None

Port number	:	1
AdminCrlDir	:	both
OpenCrlDir	:	both
Port Control	:	forceAuthorized
QuietPeriod	:	60 sec
TxPeriod	:	30 sec
SuppTimeout	:	30 sec
ServerTimeout	:	30 sec
MaxReq	:	2 times
ReAuthPeriod	:	3600 sec
ReAuthenticate	:	false

CTRL+C ESC q Quit SPACE n Next Page Enter Next Entry a All

config 802.1x auth_parameter ports

Purpose	To configure the 802.1x authentication parameters on a range of ports. The default parameter returns all ports in the specified range to their default 802.1x settings.
Syntax	config 802.1x auth_parameter ports [<portlist> all] [default { port_control [force_unauth auto force_auth] quiet_period <sec 0-65535> tx_period <sec 1-65535> supp_timeout <sec 1-65535> server_timeout <sec 1-65535> max_req <value 1-10> reauth_period <sec 300-4294967295> enable_reauth [enable disable]}]
Description	The config 802.1x auth_parameter ports command configures the 802.1x authentication parameters on a range of ports. The default parameter returns all ports in the specified range to their default 802.1x settings.
Parameters	<p><i><portlist></i> – A port or range of ports to be configured.</p> <p><i>all</i> – Specifies all of the ports on the Switch.</p> <p><i>default</i> – Returns all of the ports in the specified range to their 802.1x default settings.</p> <p><i>port_control</i> – Configures the administrative control over the authentication process for the range of ports. The options are:</p> <ul style="list-style-type: none"> • <i>force_auth</i> – Forces the Authenticator for the port to become authorized. Network access is allowed. • <i>auto</i> – Allows the port's status to reflect the outcome of the authentication process. • <i>force_unauth</i> – Forces the Authenticator for the port to become unauthorized. Network access is blocked. <p><i>quiet_period <sec 0-65535></i> – Configures the time interval between authentication failure and the start of a new authentication attempt.</p> <p><i>tx_period <sec 1-65535></i> - Configures the time to wait for a response from a supplicant (user) to send EAP Request/Identity packets.</p> <p><i>supp_timeout <sec 1-65535></i> - Configures the time to wait for a response from a supplicant (user) for all EAP packets, except for the Request/Identity packets.</p> <p><i>server_timeout <sec 1-65535></i> - Configures the length of time to wait</p>

for a response from a RADIUS server.
max_req <value 1-10> – Configures the number of times to retry sending packets to a supplicant (user).
reauth_period <sec 300-4294967295> – Configures the time interval between successive re-authentications.
enable_reauth [enable | disable] – Determines whether or not the Switch will re-authenticate. Enabled causes re-authentication of users at the time interval specified in the Re-authentication Period field, above.

Restrictions	Only Administrator or operator-level users can issue this command.
---------------------	--

Example usage:

To configure 802.1x authentication parameters for ports 1 – 20:

```
DGS3100# config 802.1x auth_parameter ports 1-20 direction both
Success.
DGS3100#
```

config 802.1x init

Purpose	To initialize the 802.1x function on a range of ports.
Syntax	config 802.1x init port_based ports [<portlist> all]
Description	The config 802.1x init command initializes the 802.1x functions on a specified range of ports or for specified MAC addresses operating from a specified range of ports.
Parameters	<p><i>port_based</i> – Instructs the Switch to initialize 802.1x functions based only on the port number. Ports approved for initialization can then be specified.</p> <p><i>ports <portlist></i> – A port or range of ports to be configured.</p> <p><i>all</i> – Specifies all of the ports on the Switch.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To initialize the authentication state machine of all ports:

```
DGS3100# config 802.1x init port_based ports all
Success.
DGS3100#
```

config 802.1x auth_protocol

Purpose	To configure the 802.1x authentication protocol on the Switch .
Syntax	config 802.1x auth_protocol [radius none]
Description	The config 802.1x auth_protocol command enables configuration of the authentication protocol.

Parameters	<i>radius</i> – Uses the list of RADIUS servers for authentication. <i>none</i> – Uses no authentication.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure the RADIUS (AAA) authentication protocol on the Switch:

```
DGS3100# config 802.1x auth_protocol radius
Success.
DGS3100#
```

config 802.1x reauth

Purpose	To configure the 802.1x re-authentication feature of the Switch.
Syntax	config 802.1x reauth port_based ports [<portlist> all]
Description	The config 802.1x reauth command re-authenticates a previously authenticated device based on port number.
Parameters	<p><i>port_based</i> – Instructs the Switch to re-authorize 802.1x functions based only on the port number. Ports approved for re-authorization can then be specified.</p> <p><i>ports <portlist></i> – A port or range of ports to be re-authorized.</p> <p><i>all</i> – Specifies all of the ports on the Switch.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure 802.1x reauthentication for ports 1-18:

```
DGS3100# config 802.1x reauth port_based ports 1-18
Success.
DGS3100#
```

config radius add

Purpose	To configure the settings the Switch uses to communicate with a RADIUS server.
Syntax	config radius add [<server_ip>] [key <passwd 128>] [default {auth_port <udp_port_number 1-65535> acct_port <udp_port_number 1-65535>}]
Description	The config radius add command configures the settings the Switch uses to communicate with a RADIUS server.
Parameters	<p><i><server_ip></i> – The IP address of the RADIUS server.</p> <p><i>key</i> – Specifies that a password and encryption key are to be used between the Switch and the RADIUS server.</p> <p><i><passwd 128></i> – The shared-secret key used by the RADIUS server</p>

	and the Switch. Up to 128 characters can be used.
	<i>default</i> – Uses the default udp port number in both the <i>auth_port</i> and <i>acct_port</i> settings.
	<i>auth_port <udp_port_number 1-65535></i> – The UDP port number for authentication requests. The default is 1812.
	<i>acct_port <udp_port_number 1-65535></i> – The UDP port number for accounting requests. The default is 1813.

Restrictions Only Administrator or operator-level users can issue this command.

Example usage:

To configure the RADIUS server communication settings:

```
DGS3100# config radius add 10.48.74.121 key dlink default
Success.
DGS3100#
```

config radius delete

Purpose	To delete a previously entered RADIUS server configuration.
Syntax	config radius delete <server_ip>
Description	The config radius delete command deletes a previously entered RADIUS server configuration.
Parameters	<server_ip> – The IP address of the RADIUS server.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To delete previously configured RADIUS server communication settings:

```
DGS3100# config radius delete 10.48.74.121
Success.
DGS3100#
```

config radius

Purpose	To configure the Switch's RADIUS settings.
Syntax	config radius <server_ip> { key <passwd 128> auth_port <udp_port_number 1-65535> acct_port <udp_port_number 1-65535> }
Description	The config radius command configures the Switch's RADIUS settings.
Parameters	<p><server_ip> – The IP address of the RADIUS server.</p> <p><i>key</i> – Specifies that a password and encryption key are to be used between the Switch and the RADIUS server.</p> <ul style="list-style-type: none"> • <passwd 128> – The shared-secret key used by the RADIUS server and the Switch. Up to 128 characters can

be used.

auth_port <udp_port_number 1-65535> – The UDP port number for authentication requests. The default is 1812.

acct_port <udp_port_number 1-65535> – The UDP port number for accounting requests. The default is 1813.

Restrictions	Only Administrator or operator-level users can issue this command.
--------------	--

Example usage:

To configure the RADIUS settings:

DGS3100# config radius 10.48.74.121 key dlink default
--

Success.

DGS3100#

show radius

Purpose	To display the current RADIUS configurations on the Switch.
Syntax	show radius
Description	The show radius command displays the current RADIUS configurations on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display RADIUS settings on the Switch:

DGS3100# show radius

Index	IP Address	Auth-Port Number	Acct-Port Number	Status	Key
1	10.1.1.1	1812	1813	Active	switch

config 802.1x auth_mode

Purpose	To configure the 802.1x authentication mode on the Switch.
Syntax	config 802.1x auth_mode ports <portlist> [port_based mac_based]
Description	The config 802.1x auth_mode command enables either the port-based or MAC-based 802.1x authentication feature on the Switch.
Parameters	<i>portlist</i> – A port or a range of ports to be configured. [<i>port_based</i> / <i>mac_based</i>] – Specifies whether 802.1x authentication is by port or MAC address.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure 802.1x authentication by MAC address:

```
DGS3100# config 802.1x auth_mode mac_based
```

Success.

```
DGS3100#
```

create 802.1x guest_vlan

Purpose	Enables network access to a Guest VLAN.
Syntax	create 802.1x guest_vlan <vlan_name 32>
Description	The create 802.1x guest_vlan command enables network access to a 802.1x Guest VLAN. A network administrator can use 802.1x Guest VLANs to deny network access via port-based authentication, but grant Internet access to unauthorized users.
Parameters	<vlan_name 32> – The name of the 802.1x Guest VLAN to be created.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To create a 802.1x Guest VLAN:

```
DGS3100# create 802.1x guest_vlan
```

```
DGS3100#
```

delete 802.1x guest_vlan

Purpose	Disables network access to a Guest VLAN.
Syntax	delete 802.1x guest_vlan
Description	The delete 802.1x guest_vlan command disables network access to a 802.1x Guest VLAN. A network administrator can use 802.1x Guest VLANs to deny network access via port-based authentication, but grant Internet access to unauthorized users.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command. The user is required to disable Guest VLAN before deleting a specific the VLAN.

Example usage:

To delete a 802.1x Guest VLAN

```
DGS3100# delete 802.1x guest_vlan
```

```
DGS3100#
```

config 802.1x guest_vlan ports

Purpose	Defines a port or range of ports to be members of the Guest VLAN.
Syntax	config 802.1x guest_vlan ports <portlist> state [enable disable]
Description	The config 802.1x guest_vlan ports command defines a port or range of ports to be members of the 802.1x Guest VLAN. The 802.1x Guest VLAN can be configured to provide limited network access to authorized member ports. If a member port is denied network access via port-based authorization, but the 802.1x Guest VLAN is enabled, the member port receives limited network access. For example, a network administrator can use the 802.1x Guest VLAN to deny internal network access via port-based authentication, but grant Internet access to unauthorized users.
Parameters	<p><i>portlist</i> – A port or range of ports to be configured to the Guest VLAN.</p> <p><i>All</i> – Indicates all ports to be configured to the guest vlan.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure ports to the Guest VLAN

```
DGS3100# config 802.1x guest_vlan ports 1 enable
```

```
DGS3100#
```

config 802.1x radius attribute

Purpose	To enable the Dynamic VLAN assignment ability of a Radius server
Syntax	config 802.1x radius-attributes <portlist> vlan state [enable disable]
Description	Radius server can assign a VLAN to a port dynamically based on the authentication of the port. This command enables the switch to configure the port to be assigned to a VLAN dynamically based on the data received from the Radius Server.
Parameters	<p><i><portlist></i> - ports to add the feature on</p> <p><i>state [enable disable]</i> – to enable/disable the feature per port.</p>
Restrictions	None.

Example usage:

To display the Guest VLAN configuration information:

```
DGS-3100# config 802.1x radius-attributes 1:10 vlan state enable
```

```
Success.
```

```
DGS-3100#
```

show 802.1x guest_vlan

Purpose	Displays configuration information for the Guest VLAN.
Syntax	show 802.1x guest_vlan
Description	The show 802.1x guest_vlan command displays the Guest VLAN name, state, and member ports.
Parameters	None.
Restrictions	None.

Example usage:

To display the Guest VLAN configuration information:

```
DGS3100# show 802.1x guest_vlan

Guest VLAN Table

Guest VLAN      : Enable
Guest VLAN name : guestusers
Member          : 1
DGS3100#
```

MAC AUTHENTICATION COMMANDS

The MAC Authentication commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
enable mac_based_access_control	
disable mac_based_access_control	
config mac_based_access_control	{ports [<portlist> all] state [enable disable] }
show mac_based_access_control	{ports [<portlist> all]}

Each command is listed in detail, as follows:

enable mac_based_access_control

Purpose	To globally enable MAC based access control.
Syntax	enable mac_based_access_control
Description	<p>The enable mac_based_access_control command enables the functionality of MAC-based access control globally on the switch.</p> <p>This command also enables 802.1x globally if it is disabled, as 802.1x functionality is used to activate MAC authentication.</p> <p>If ports on the switch are configured to MAC-based mode, this command sets the port state to auto. To achieve this, the enable command runs the following 802.1x command on these ports:</p> <ul style="list-style-type: none"> - config 802.1x auth_parameter ports 1:2 port_control auto
Parameters	None.
Restrictions	None.

Example usage:

To enable MAC Based Access Control:

```
DGS3100# enable mac_based_access_control
DGS3100#
```

disable mac_based_access_control

Purpose	To globally disable MAC based access control.
Syntax	disable mac_based_access_control
Description	<p>The disable mac_based_access_control command disables the functionality of MAC-based access control globally on the switch.</p> <p>This command disables 802.1x if it is enabled, as 802.1x functionality is used to activate MAC authentication.</p> <p>However, if ports activated to the standard ‘Port Based 802.1x’ exist, 802.1x is not disabled globally, and only the MAC Based authentication configured ports move to a ‘Forced Authorized’ state.</p>
Parameters	None.
Restrictions	None.

Example usage:

To disable MAC Based Access Control:

```
DGS3100# disable mac_based_access_control
```

```
DGS3100#
```

config mac_based_access_control

Purpose	To enable/disable MAC based access control on a port(s).
Syntax	config mac_based_access_control {ports [<portlist> all] state [enable disable]}
Description	<p>The config mac_based_access_control command enables or disables the functionality of MAC-based access control on a port(s).</p> <p>When using command to enable functionality:</p> <p>This command enables 802.1x on the port(s), as 802.1x functionality is used to activate MAC authentication. This command also configures RADIUS as the authenticating protocol for 802.1x. To achieve this, the enable command runs the following 802.1x commands:</p> <ul style="list-style-type: none"> - config 802.1x auth_parameter ports 1:2 enable_reauth enable - config 802.1x auth_parameter ports 1:2 port_control auto - config 802.1x auth_mode mac_base ports 1:2 - config 802.1x auth_protocol radius <p>Important note: In order to complete the activation of MAC authentication, the related ports must be configured as members in the guest VLAN.</p> <p>When using this command to disable functionality on a port or ports, this command returns the port(s) to the default settings. To achieve this, the disable command removes the following commands (configured by the enable command) from port:</p> <ul style="list-style-type: none"> - config 802.1x auth_parameter ports 1:2 enable_reauth enable - config 802.1x auth_parameter ports 1:2 port_control auto - config 802.1x auth_mode mac_base ports 1:2
Parameters	<portlist> – A port or range of ports whose MAC authentication is enabled/disabled on it.

<state> – This parameter defines whether the port or range of ports will be enabled or disabled.

Restrictions This command can only be entered if the global command ‘enable mac_based_access_control’ was previously entered.

Example usage:

To enable MAC Based Access Control on port or port list:

```
DGS3100# config mac_based_access_control ports 1:1-5 state enable
```

```
DGS3100#
```

show mac_based_access_control

Purpose	To show the port MAC authentication status.
Syntax	show mac_based_access_control {ports [<portlist> all]}
Description	The show mac_based_access_control command displays MAC authentication status on the configured ports.
Parameters	<p><i><portlist></i> – A port or range of ports displayed with the MAC authentication status.</p> <p><i>all</i> – displays all ports with the MAC authentication status.</p>
Restrictions	None.

Example usage:

To display MAC Based Access Control on port or port list:

```
DGS3100# show mac_based_access_control
MAC Based Access Control
-----
State      :Enabled
Method     :Radius
DGS3100# show mac_based_access_control ports 1:5
```

Port	State
-----	-----
5	Enabled

```
DGS3100#
```

PORT SECURITY COMMANDS

The Port Security commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config port_security	[<portlist> all] {admin_state [enable disable] max_learning_addr <int 1-64> lock_address_mode [Permanent DeleteOnTimeout DeleteOnReset] trap <1-1000000>}
show port_security	{<portlist>}

Each command is listed in detail, as follows:

config port_security

Purpose	To configure port security settings.
Syntax	config port_security [<portlist> all] {admin_state [enable disable] max_learning_addr <int 1-64> lock_address_mode [Permanent DeleteOnTimeout DeleteOnReset] trap <interval 1-1000000>}
Description	The config port_security command configures port security settings for specific ports.
Parameters	<p><i>portlist</i> – A port or range of ports to be configured.</p> <p><i>all</i> – Configures port security for all ports on the Switch.</p> <p><i>admin_state [enable disable]</i> – Enables or disables port security for the listed ports.</p> <p><i>max_learning_addr <int 0-64></i> –</p> <p>1-64 Limits the number of MAC addresses dynamically listed in the FDB for the ports.</p> <p><i>lock_address_mode</i> – Defines the TBD and contains the following options:</p> <ul style="list-style-type: none"> • <i>Permenant</i> – Learns up to the maximum number of dynamic addresses allowed on the port. The learned addresses are not aged out or relearned on other port for as long as the port is locked. • <i>DeleteOnReset</i> – Deletes the current dynamic MAC addresses associated with the port. Learn up to the maximum addresses allowed on the port (this number is also configurable). Aging is disabled; the addresses are deleted on reset • <i>DeleteOnTimeout</i> – Deletes the current dynamic MAC addresses associated with the port. The port learns up to the maximum addresses allowed on the port. Re-learned MAC addresses and address aging out are also enabled. The MAC addresses are deleted when the device is reset and on when the address is aged out. <p><i>trap <interval 1-1000000></i> - Sends SNMP traps and defines the minimum amount of time in seconds between consecutive traps.</p>
Restrictions	Only administrator or operator-level users can issue this command

Example usage:

To configure port security:

```
DGS3100# config port_security 1-5 admin_state enable
max_learning_addr 5 lock_address_mode deleteontimeout trap 50

Success.

DGS3100#
```

show port_security

Purpose	To display the current port security configuration.
Syntax	show port_security {<portlist>}
Description	The show port_security command displays port security information for the Switch's ports. The information displayed includes port security, admin state, maximum number of learning address and lock mode and trap interval.
Parameters	<i><portlist></i> – A port or range of ports whose settings are to be displayed.
Restrictions	None.

Example usage:

To display the port security configuration:

DGS3100# show port_security ports 1:1-5					
Port	Admin state	Max.Learning Addr.	Lock Address Mode	Trap interval	
1:1	Disabled	1	DeleteOnReset	10	
1:2	Disabled	1	DeleteOnReset	10	
1:3	Disabled	1	DeleteOnReset	10	
1:4	Disabled	1	DeleteOnReset	10	
1:5	Disabled	1	DeleteOnReset	10	

DGS3100#

TIME AND SNTP COMMANDS

The Time and SNTP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config sntp	{primary <ipaddr> secondary <ipaddr> poll-interval <int 60-86400>}
show sntp	
enable sntp	
disable sntp	
config time date	<date ddmmYYYY> <time hh:mm:ss>
config time_zone	{operator [+ hour <gmt_hour 0-13> minute <minute 0-59> - hour <gmt_hour 0-12> minute <minute 0-59>]}
config dst	[disable repeating {week day month hh:mm week day month hh:mm offset [30 60 90 120]} annual {date month hh:mm date month hh:mm offset [30 60 90 120]}]
show time	

Each command is listed in detail, as follows:

config sntp

Purpose	To setup SNTP service.
Syntax	config sntp {primary <ipaddr> secondary <ipaddr> poll-interval <int 60-86400>}
Description	The config sntp command configures SNTP service from an SNTP server. SNTP must be enabled for this command to function (See enable sntp).
Parameters	<p><i>primary <ipaddr></i> – Specifies the IP address of the primary SNTP server.</p> <p><i>secondary <ipaddr></i> – Specifies the IP address of the secondary SNTP server.</p> <p><i>poll-interval <int 60-86400></i> – The interval between requests for updated SNTP information. The polling interval ranges from 60 seconds (1 minute) to 86,400 seconds (1 day).</p>
Restrictions	Only administrator or operate-level users can issue this command. SNTP service must be enabled for this command to function (enable sntp).

Example usage:

To configure SNTP settings:

```
DGS3100# config sntp primary 10.1.1.1 secondary 10.1.1.2 poll-interval 60
Success.

DGS3100#
```

show sntp

Purpose	To display the SNTP information.
Syntax	show sntp
Description	The show sntp command displays SNTP settings information, including the source IP address, time source and poll interval.
Parameters	None.
Restrictions	None.

Example usage:

To display SNTP configuration information:

```
DGS3100#show sntp
Current Time Source : System Clock
SNTP : Disabled
SNTP Primary Server : 10.1.1.1
SNTP Secondary Server : 10.1.1.2
SNTP Poll Interval : 30 sec
DGS3100#
```

enable sntp

Purpose	To enable SNTP server support.
Syntax	enable sntp
Description	The enable sntp command enables SNTP server support. SNTP service must be separately configured (see config sntp). Enabling and configuring SNTP support override any manually configured system time settings.
Parameters	None.
Restrictions	Only administrator and Operator-level users can issue this command. SNTP settings must be configured for SNTP to function (config sntp).

Example usage:

To enable the SNTP function:

```
DGS3100# enable sntp
Success.

DGS3100#
```

disable sntp

Purpose	To disable SNTP server support.
Syntax	disable sntp
Description	The disable sntp command disables SNTP support.
Parameters	None.
Restrictions	Only administrator or operator level users can issue this command.

Example usage:

To disable SNTP support:

```
DGS3100# disable sntp
```

Success.

```
DGS3100#
```

config time date

Purpose	To manually configure system time and date settings.
Syntax	config time date <date ddmmyyyy> <time hh:mm:ss>
Description	The config time date command configures the system time and date settings. These will be overridden if SNTP is configured and enabled.
Parameters	<p><i>date <ddmmyyyy></i> – Specifies the date, using two numerical characters for the day of the month, two numerical characters for the name of the month, and four numerical characters for the year. For example: 03082008.</p> <p><i>Time <hh:mm:ss></i> – Specifies the system time, using the format hh:mm:ss; that is, two numerical characters each for the hour using a 24-hour clock, the minute and second. For example: 19:42:30.</p>
Restrictions	Only administrator or operate-level users can issue this command. Manually configured system time and date settings are overridden if SNTP support is enabled.

Example usage:

To manually set system time and date settings:

```
DGS3100# config time 30072008 16:30:30
```

Success.

```
DGS3100#
```

config time_zone

Purpose	To determine the time zone used in order to adjust the system clock.
Syntax	config time_zone {operator [+ hour <gmt_hour 0-13> minute <minute 0-59> - hour <gmt_hour 0-12> minute <minute 0-59>]}
Description	The config time_zone command adjusts the system clock settings according to the time zone. Time zone settings adjust SNTP information accordingly.
Parameters	<p><i>operator</i> – May be (+) to add or (-) to subtract time to adjust for time zone relative to GMT.</p> <p><i>hour <gmt_hour 0-13></i> – Specifies the number of hours difference from GMT.</p> <p><i>Minute <minute 0-59></i> – Specifies the number of minutes added or subtracted to adjust the time zone.</p>
Restrictions	Only administrator or operator level users can issue this command.

Example usage:

To configure time zone settings:

```
DGS3100# config time_zone operator + hour 2 min 30
```

```
Success.
```

```
DGS3100#
```

config dst

Purpose	To configure time adjustments to allow for the use of Daylight Saving Time (DST).
Syntax	config dst [disable repeating {week day month hh:mm week day month hh:mm offset [30 60 90 120]} annual {date month hh:mm date month hh:mm offset [30 60 90 120]}]
Description	The config dst command disables or configures Daylight Saving Time (DST). When enabled, this adjusts the system clock to comply with any DST requirement. DST adjustment affects system time for both manually configured time and time set using SNTP service.
Parameters	<p><i>disable</i> - Disables the DST seasonal time adjustment for the Switch.</p> <p><i>repeating</i> - Enables DST seasonal time adjustment on a repeating basis. Repeating mode requires that the DST beginning and ending date be specified using a formula. For example, specify to begin DST on Saturday during the second week of April and end DST on Sunday during the last week of October. The format for repeating mode is as follows, and in the order listed:</p> <ul style="list-style-type: none"> • <week 1-4,/last> - The week of the month in which DST begins, where 1 is the first week, 2 is the second week and so on, and last is the last week of the month. • <day sun-sat> - The weekday on which DST begins, expressed using a three character abbreviation (sun, mon, tue, wed, thu, fri, sat) • <month 1-12> - The month of the year to begin DST,

	<p>expressed numerically.</p> <ul style="list-style-type: none"> • <i><hh:mm></i> - The time of day to begin DST in hours and minutes, expressed using a 24-hour clock. • <i><week 1-4,last></i> - The week of the month in which DST ends, where 1 is the first week, 2 is the second week and so on, and last is the last week of the month. • <i><day sun-sat></i> - The weekday on which DST ends, expressed using a three character abbreviation (sun, mon, tue, wed, thu, fri, sat) • <i><month 1-12></i> - The month of the year to end DST, expressed numerically. • <i><hh:mm></i> - The time of day to end DST, in hours and minutes, expressed using a 24-hour clock. <p><i>annual</i> - Enables DST seasonal time adjustment on an annual basis. Annual mode requires that the DST beginning and ending date be specified concisely. For example, specify to begin DST on April 3 and end DST on October 14. The format for annual mode is as follows, and in the order listed:</p> <ul style="list-style-type: none"> • <i><date 1-31></i> - The day of the month to begin DST, expressed numerically. • <i><month 1-12></i> - The month of the year to begin DST, expressed numerically. • <i><hh:mm></i> - The time of day to begin DST in hours and minutes, expressed using a 24-hour clock. • <i><date 1-31></i> - The day of the month to end DST, expressed numerically. • <i><month 1-12></i> - The month of the year to end DST, expressed numerically. • <i><hh:mm></i> - The time of day to end DST, in hours and minutes, expressed using a 24-hour clock. <p><i>offset [30 60 90 120]</i> - Indicates the number of minutes to add during the summertime. The possible offset times are 30, 60, 90, and 120. The default value is 60.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure daylight savings time on the Switch to run from the 2nd Tuesday in April at 3 PM until the 2nd Wednesday in October at 3:30 PM and add 30 minutes at the onset of DST:

```
DGS3100# config dst repeating 2 tue 4 15:00 2 wed 10 15:30 offset 30
```

```
Success.
```

```
DGS3100#
```

show time

Purpose	To display the current time settings and status.
Syntax	show time
Description	The show time command displays the system time and date configuration, as well as displays the current system time.
Parameters	None.
Restrictions	None.

Example usage:

To show the time currently set on the Switch's System clock:

```
DGS3100# show time

Current Time Source : System Clock
Boot Time           : 4 May 2006 10:21:22
Current Time        : 4 May 2006 15:01:32
Time Zone           : GMT +02:30
Daylight Saving Time: Repeating
Offset in Minutes   : 30
Repeating From     : Apr 2nd Tue 15:00
To                 : Oct 2nd Wed 15:30
Annual  From       : 29 Apr 00:00
To                 : 12 Oct 00:00

DGS3100#
```

ROUTING TABLE COMMANDS

The Routing Table commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
create iproute	[default] <ipaddr> {<metric 1-65535>}
delete iproute	[default]
show iproute	

Each command is listed in detail, as follows:

create iproute

Purpose	To create IP route entries in the Switch's IP routing table.
Syntax	create iproute [default] <ipaddr> {<metric 1-65535>}
Description	The create iproute command creates a static IP route entry in the Switch's IP routing table.
Parameters	<p><i>default</i> – The entry is the default IP route entry in the Switch's routing table.</p> <p><<i>ipaddr</i>> – The gateway IP address for the next hop router.</p> <p><<i>metric 1-65535</i>> – The routing protocol metric entry representing the number of routers between the Switch and the IP address above. The default setting is 1.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To add the default static address 10.48.74.121, with a metric setting of 1, to the routing table as the default route:

```
DGS3100# create iproute default 10.48.74.121 1
```

```
Success.
```

```
DGS3100#
```

delete iproute

Purpose	To delete a default IP route entry from the Switch's IP routing table.
Syntax	delete iproute [default]
Description	The delete iproute command deletes an existing default entry from the Switch's IP routing table.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To delete the default IP route:

```
DGS3100# delete iproute default
```

Success.

```
DGS3100#
```

show iproute

Purpose	To display the Switch's current IP routing table.
Syntax	show iproute
Description	The show iproute command displays the Switch's current IP routing table.
Parameters	None
Restrictions	None.

Example usage:

To display the contents of the IP routing table:

```
DGS3100# show iproute
```

Routing Table

IP Address/Netmask	Gateway	Interface	Hops	Protocol
10.0.0.0/8	0.0.0.0	System	1	Local

Total Entries : 1

```
DGS3100#
```

ARP COMMANDS

The ARP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
create arpentry	<ipaddr> <macaddr>
config arpentry	<ipaddr> <macaddr>
delete arpentry	[<ipaddr> all]
show arpentry	{ipif system ipaddress <ipaddr> static }
config arp_aging time	<value 1-65535 >
clear arptable	
config arp_spoofing_prevention	[add gateway_ip <ipaddr> gateway_mac <macaddr> ports [<portlist> all] delete gateway_ip <ipaddr>]
show arp_spoofing_prevention	

Each command is listed in detail, as follows:

create arpentry

Purpose	To insert a static entry into the ARP table.
Syntax	create arpentry <ipaddr> <macaddr>
Description	The create arpentry command enters an IP address and the corresponding MAC address into the Switch's ARP table.
Parameters	<p><ipaddr> – The IP address of the end node or station.</p> <p><macaddr> – The MAC address corresponding to the IP address above.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To create a static ARP entry for the IP address 10.48.74.121 and MAC address 00:50:BA:00:07:36:

```
DGS3100# create arpentry 10.48.74.121 00-50-BA-00-07-36
```

```
Success.
```

```
DGS3100#
```

config arpentry

Purpose	To configure a static entry in the ARP table.
---------	---

Syntax	config arpentry <ipaddr> <macaddr>
Description	The config arpentry command configures a static entry in the ARP Table. The user may specify the IP address and the corresponding MAC address of an entry in the Switch's ARP table
Parameters	<ipaddr> – The IP address of the end node or station. <macaddr> – The MAC address corresponding to the IP address above.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure a static ARP entry for the IP address 10.48.74.12 and MAC address 00:50:BA:00:07:36:

```
DGS3100# config arpentry 10.48.74.12 00-50-BA-00-07-36
```

Success.

```
DGS3100#
```

delete arpentry

Purpose	To delete a static entry from the ARP table.
Syntax	delete arpentry [<ipaddr> all]
Description	The delete arpentry command deletes a static ARP entry, made using the create arpentry command above, by specifying either the IP address of the entry or all. Specifying all clears the Switch's ARP table.
Parameters	<ipaddr> – The IP address of the end node or station to be deleted from the ARP table. all – Deletes all ARP entries.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To delete an entry of IP address 10.48.74.121 from the ARP table:

```
DGS3100# delete arpentry 10.48.74.121
```

Success.

```
DGS3100#
```

show arpentry

Purpose	To display the ARP table.
Syntax	show arpentry {ipif system ipaddress <ipaddr> static }
Description	The show arpentry command displays the current contents of the Switch's ARP table.
Parameters	<p><i>ipif system <ipif_name 12></i> – The name of the IP interface, the end node or station for which the ARP table entry was made, resides on.</p> <p><i>ipaddress <ipaddr></i> – The network address corresponding to the IP interface name above.</p> <p><i>static</i> – Displays the static entries to the ARP table.</p>
Restrictions	None.

Example usage:

To display the ARP table:

```
DGS3100# show arpentry
ARP timeout : 150 Seconds
Interface      IP Address      MAC Address      Type
-----
System        10.6.41.33    00:00:b0:07:07:49  dynamic
System        10.6.41.49    00:20:18:2a:56:18  dynamic
Total Entries = 2
DGS3100#
```

config arp_aging time

Purpose	To configure the age-out timer for ARP table entries on the Switch.
Syntax	config arp_aging time <value 1-65535 >
Description	The config arp_aging time command sets the maximum amount of time, in minutes, that an ARP entry can remain in the Switch's ARP table, without being accessed, before it is dropped from the table.
Parameters	<i>time <value 1-65535></i> – The ARP age-out time, in minutes. The value may be in the range of 1-65535 minutes, with a default setting of 20 minutes.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure ARP aging time:

```
DGS3100# config arp_aging time 30
Success.
DGS3100#
```

clear arptable

Purpose	To remove all dynamic ARP table entries.
Syntax	clear arptable
Description	The clear arptable command is used to remove dynamic ARP table entries from the Switch's ARP table. Static ARP table entries are not affected.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To remove dynamic entries in the ARP table:

```
DGS3100# clear arptable
Success.
DGS3100#
```

config arp_spoofing_prevention

Purpose	To enable ARP Spoofing Prevention on specific ports on the switch.
Syntax	config arp_spoofing_prevention [add gateway_ip <ipaddr> gateway_mac <macaddr> ports [<portlist> all] delete gateway_ip <ipaddr>]
Description	The config arp_spoofing_prevention command is used to configure ARP Spoofing Prevention on the Switch.
Parameters	<p><gateway_ip> – The IP address of the gateway to enable for ARP Spoofing Prevention.</p> <p><gateway_mac> – The MAC address of the gateway to enable for ARP Spoofing Prevention.</p> <p><portlist> – The port or range of ports to configure ARP Spoofing Prevention.</p> <p><delete gateway_ip> – The IP address of the gateway from which to remove ARP Spoofing Prevention.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To enable ARP Spoofing Prevention on the switch:

```
DGS-3100# config arp_spoofing_prevention add gateway_ip 10.48.74.12
gateway_mac 00-50-BA-00-07-36 ports 5
Success.
DGS-3100#
```

show arp_spoofing_prevention

Purpose	To display all ARP spoofing prevention table entries on the Switch.
Syntax	show arp_spoofing_prevention
Description	The show arp_spoofing_prevention command displays current contents of the ARP spoofing prevention table in the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display ARP Spoofing Prevention on the switch:

```
DGS-3100# show arp_spoofing_prevention

IP    : 1.1.1.1
MAC  : 00:50:ba:00:07:37
Ports : 1:1

DGS-3100#
```

BANNER COMMANDS

The Banner commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config login_banner	<text 0-159>
show login_banner	

Each command is listed in detail, as follows:

config login_banner

Purpose	Used to define telnet login banner
Syntax	config login_banner <text 0-159>
Description	This command allows definition of the login banner text.
Parameters	<text 0 – 159> - up to 160 characters
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To define telnet login banner to show ‘D-Link’:

```
DGS3100# config login_banner D-Link
Success.
DGS3100#
```

show login_banner

Purpose	Used to show the login banner.
Syntax	show login_banner
Description	This command allows display of the telnet login banner
Parameters	None
Restrictions	None

Usage Example:

To show the login banner:

```
DGS3100# show login_banner
Login banner is : D-Link
DGS3100#
```

COMMAND HISTORY LIST COMMANDS

The Command History List commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
?	
show command_history	
dir	
config command_history	<value 10-237>

Each command is listed in detail, as follows:

?	
Purpose	To display all commands in the Command Line Interface (CLI).
Syntax	?
Description	The ? command displays all of the commands available through the Command Line Interface (CLI).
Parameters	{<command>} – Lists all the corresponding parameters for the specified command, along with a brief description of the command's function and similar commands having the same words in the command.
Restrictions	None.

Example usage:

To display all of the commands in the CLI:

```
DGS3100# ?
..
?
clear
clear arpstable
clear counters
clear fdb
clear log
clear port_security_entry port
config 802.1p default_priority
config 802.1p user_priority
config 802.1x auth_mode
config 802.1x auth_parameter ports
config 802.1x auth_protocol
config 802.1x capability ports
config 802.1x init
config 802.1x reauth
config access_profile profile_id
```

```

config account
config admin local_enable
config arp_aging time
config arpentry
config authen application

```

CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All

show command_history

Purpose	To display the command history.
Syntax	show command_history
Description	The show command_history command displays the command history.
Parameters	None.
Restrictions	None.

Example usage:

To display the command history:

```

DGS3100# show command_history

?
? show
show vlan
show command history

DGS3100#

```

dir

Purpose	To display all commands.
Syntax	dir
Description	The dir command displays all commands.
Parameters	None.
Restrictions	None.

Example usage:

To display all of the commands:

```

DGS3100# dir

..
?
clear
clear arptable
clear counters
clear fdb
clear log
config 802.1p default_priority

```

```

config 802.1p user_priority
config 802.1x auth_parameter ports
config 802.1x auth_protocol
config 802.1x capability ports
config 802.1x init
config 802.1x reauth
config account
config admin local_enable
config arp_aging time
config arpentry
config authen application
config authen parameter attempt
config authen parameter response_timeout
config authen server group
More: <space>, Quit: q, One line: <return>

```

config command_history

Purpose	To configure the command history.
Syntax	config command_history <value 10-237>
Description	The config command_history command configures the command history.
Parameters	<value 10-237> – The number of previously executed commands maintained in the buffer. Up to 40 of the latest executed commands may be viewed.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure the command history:

```

DGS3100# config command_history 20

Success.

DGS3100#

```

SSH COMMANDS

The SSH commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
enable ssh	
disable ssh	
config ssh authmode	publickey [enable disable]
show ssh authmode	
config ssh server	{ timeout <sec 120-600> port <tcp_port_number 1-65535> }
show ssh server	
show ssh algorithm	
config ssh crypto	<username 1-48> [rsa dsa] <sequences>
show ssh crypto	
delete ssh crypto	<username 1-48>

Each command is listed in detail, as follows:

enable ssh

Purpose	To enable SSH.
Syntax	enable ssh
Description	The enable ssh command enables SSH on the Switch.
Parameters	None
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To enable SSH:

```
DGS3100# enable ssh
TELNET will be disabled when enable SSH.
Success.

DGS3100#
```

disable ssh

Purpose	To disable SSH.
Syntax	disable ssh
Description	The disable ssh command disables SSH on the Switch.
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To disable SSH:

```
DGS3100# disable ssh
```

Success.

```
DGS3100#
```

config ssh authmode

Purpose	To configure the SSH authentication mode setting.
Syntax	config ssh authmode publickey [enable disable]
Description	The config ssh authmode command configures the SSH authentication mode for users attempting to access the Switch.
Parameters	<i>publickey [enable disable]</i> – Specifies that a publickey configuration set on a SSH server is to be used for authentication. Enables or disables SSH authentication on the Switch.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To enable the SSH authentication mode:

```
DGS3100# config ssh authmode publickey enable
```

Success.

```
DGS3100#
```

show ssh authmode

Purpose	To display the SSH authentication mode setting.
Syntax	show ssh authmode
Description	The show ssh authmode command displays the current SSH authentication set on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the current authentication mode set on the Switch:

```
DGS3100# show ssh authmode

The SSH User Authentication Support
-----
Publickey : Enabled

DGS3100#
```

config ssh server

Purpose	To configure the SSH server.
Syntax	config ssh server { timeout <sec 120-600> port <tcp_port_number 1-65535> }
Description	The config ssh server command configures the SSH server.
Parameters	<p><i>timeout <sec 120-600></i> - Specifies the connection timeout. The value may be between 120 and 600 seconds. The default is 600 seconds.</p> <p><i>port <tcp_port_number 1-65535></i> - The TCP port number of the server. TCP ports are numbered between 1 and 65535. The 'well-known' port for the SSH management software is 22.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To configure the SSH server:

```
DGS3100# config ssh server timeout 300 port 1000

Success.

DGS3100#
```

show ssh server

Purpose	To display the SSH server setting
Syntax	show ssh server
Description	The show ssh server command displays the current SSH server settings.
Parameters	None
Restrictions	None

Example usage:

To display the SSH server:

```
DGS3100# show ssh server

SSH Server Status      : disabled
SSH Max Session       : 5
Connection timeout    : 600
```

Authenticate failed attempts	: 3
Listened Port Number	: 22

DGS3100#

show ssh algorithm

Purpose	To display the SSH algorithm setting.
Syntax	show ssh algorithm
Description	The show ssh algorithm command displays the current SSH algorithm setting status.
Parameters	None.
Restrictions	None.

Example usage:

To display SSH algorithms currently set on the Switch:

DGS3100# show ssh algorithm

Encryption Algorithm

3des-cbc
AES128
AES192
AES256
RC4

Data Integrity Algorithm

MD5
SHA1

Public Key Algorithm

RSA
DSA

DGS3100#

config ssh crypto

Purpose	To specify which SSH public key is manually configured.
Syntax	config ssh crypto <username 1-48> [rsa dsa] <sequences>
Description	The config ssh crypto command specifies which SSH public key is manually configured. The key string needs to be in UU-encoded DER format. UU-encoded format is the same format in the authorized_keys file used by OpenSSH.

Parameters	<username 1-48> – The username of the remote SSH client. rsa – Indicates the RSA key pair is manually configured. dsa – Indicates the DSA key pair is manually configured. <sequences> – Specifies User's public key that Identifiers the user upon login.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To specify the SSH public key for the remote SSH client bob:

```
DGS3100# config ssh crypto bob rsa
Please input the public key:
AAAAB3NzaC1yc2EAAAABJQAAEAEhtXYN0V9WMF4972irwSdLFbz6lnm+
GdpMScn
+PXv1JrRPJk4k9svJRmj5mbIYEfuM9NMVZ7fvgVoKYQQwTuAIQ==

Fingerprint: c4:30:5d:da:3f:b8:dc:70:75:7d:64:9f:a9:54:7c:c1
DGS3100#
DGS3100#
```

show ssh crypto

Purpose	To display the SSH public key stored on the device.
Syntax	show ssh crypto
Description	The show ssh crypto command displays the SSH public key stored on the device.
Parameters	None
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To display the SSH public key on the device:

DGS3100# show ssh crypto	
Username	Fingerprint
-----	-----
bob	c4:30:5d:da:3f:b8:dc:70:75:7d:64:9f:a9:54:7c:c1
DGS3100#	

delete ssh crypto

Purpose	To remove a specified user's SSH public key from the device.
Syntax	delete ssh crypto <username 1-48>
Description	The delete ssh crypto command deletes the specified user's SSH public key from the device.
Parameters	< <i>username 1-48</i> > - The username of the remote SSH client.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To delete the SSH public key of the remote SSH client bob:

```
DGS3100# Delete ssh crypto bob
```

```
Success.
```

```
DGS3100#
```

SSL COMMANDS

The SSL commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
enable ssl	
disable ssl	
show ssl	
show ssl cachetimeout	
crypto certificate	<number 1-2> generate {key-generate <length 512 - 1024>} cn <common- name 1 - 64> ou <organization-unit 1 - 64> or <organization 1 - 64> loc <location 1 - 64> st <state 1 - 64> cu <country 1-2> duration <days 30-3650>
crypto certificate	<number 1-2> request {cn <common- name 1 - 64> ou <organization-unit 1 - 64> or <organization 1 - 64> loc <location 1 - 64> st <state 1 - 64> cu <country 1-2>}
crypto certificate	<number 1-2> import
config ssl certificate	<number 1-2>
show crypto certificate mycertificate	{number 1-2}

Each command is listed in detail, as follows:

enable ssl

Purpose	To enable the SSL function on the Switch.
Syntax	enable ssl
Description	The enable ssl command enables SSL on the Switch by implementing every combination of listed ciphersuites on the Switch. Entering this command enables the SSL status on the Switch. Enabling SSL disables the web-manager on the Switch.
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To enable SSL on the Switch for all ciphersuites:

```
DGS3100# enable ssl
```

Note: Web will be disabled if SSL is enabled.

Success.

DGS3100#

disable ssl

Purpose	To disable the SSL function on the Switch.
Syntax	disable ssl
Description	The disable ssl command disables SSL on the Switch and can be used to disable all combinations of listed ciphersuites on the Switch. Note that disabling SSL will not enable WEB access automatically (WEB access will stay disabled), and you'll need to enable it manually.
Parameters	None.
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To disable the SSL status on the Switch:

DGS3100# disable ssl

Success.

DGS3100#

show ssl

Purpose	To view the SSL status and the certificate file status on the Switch
Syntax	show ssl
Description	The show ssl command displays the SSL status and the certificate file status on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the SSL status on the Switch:

DGS3100# show ssl

SSL status	Enabled
RSA_WITH_RC4_128_MD5	Enabled
RSA_WITH_3DES_EDE_CBC_SHA	Enabled
RSA_EXPORT_WITH_RC4_40_MD5	Enabled

DGS3100#

show ssl cachetimeout

Purpose	To show the SSL cache timeout.
Syntax	show ssl cachetimeout
Description	The show ssl cachetimeout command displays the SSL cache timeout currently implemented on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the SSL cache timeout on the Switch:

```
DGS3100# show ssl cachetimeout

Cache timeout is 600 seconds.

DGS3100#
```

crypto certificate (generate)

Purpose	To generate a self-signed HTTPS certificate
Syntax	crypto certificate <number 1-2> generate {key-generate <length 512-1024>} cn <common-name 1-64> ou <organization-unit 1-64> or <organization 1-64> loc <location 1-64> st <state 1-64> cu <country 1-2> duration <days 30-3650>
Description	The crypto certificate (generate) command generates a self-signed HTTPS certificate for the device. Default Certificate 1 generated at very first start up. Note that for first time certificate 2 generates, there is a need in key generate.
Parameters	<p><i>number</i> — Specifies the certificate number (Range: 1 - 2). <i>key-generate</i> — Regenerates the SSL RSA key. <i>length</i> — Specifies the SSL RSA key length (Range: 512 - 1024). <i>common-name</i> — Specifies the fully qualified URL or IP address of the device (Range: 1 - 64). <i>organization</i> — Specifies the organization name (Range: 1 - 64). <i>organization-unit</i> — Specifies the organization-unit or department name (Range: 1 - 64). <i>location</i> — Specifies the location or city name (Range: 1 - 64). <i>state</i> — Specifies the state or province name (Range: 1 - 64). <i>country</i> — Specifies the country name (Range: 1 - 2). <i>days</i> — Specifies number of days certification is valid (Range: 30 - 3650).</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To generate a self-signed HTTPS certificate:

```
DGS3100# crypto certificate 1 generate
```

Success.

DGS3100#

crypto certificate (request)

Purpose	To generate and display certificate requests for HTTPS.
Syntax	crypto certificate <number 1-2> request {cn <common-name 1-64> ou <organization-unit 1-64> or <organization 1-64> loc <location 1-64> st <state 1-64> cu <country 1-2>
Description	The crypto certificate (request) command exports a certificate request to a Certification Authority. The certificate request is generated in Base64-encoded X.509 format. Before generating a certificate request, a self-signed certificate must first be generated using the crypto certificate generate . Be aware that you have to reenter the certificate fields. After receiving the certificate from the Certification Authority, use the crypto certificate import to import the certificate into the device. This certificate replaces the self-signed certificate.
Parameters	<p><i>number</i> — Specifies the certificate number (Range: 1 - 2).</p> <p><i>common-name</i> — Specifies the fully qualified URL or IP address of the device (Range: 1- 64).</p> <p><i>organization-unit</i> — Specifies the organization-unit or department name (Range: 1- 64).</p> <p><i>organization</i> — Specifies the organization name (Range: 1- 64).</p> <p><i>location</i> — Specifies the location or city name (Range: 1- 64).</p> <p><i>state</i> — Specifies the state or province name (Range: 1- 64).</p> <p><i>country</i> — Specifies the country name (Range: 1- 2).</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To generate and display certificate requests for HTTPS.:

<pre>DGS3100# crypto certificate 1 request -----BEGIN CERTIFICATE REQUEST----- MIIBDTCBuAIBADBTMQswCQYDVQQGEwIgIDEKMAgGA1UECBMBIDEKMAgGA1UEBxMB IDEUMBIGA1UEAxMLMTAuNi4yMi4xMTQxCjAIBgNVBAoTASAxCjAIBgNVBAAsTASAw XDANBgkqhkiG9w0BAQEFAANLADBIakEAw3odbbo5S4JPRz2QJKoEpTmve8WDdsm4 0nvmoPxqUDORI7TigrZfs3vGxg2Nar1RflQwKQxb7VetgxF8VeKmDQIDAQABoAAw DQYJKoZlhvcNAQEEBQADQQB1owjB21fZvIYdBS1zJI/Hd6F2MhrzF35ULNgNHP0Z pbU7Y4HkyqsQzkCwDAzGD+y4YB/mu4jNxeq+Ik2UEYD -----END CERTIFICATE REQUEST-----</pre>
--

Success.

DGS3100#

crypto certificate (import)

Purpose	To import a certificate signed by the Certification Authority for HTTPS.
Syntax	crypto certificate <number 1-2> import
Description	The crypto certificate (import) command imports an external certificate (signed by a Certification Authority) to the device. To end the session, add a period (.) on a separate line after the input. The imported certificate must be based on a certificate request created by the crypto certificate request. If the public key found in the certificate does not match the device's SSL RSA key, the command fails. This command is not saved in the device configuration; however, the certificate imported by this command is saved in the private configuration (which is never displayed to the user or backed up to another device).
Parameters	<i>number</i> — Specifies the certificate number (Range: 1 - 2).
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To import a certificate signed by the Certification Authority for HTTPS:

```
DGS3100# crypto certificate 1 import
Please paste the input now, add a period (.) on a separate line after the input,
and press Enter.
-----BEGIN CERTIFICATE-----
MIIFXTCCBEWgAwIBAgIKFWx9ZgACAAAAMDANBgkqh
CZlmiZPyLGQBGRYDTkVUMRIwEAYKCZlmiZPyLGQBGRY
xcNoBIJIFr8H/nMiL/Aa86nhnevaq49df/cIt6XDHeRVINC
767yZ3lyB8U3hzUxVOjfACNcQR0GuwNt1i58qbCGuhE
eaft/2OmvJezNF5oDgYgbInlotyikUgNXzFeTecebzu161
scXI7iqyF1tdMQKG0/LZ3rn2Su5Sx2dycg5It9Lsib+Ej2fj
UKOIzLRkan3m1WGGJEmcv4JK0WaJLzfyW4iDiYtrryN
-----END CERTIFICATE-----
.
Certificate imported successfully
Issued by : DC=, DC=, CN=
Valid From: Jan 24 14:42:10 2008 GMT
Valid to: Jan 24 14:52:10 2009 GMT
Subject: C= , ST= , L= , O= , OU= , CN=
SHA1 Fingerprint: E7495984 30BDFFA6 D133E7B6 4AA7A608 CE017347

Success.
DGS3100#
```

config ssl certificate

Purpose	To configure the active certificate for HTTPS.
---------	--

Syntax	config ssl certificate <number 1-2>
Description	The config ssl certificate command activates SSL certificate.
Parameters	<i>number</i> — Specifies the certificate number (Range: 1 - 2).
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To configure the active certificate for SSL:

```
DGS3100# config ssl certificate 1
Success.

DGS3100#
```

show crypto certificate mycertificate

Purpose	To display the SSH certificates of the device.
Syntax	show crypto certificate mycertificate {number 1-2}
Description	The show crypto certificate mycertificate command displays the SSL certificate of the device.
Parameters	<i>number</i> — Specifies the certificate number (Range: 1 - 2).
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To show crypto certificate mycertificate:

```
DGS3100# show crypto certificate mycertificate
-----BEGIN CERTIFICATE-----
MIIBkDCCAToCAQAwDQYJKoZIhvcNAQEEBQAwUzELMAkGA1UEBhMCICAxCjAIBgNV
BAgTASAxCjAIBgNVBAcTASAxFDASBgNVBAMTCzEwLjYuMjluMTExMQowCAYDVQQK
EwEgMQowCAYDVQQLEwEgMB4XDTA1MDEwMzAyMzM1NFoXDTA2MDEwMzAyMzM1NFow
UzELMAkGA1UEBhMCICAxCjAIBgNVBAgTASAxCjAIBgNVBAcTASAxFDASBgNVBAMT
CzEwLjYuMjluMTExMQowCAYDVQQKEwEgMQowCAYDVQQLEwEgMFwwDQYJKoZIhvcN
AQEBBQADSwAwSAJBAMclwCcmDHypkoWE3eUFsw0xWnQ+0kkve9kRo/kEIIRsk8jw
FDPMPPElG4VkJUuHMSAYZSigDLnvqR4bTeNVq9M8CAwEAATANBgkqhkiG9w0BAQQF
AANBAJNZOGD4J9+XTVPbN9wQK2uRI6SwngGkyXS1uD6QzqhaJBe09/dqZAfsc86W
Rq7K3jFZKfx3BkH7NPiqBO6PhaQ=
-----END CERTIFICATE-----
Issued by : C= , ST= , L= , CN=10.6.22.111, O= , OU=
Valid From: Jan 3 02:33:54 2005 GMT
Valid to: Jan 3 02:33:54 2006 GMT
Subject: C= , ST= , L= , CN=10.6.22.111, O= , OU=
SHA1 Fingerprint: 99A1052E E4C9DA24 2F9E2BB8 0968364E 387C6628
```

DGS3100#

ACCESS AUTHENTICATION CONTROL COMMANDS

The Access Authentication Control commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
create authen_login method_list_name	<string 12>
config authen_login	[default method_list_name <string 12> http_method_list https_method_list] method {tacacs+ radius local none}
delete authen_login method_list_name	<string 12>
show authen_login	{all default http_method_list https_method_list method_list_name <string 12>}
create authen_enable method_list_name	<string 12>
config authen_enable	[default method_list_name <string 12>] method {tacacs+ radius local_enable none}
delete authen_enable method_list_name	<string 12>
show authen_enable	[all default method_list_name <string 12>]
config authen application	{console telnet ssh all} [login enable] [default method_list_name <string 12>]
show authen application	
create authen server_host	<ipaddr> protocol [tacacs+ radius] {port <int 1-65535> key [<key_string 128> none] timeout <int 1-30> retransmit <int 1-10> priority [first second third]}
config authen server_host	<ipaddr> protocol tacacs+ {port <int 1-65535> key [<key_string 128> none] timeout <int 1-30>} priority [first second third]
delete authen server_host	<ipaddr> protocol [tacacs+ radius]
show authen server_host	
local_enable admin	
config admin local_enable	

Each command is listed in detail, as follows:

create authen_login method_list_name

Purpose	To create a user-defined list of authentication methods for users logging on to the Switch.
Syntax	create authen_login method_list_name <string 12>
Description	The create authen_login method_list_name command creates a list of authentication techniques for user login. The Switch can support up to eight method lists, but one is reserved as a default and cannot be deleted. Multiple method lists must be created and configured separately.
Parameters	<string 12> - Defines the <i>method_list_name</i> to be created as a string of up to 12 alphanumeric characters.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To create the method list ‘Trinity’:

```
DGS3100# create authen_login method_list_name Trinity
```

```
Success.
```

```
DGS3100#
```

config authen_login

Purpose	To configure a user-defined or default <i>method list</i> of authentication methods for user login.
Syntax	config authen_login [default method_list_name <string 12> http_method_list https_method_list] method {tacacs+ radius local none}
Description	The config authen_login command configures a user-defined or default <i>method list</i> of authentication methods for users logging on to the Switch. The sequence of methods implemented in this command affects the authentication result. For example, if a user enters a sequence of methods like <i>tacacs – local</i> , the Switch sends an authentication request to the first <i>tacacs</i> host in the server group. If no response comes from the server host, the Switch sends an authentication request to the second <i>tacacs</i> host in the server group and so on, until the list is exhausted. When the <i>local</i> method is used, the privilege level is dependant on the local account privilege configured on the Switch. Successful login using any of these methods gives the user a ‘user’ privilege only. If the user wishes to upgrade his or her status to the administrator level, the user must implement the <i>enable admin</i> command, followed by a previously configured password. (See the enable admin part of this section for more detailed information, concerning the enable admin command.)
Parameters	<i>default</i> – The default method list for access authentication, as defined by the user. The user may choose one or more of the following authentication methods: <ul style="list-style-type: none">▪ <i>tacacs+</i> – Specifies that the user is to be authenticated using the TACACS+ protocol from the remote TACACS+ server hosts of the TACACS+ server group list.

- *radius* - Specifies that the user is to be authenticated using the *RADIUS* protocol from the remote RADIUS server hosts of the RADIUS server group list.
- *local* - Specifies that the user is to be authenticated using the local *user account* database on the Switch.
- *none* – Specifies that no authentication is required to access the Switch.

http_method_list – Specifies the httpsmethod list for access authentication.

https_method_list – Specifies the https method list for access authentication.

method_list_name <string 12> – Specifies a previously created method list name defined by the user. One or more of the following authentication methods may be added to this method list:

- *tacacs+* – Specifies that the user is to be authenticated using the TACACS+ protocol from a remote TACACS+ server.
- *radius* - Specifies that the user is to be authenticated using the *RADIUS* protocol from a remote RADIUS server.
- *local* - Specifies that the user is to be authenticated using the local *user account* database on the Switch.
- *none* – Specifies that no authentication is required to access the Switch.



NOTE: Entering *none* or *local* as an authentication protocol overrides any other authentication that follows it on a method list or on the default method list.

Restrictions

Only Administrator or operator-level users can issue this command.

Example usage:

To configure the user defined method list ‘Trinity’ with authentication methods TACACS+, RADIUS and local, in that order.

```
DGS3100# config authen_login method_list_name Trinity method tacacs+ radius local
Success.
DGS3100#
```

delete authen_login method_list_name

Purpose	To delete a previously configured user defined list of authentication methods for users logging on to the Switch.
Syntax	delete authen_login method_list_name <string 12>
Description	The delete authen_login method_list_name command deletes a list of authentication methods for user login.
Parameters	<string 12> - The previously created <i>method_list_name</i> to delete.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To delete the method list name ‘Trinity’:

```
DGS3100# delete authen_login method_list_name Trinity
Success.
DGS3100#
```

show authen_login

Purpose	To display a previously configured user defined method list of authentication methods for users logging on to the Switch.
Syntax	show authen_login {all default http_method_list https_method_list method_list_name <string 12>}
Description	The show authen_login command displays a list of authentication methods for user login.
Parameters	<p><i>default</i> – Displays the default method list for users logging on to the Switch.</p> <p><i>method_list_name <string 12></i> - Specifies the <i>method_list_name</i> to display.</p> <p><i>all</i> – Displays all the authentication login methods currently configured on the Switch.</p> <p>The command displays the following parameters:</p> <ul style="list-style-type: none"> • Method List Name – The name of a previously configured method list name. • Method Name – Defines which security protocols are implemented, per method list name.
Restrictions	None

Example usage:

To view all authentication login method list names:

```
DGS3100# show authen_login all
Method List Name      Method Name
-----
default              : Local
DGS3100#
```

create authen_enable method_list_name

Purpose	To create a user-defined method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch
Syntax	create authen_enable method_list_name <string 12>
Description	The create authen_enable method_list_name command creates a list of authentication methods for promoting users with normal level privileges to Administrator level privileges using authentication methods on the Switch. Once a user acquires normal user level privileges on the Switch, he or she must be authenticated by a method on the Switch to gain administrator privileges on the Switch,

	which is defined by the Administrator. A maximum of eight (8) enable method lists can be implemented on the Switch.
Parameters	<string 12> - Defines the <i>authen_enable method_list_name</i> to be created as a string of up to 12 alphanumeric characters.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To create a user-defined method list, named ‘Permit’ for promoting user privileges to Adminstrator privileges:

```
DGS3100# create authen_enable method_list_name Permit
Success.
DGS3100#
```

config authen_enable

Purpose	To configure a user-defined method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.
Syntax	config authen_enable [default method_list_name <string 12>] method {tacacs+ radius local_enable none}
Description	The config authen_enable command configures a user-defined list of authentication methods for promoting normal user level privileges to Administrator level privileges using authentication methods on the Switch. Once a user acquires normal user level privileges on the Switch, he or she must be authenticated by a method on the Switch to gain administrator privileges on the Switch, which is defined by the Administrator. A maximum of eight (8) enable method lists can be implemented simultaneously on the Switch. The sequence of methods implemented in this command affects the authentication result. For example, if a user enters a sequence of methods like <i>tacacs+ – radius – local_enable</i> , the Switch sends an authentication request to the first TACACS+ host in the server group. If no verification is found, the Switch sends an authentication request to the second TACACS+ host in the server group and so on, until the list is exhausted. At that point, the Switch restarts the same sequence with the following protocol listed, <i>radius</i> . If no authentication takes place using the <i>radius</i> list, the <i>local_enable</i> password set in the Switch is used to authenticate the user. Successful authentication using any of these methods gives the user an ‘Admin’ level privilege.
Parameters	<i>default</i> – The default method list for adminstration rights authentication, as defined by the user. The user may choose one or more of the following authentication methods: <ul style="list-style-type: none"> • <i>tacacs+</i> – Specifies that the user is to be authenticated using the TACACS+ protocol from the remote TACACS+ server hosts of the TACACS+ server group list. • <i>radius</i> – Specifies that the user is to be authenticated using the RADIUS protocol from the remote RADIUS server hosts of the RADIUS server group list. • <i>local_enable</i> - Specifies that the user is to be authenticated

using the local *user account* database on the Switch.

- *none* – Specifies that no authentication is required to access the Switch.

method_list_name <string 12> – Specifies a previously created *authen_enable method_list_name*. The user may add one or more of the following authentication methods to this method list:

- *tacacs+* – Specifies that the user is to be authenticated using the *TACACS+* protocol from a remote *TACACS+* server.
- *radius* - Specifies that the user is to be authenticated using the *RADIUS* protocol from a remote *RADIUS* server.
- *local_enable* - Specifies that the user is to be authenticated using the local *user account* database on the Switch. The local enable password of the device can be configured using the '**config admin local_password**' command.
- *none* – Specifies that no authentication is required to access the Switch.

Restrictions

Only Administrator or operator-level users can issue this command.

Example usage:

To configure the user defined method list ‘Permit’ with authentication methods TACACS+, RADIUS and local_enable, in that order.

```
DGS3100# config authen_enable method_list_name Trinity method tacacs+ radius
local_enable
```

Success.

```
DGS3100#
```

delete authen_enable method_list_name

Purpose To delete a user-defined list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.

Syntax **delete authen_enable method_list_name <string 12>**

Description The **delete authen_enable method_list_name** command deletes a user-defined list of authentication methods for promoting user level privileges to Adminstrator level privileges.

Parameters <*string 12*> - The previously created *authen_enable method_list_name* to be deleted.

Restrictions Only Administrator or operator-level users can issue this command.

Example usage:

To delete the user-defined method list ‘Permit’

```
DGS3100# delete authen_enable method_list_name Permit
```

Success.

```
DGS3100#
```

show authen_enable

Purpose	To display the list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.
Syntax	show authen_enable [all default method_list_name <string 12>]
Description	The show authen_enable command deletes a user-defined list of authentication methods for promoting user level privileges to Adminstrator level privileges.
Parameters	<p><i>default</i> – Displays the default method list for users attempting to gain access to Administrator level privileges on the Switch.</p> <p><i>method_list_name <string 12></i> – The <i>method_list_name</i> to be displayed.</p> <p><i>all</i> – Displays all the authentication login methods currently configured on the Switch.</p> <p>The command displays the following parameters:</p> <ul style="list-style-type: none"> Method List Name – The name of a previously configured method list name. Method Name – Defines which security protocols are implemeted, per method list name.
Restrictions	None

Example usage:

To display all method lists for promoting user level privileges to administrator level privileges.

```
DGS3100# show authen_enable all
```

Method List Name	Method Name
------------------	-------------

Permit	tacacs+
--------	---------

default	tacacs+
---------	---------

Total Entries : 2

```
DGS3100#
```

config authen application

Purpose	To configure various applications on the Switch for authentication using a previously configured method list.
Syntax	config authen application {console telnet ssh all} [login enable] [default method_list_name <string 12>]
Description	The config authen application command configures Switch applications (console, Telnet, SSH) for login at the user level and at the administration level (<i>authen_enable</i>), utilizing a previously configured method list.
Parameters	<i>application</i> – Specifies the application to configure. One of the following four options may be selected:

	<ul style="list-style-type: none"> • <i>console</i> – Configures the command line interface login method. • <i>telnet</i> – Configures the Telnet login method. • <i>ssh</i> – Configures the Secure Shell login method. • <i>all</i> – Configures all applications as (console, Telnet, SSH) login methods. <p><i>login</i> – Configures an application for normal login on the user level, using a previously configured method list.</p> <p><i>enable</i> – Configures an application for upgrading a normal user level to administrator privileges, using a previously configured method list.</p> <p><i>default</i> – Configures an application for user authentication using the default method list.</p> <p><i>method_list_name <string 12></i> – Configures an application for user authentication using a previously configured <i>method_list_name</i>.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure the default method list for the command line interface:

```
DGS3100# config authen application console login default
Success.
DGS3100#
```

show authen application

Purpose	To display authentication methods for the various applications on the Switch.
Syntax	show authen application
Description	The show authen application command displays all of the authentication method lists (login, enable administrator privileges) for Switch configuration applications (console, Telnet, SSH) currently configured on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the login and enable method list for all applications on the Switch:

```
DGS3100# show authen application
-----+-----+-----+
Application | Login Method List | Enable Method List
-----+-----+-----+
Console    | default           | default
Telnet     | Trinity           | default
SSH        | default           | default
-----+-----+-----+
DGS3100#
```

create authen server_host

Purpose	To create an authentication server host.
Syntax	create authen server_host <ipaddr> protocol tacacs+ {port <int 1-65535> key [<key_string 128> none] timeout <int 1-30>} priority {first second third}
Description	The create authen server_host command creates an authentication server host for the TACACS+/RADIUS security protocols on the Switch. When a user attempts to access the Switch with authentication protocol enabled, the Switch sends authentication packets to a remote TACACS+/RADIUS server host on a remote host. The TACACS+/RADIUS server host then verifies or denies the request and returns the appropriate message to the Switch. More than one authentication protocol can be run on the same physical server host but, remember that TACACS+/RADIUS are separate entities and are not compatible with each other. The maximum supported number of server hosts is 16.
Parameters	<p><i>server_host <ipaddr></i> – The IP address of the remote server host to add.</p> <p><i>protocol</i> – The protocol used by the server host. The options are:</p> <ul style="list-style-type: none"> • <i>tacacs+</i> – Specifies that the server host utilizes the TACACS+ protocol. • <i>radius</i> – Specifies that the server host utilizes the RADIUS protocol. <p><i>port <int 1-65535></i> – The virtual port number of the authentication protocol on a server host. The value must be between 1 and 65535. The default port number is 49 for TACACS/TACACS+ servers and 1812 and 1813 for RADIUS servers but the user may set a unique port number for higher security.</p> <p><i>key [<key_string 128> none]</i> – The authentication key to be shared with a configured TACACS+ or RADIUS server only. The value is a string of up to 128 alphanumeric characters, or <i>none</i>.</p> <p><i>timeout <int 1-30></i> – The time in seconds the Switch waits for the server host to reply to an authentication request. The default value is 5 seconds.</p> <p><i>retransmit <int 1-10></i> – The number of times the device resends an authentication request when the server does not respond. The value is between 1 and 10. This field is inoperable for the TACACS+ protocol.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To create a TACACS+ authentication server host, with port number 1234, a timeout value of 10 seconds and a retransmit count of 5.

```
DGS3100# create authen server_host 10.1.1.121 protocol tacacs+ port 1234
timeout 10 retransmit 5
```

Success.

```
DGS3100#
```

config authen server_host

Purpose	To configure a user-defined authentication server host.
Syntax	config authen server_host <ipaddr> protocol [tacacs+ radius] {port <int 1-65535> key [<key_string 128> none] timeout <int 1-30> retransmit <int 1-10>}
Description	The config authen server_host command configures a user-defined authentication server host for the TACACS+/RADIUS security protocols on the Switch. When a user attempts to access the Switch with the authentication protocol enabled, the Switch sends authentication packets to a remote TACACS+/RADIUS server host on a remote host. The TACACS+/RADIUS server host then verifies or denies the request and returns the appropriate message to the Switch. More than one authentication protocol can be run on the same physical server host but, remember that TACACS+/RADIUS are separate entities and are not compatible with each other. The maximum supported number of server hosts is 16.
Parameters	<p><i>server_host <ipaddr></i> – The IP address of the remote server host the user wishes to alter.</p> <p><i>protocol</i> – The protocol used by the server host. The options are:</p> <ul style="list-style-type: none"> • <i>tacacs+</i> – Specifies that the server host utilizes the TACACS+ protocol. • <i>radius</i> – Specifies that the server host utilizes the RADIUS protocol. <p><i>port <int 1-65535></i> – The virtual port number of the authentication protocol on a server host. The value must be between 1 and 65535. The default port number is 49 for TACACS/TACACS+ servers and 1812 and 1813 for RADIUS servers but the user may set a unique port number for higher security.</p> <p><i>key [<key_string 128> none]</i> – The authentication key to be shared with a configured TACACS+ or RADIUS server only. The value is a string of up to 128 alphanumeric characters, or <i>none</i>.</p> <p><i>timeout <int 1-30></i> – The time in seconds the Switch waits for the server host to reply to an authentication request. The default value is 5 seconds.</p> <p><i>retransmit <int 1-10></i> – The number of times the device resends an authentication request when the server does not respond. The value is between 1 and 10. This field is inoperable for the TACACS+ protocol.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure a TACACS+ authentication server host, with port number 4321, a timeout value of 12 seconds and a retransmit count of 4.

```
DGS3100# config authen server_host 10.1.1.121 protocol tacacs+ port 4321
timeout 12 retransmit 4
```

Success.

```
DGS3100#
```

delete authen server_host

Purpose	To delete a user-defined authentication server host.
Syntax	delete authen server_host <ipaddr> protocol [tacacs+ radius]
Description	The delete authen server_host command deletes a user-defined authentication server host previously created on the Switch.
Parameters	<p><i>server_host <ipaddr></i> - The IP address of the remote server host to be deleted.</p> <p><i>protocol</i> – The protocol used by the server host the user wishes to delete. The options are:</p> <ul style="list-style-type: none"> • <i>tacacs+</i> – Specifies that the server host utilizes the TACACS+ protocol. • <i>radius</i> – Specifies that the server host utilizes the RADIUS protocol.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To delete a user-defined TACACS+ authentication server host:

```
DGS3100# delete authen server_host 10.1.1.121 protocol tacacs+
Success.

DGS3100#
```

show authen server_host

Purpose	To view a user-defined authentication server host.
Syntax	show authen server_host
Description	<p>The show authen server_host command displays user-defined authentication server hosts previously created on the Switch.</p> <p>The following parameters are displayed:</p> <ul style="list-style-type: none"> IP Address – The IP address of the authentication server host. Protocol – The protocol used by the server host. Possible results include TACACS+ or RADIUS. Port – The virtual port number on the server host. The default value is 49. Timeout - The time in seconds the Switch waits for the server host to reply to an authentication request. Retransmit - The value in the retransmit field denotes how many times the device resends an authentication request when the TACACS server does not respond. This field is inoperable for the tacacs+ protocol. Key - Authentication key to be shared with a configured TACACS+ server only.
Parameters	None.
Restrictions	None.

Example usage:

To view authentication server hosts currently set on the Switch:

```
DGS3100# show authen server_host

IP Address   Protocol   Port  Timeout Retransmit Key
-----       -----      ---   -----   -----   -----
10.53.13.94  TACACS    49    5        2        -----

Total Entries : 1

DGS3100#
```

local_enable admin

Purpose	To promote user level privileges to administrator level privileges.
Syntax	local_enable admin
Description	The local_enable admin command enables a user to be granted administrative privileges on to the Switch. After logging on to the Switch, users have only 'user' level privileges. To gain access to administrator level privileges, the user may enter this command. The system then prompts for an authentication password. Possible authentication methods for this function include TACACS, TACACS+, RADIUS, user defined server groups, local enable (local account on the Switch), or no authentication (none). Because TACACS does not support the enable function, the user must create a special account on the server host which has the username 'enable', and a password configured by the administrator that will support the 'enable' function. This function becomes inoperable when the authentication policy is disabled.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable administrator privileges on the Switch:

```
DGS3100# local_enable admin
Password: *****

DGS3100#
```

config admin local_enable

Purpose	To configure the local_enable password for administrator level privileges.
Syntax	config admin local_enable
Description	The config admin local_enable command changes the locally enabled password for the local_enable admin command. When a user chooses the ' <i>local_enable</i> ' method to promote user level privileges to administrator privileges, the user is prompted to enter the password configured here. After entering the config admin local_enable command, the user is prompted to enter the old password, then a new password in a string

of no more than 15 alphanumeric characters, and finally prompted to enter the new password again for confirmation. See the example below.

Parameters None.

Restrictions Only administrator-level users can issue this command.

Example usage:

To configure the password for the ‘local_enable’ authentication method.

```
DGS3100# config admin local_enable  
  
Enter the old password:  
Enter the case-sensitive new password:*****  
Enter the new password again for confirmation:*****  
Success.  
  
DGS3100#
```

LACP COMMANDS

The LACP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config lacp port_priority	<portlist> [priority 1-65535] [timeout <90sec 3sec>]
show lacp	{<portlist>}

Each command is listed in detail, as follows:

config lacp port_priority

Purpose	To set the priority value of a physical port in an LACP group.
Syntax	config lacp port_priority <portlist> [priority 1-65535] [timeout <90sec 3sec>]
Description	The config lacp port_priority command sets the LACP priority value and administrative timeout of a physical port or range of ports in an LACP group.
Parameters	<p><portlist> - A port or range of ports to be configured.</p> <p><priority 1-65535> - Specifies the LACP priority value for a port or range of ports to be configured. The default is 1.</p> <p><timeout> - Specifies the administrative LACP timeout.</p> <ul style="list-style-type: none"> • 90sec – Specifies the LACP timeout to be 90 seconds. This is the default. • 3sec – Specifies the LACP timeout to be 3 seconds.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure the LACP priority of a port:

```
DGS3100# config lacp port_priority 1 priority 2
```

Success.

```
DGS3100#
```

show lacp

Purpose	To display current LACP port mode settings.
Syntax	show lacp {<portlist>}
Description	The show lacp command displays the current LACP mode settings.
Parameters	<p><portlist> - A port or range of ports whose LACP settings are to be displayed.</p> <p>If no parameter is specified, the system displays the current LACP</p>

	status for all ports.
Restrictions	None

Example usage:

To display LACP port mode settings:

DGS3100# show lacp		
Port	Priority	Timeout
1:1	1	90 sec
1:2	1	90 sec
1:3	1	90 sec
1:4	1	90 sec
1:5	1	90 sec
1:6	1	90 sec
1:7	1	90 sec
1:8	1	90 sec
1:9	1	90 sec
1:10	1	90 sec

DGS3100#

LLDP COMMANDS

The LLDP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
enable lldp (global)	
disable lldp	
enable lldp forward_message	
disable lldp forward_message	
config lldp message_tx_interval	<sec 5 - 32768 >
config lldp message_tx_hold_multiplier	< 2 - 10 >
config lldp reinit_delay	< sec 1 - 10 >
config lldp tx_delay	< sec 1 - 8192 >
show lldp	ports <portlist>
show lldp ports	ports [<portlist>]
show lldp local_ports	ports [<portlist>] [mode{brief normal detailed}]
show lldp remote_ports	ports [<portlist>] [mode{brief normal detailed}]
config lldp	ports [<portlist> all] notification [enable disable]
config lldp	ports [<portlist> all] admin_status [tx rx both disable]
config lldp	ports [<portlist> all] mgt_addr [enable disable]
config lldp	ports [<portlist> all] basic_tlv [all {port_description system_name system_description system_capabilities}] [enable disable]
config lldp	ports [<portlist> all] dot3_tlv mac_phy_configuration_status [enable disable]

Each command is listed in detail, as follows:

enable lldp (global)

Purpose	To enable LLDP on the switch.
Syntax	enable lldp
Description	The enable lldp command enables the <i>Link Layer Discovery Protocol</i> (LLDP) on the switch.
Parameters	None

Restrictions	Only Administrator or operator-level users can issue this command.
--------------	--

Example usage:

To enable LLDP on the switch:

```
DGS3100# enable lldp
```

Success.

```
DGS3100#
```

disable lldp (global)

Purpose	To disable LLDP on the switch.
Syntax	disable lldp
Description	The disable lldp command disables the <i>Link Discovery Protocol</i> (LLDP) on the switch.
Parameters	None
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To disable LLDP on the switch:

```
DGS3100# disable lldp
```

Success.

```
DGS3100#
```

enable lldp forward_message

Purpose	To enable forwarding of LLDP message on the switch. When LLDP is disabled
Syntax	enable lldp forward_message
Description	The enable lldp forward message command enables lldp forward messaging on the switch.
Parameters	None
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To enable LLDP forward message on the switch:

```
DGS3100# enable lldp forward_message
```

Success.

```
DGS3100#
```

disable lldp forward_message

Purpose	To disable forwarding of LLDP message on the switch. When LLDP is disabled.
Syntax	disable lldp forward_message
Description	The disable lldp forward message command disables lldp forward messaging on the switch.
Parameters	None
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To disable LLDP forward message on the switch:

```
DGS3100# disable lldp forward_message

Success.
DGS3100#
```

config lldp message_tx_interval

Purpose	To define the lldp message tx interval
Syntax	config lldp message_tx_interval <5-32768>
Description	The config lldp message_tx_interval defines the lldp message interval of the incoming messages.
Parameters	<i>message_tx_Interval</i> – Defines the message interval time. The range is between 5 and 32768.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure LLDP message tx interval on the switch:

```
DGS3100# config lldp message_tx_interval 5

Success.
DGS3100#
```

config lldp message_tx_hold_multiplier

Purpose	To define the lldp hold-multiplier on the switch.
Syntax	config lldp message_tx_hold_multiplier <2-10>
Description	The config lldp message_tx_hold_multiplier <2-10> command specifies the amount of time the receiving device should hold a <i>Link Layer Discovery Protocol</i> (LLDP) packet before discarding it.
Parameters	<i>Message_tx_hold_multiplier (2-10)</i> – Specifies the hold time to be sent in the LLDP update packets as a multiple of the timer value. (Range: 2-10). The default configuration is 4.

Restrictions	Only Administrator or operator-level users can issue this command.
--------------	--

Example usage:

To configure LLDP Message tx hold multiplier settings:

```
DGS3100# config lldp message_tx_hold_multiplier 2
```

```
Success.
```

config lldp reinit_delay

Purpose	To define the lldp reinint-delay on the switch.
Syntax	config lldp reinit_delay < sec 1 - 10 >
Description	The lldp reinit_delay seconds command specifies the minimum time an LLDP port will wait before reinitializing LLDP transmission.
Parameters	sec – Specifies the minimum time in seconds an LLDP port will wait before reinitializing LLDP transmission. The range is 1 – 10 seconds. The default configuration is 2 seconds.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure LLDP reinit delay:

```
DGS3100# config lldp reinit_delay 1
```

```
Success.
```

```
DGS3100#
```

config lldp tx_delay

Purpose	To configure the lldp tx_delay on the switch.
Syntax	config lldp tx_delay < sec 1 - 8192 >
Description	The lldp tx_delay command specifies the delay between successive LLDP frame transmissions initiated by value/status changes in the LLDP local systems MIB, use the lldp tx_delay command in global configuration mode.
Parameters	sec – Specifies the minimum time in seconds an LLDP port will wait before reinitializing LLDP transmission. The range is 1 – 10 seconds. The default configuration is 2 seconds.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure LLDP tx delay:

```
DGS3100# config lldp tx_delay 1
```

```
Success.
```

```
DGS3100#
```

show lldp

Purpose	To display the <i>Link Layer Discovery Protocol</i> (LLDP) on the switch.
Syntax	show lldp configuration port <portlist>
Description	The show lldp configuration displays the LLDP configuration on the switch.
Parameters	<portlist> - Specifies a port or range of ports for which the lldp status is to be displayed..
Restrictions	None.

Example usage:

To show LLDP settings:

```
DGS3100# show lldp
LLDP System Information
Chassis ID Subtype      : MAC Address
Chassis ID              : 00:00:22:aa:bb:33
System Name             : DGS-3100
System Description       : DGS-3100-48P Gigabit stackable PoE L2
Managed Switch
System Capabilities     : Bridge

LLDP Configurations
LLDP Status             : Enabled
LLDP Forward Status     : Disabled
Message Tx Interval     : 5
Message Tx Hold Multiplier : 2
Tx Delay                : 1
Reinit Delay            : 1
Notification Interval    : 5

DGS3100#
```

show lldp ports

Purpose	To display the <i>Link Layer Discovery Protocol</i> (LLDP) ports configuration on the switch.
Syntax	show lldp ports <portlist>
Description	The show lldp ports command displays the information regarding the ports.
Parameters	<portlist> – A port or range of ports to be displayed.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To show the information for port 2:9:

```
DGS-3100# show lldp ports 2:9
```

Port ID	: 2:9
<hr/>	
Admin Status	: Tx_and_Rx
Notification Status	: Disabled
Advertised TLVs Option	:
Port Description	: Enabled
System Name	: Enabled
System Drscription	: Enabled
System Capabilities	: Enabled
MAC/PHY Configuration	: Disabled
Management Address	: Disabled

```
DGS-3100#
```

show lldp local_ports

Purpose	To display the <i>Link Layer Discovery Protocol (LLDP)</i> configuration that is advertised from a specific port.
Syntax	show lldp local_ports <portlist> [mode{brief normal detailed}]
Description	The show lldp local_ports command displays the configuration that is advertised from a specific port.
Parameters	<p><<i>portlist</i>> – A port or range of ports to be displayed.</p> <p>[<i>mode{brief normal detailed}</i>] – defines which mode of information want to be displayed, brief, normal or detailed.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To show the local port information for port 2:9 with mode detailed:

```
DGS3100# show lldp local_ports 2:9 mode detailed
```

Port ID	: 2:9
<hr/>	
Port ID Subtype	: Interface Name
Port ID	: 2:9
Port Description	: Ethernet Interface
Auto-negotiation support	: Supported
Auto-negotiation status	: Disabled
Auto-negotiation Advertised Capabilities	: other or unknown
Operational MAU type	: Unknown

```
DGS-3100#
```

show lldp remote_ports

Purpose	To display information regarding the neighboring devices discovered using LLDP.
Syntax	show lldp remote_ports <portlist> [mode{brief normal detailed}]
Description	The show lldp remote_ports command displays the information regarding neighboring devices.
Parameters	<p><<i>portlist</i>> – A port or range of ports to be displayed.</p> <p>[<i>mode{brief normal detailed}</i>] – defines which mode of information want to be displayed, brief, normal or detailed.</p>

Restrictions	Only Administrator or operator-level users can issue this command.
--------------	--

Example usage:

To show the information for remote ports:

```
DGS3100# show lldp remote_ports
DGS3100#
```

config lldp ports

Purpose	To enable LLDP notification on a port or ports.
Syntax	config lldp ports [<portlist> all] notification [enable disable]
Description	The config lldp ports notification command defines lldp notification per port on the switch.
Parameters	<i>ports</i> – ports. <i>notification[enable / disable]</i> – defines is notification is enabled or disabled.
Restrictions	Only Administrator or operator-evel users can issue this command.

Example usage:

To configure LLDP notification:

```
DGS3100# config lldp ports 1 notification enable
Success.
DGS3100#
```

config lldp ports

Purpose	To define LLDP admin status on a port or ports.
Syntax	config lldp ports [<portlist> all] admin_status [tx rx both disable]
Description	The config lldp ports admin status command defines lldp admin status per port on the switch.
Parameters	<i>ports</i> – ports. <i>Admin status</i> – defines admin status of ports on the switch Tx- Tx only Rx – Rx only Both – Tx and RX Disable – admin status disabled..
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure LLDP admin status

```
DGS3100# config lldp ports 1 admin_status both
Success.
DGS3100#
```

config lldp ports

Purpose	To define LLDP management address advertisement on a port or ports.
Syntax	config lldp ports [<portlist> all] mgt_addr [enable disable]
Description	The config lldp mgt_addr command defines if lldp will advertise the switch's IP address the command is per port on the switch.
Parameters	<i>ports</i> – ports. <i>Mgt_addr</i> – defines whether the management address (IP address) advertisement will be enabled or disabled
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure LLDP management address advertisement

```
DGS3100# config lldp ports 1 mgt_addr enable
```

```
Success.  
DGS3100#
```

config lldp ports

Purpose	To define LLDP management basic TLVs advertisement on a port or ports.
Syntax	config lldp ports [<portlist> all] basic_tlv [all {port_description system_name system_description system_capabilities}] [enable disable]
Description	The config lldp basic TLVs command defines if lldp will advertise the switch's basic TLVs the command is per port on the switch.
Parameters	<i>ports</i> – ports. <i>Basic TLVs</i> <i>All</i> – Advertisement of all the basic TLVs <i>Port description</i> – Advertisement of <i>Port description</i> <i>System name</i> – Advertisement of <i>system name</i> <i>System description</i> – Advertisement of <i>System description</i> <i>System capabilities</i> – Advertisement of system capabilities
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure LLDP Basis TLVs

```
DGS3100# config lldp ports 1 basic_tlv all enable
```

```
Success.  
DGS3100#
```

config lldp ports

Purpose	To define LLDP management basic TLVs advertisement on a port or ports.
Syntax	config lldp ports ports [<portlist> all] dot3_tlv mac_phy_configuration_status [enable disable]
Description	The config lldp dot3 TLVs command defines if lldp will advertise the mac_phy_configuration_status the command is per port on the switch.
Parameters	<i>ports</i> – ports. <i>dot3_tlv mac_phy_configuration_status</i> – <i>defines if the advertisement is enabled or disabled</i>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To configure LLDP mac_phy_configuration status:

```
DGS3100# config lldp ports 1 dot3_tlv mac_phy_configuration_status
enable

Success.
DGS3100#
```

STACKING COMMANDS

The Stacking commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config box_id	current_box_id <value 1-6> new_box_id [auto 1 2 3 4 5 6]
show stack_information	

config box_id

Purpose	To change the unit ID (stack membership number).
Syntax	config box_id current_box_id <value 1-6> new_box_id [auto 1 2 3 4 5 6]
Description	The config box_id command changes the unit ID (stack membership number). The command takes effect only after rebooting the device.
Parameters	<p><i>current_box_id <value 1-6></i> - Specifies the unit's current stack membership number.</p> <p><i>new_box_id <auto 1 2 3 4 5 6></i> - Specifies the unit's new stack membership number. If <i>auto</i> is specified, the system automatically defines the unit's new ID.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To change the unit ID from 1 to 2:

```
DGS3100# config box_id 1 new_box_id 2
DGS3100#
```

show stack_information

Purpose	To display information about the units in the stack.
Syntax	show stack_information
Description	The show stack_information command displays information about the units in the stack, including the unit numbers, firmware version, hardware version, Master ID and Backup ID.
Parameters	None.
Restrictions	None.

Example usage:

To display information about units in the stack:

```
DGS3100# show stack_information

Master ID : 1
Backup ID : 2

Box ID User Set Boot version Firmware version H/W version
----- ----- ----- -----
1      Auto    1.0.0.03  1.0.0.28    00.00.01
2          2      1.0.0.03  1.0.0.28    00.00.01

DGS3100#
```

POE COMMANDS

The PoE commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table. These commands are available only on DGS-3100-24P and DGS-3100-48P.

Command	Parameter
config poe	box_id <value 1-6> system_power_limit [ps1 ps2 ps3] disconnect_method [deny_next_port deny_low_priority_port]
config poe ports	<portlist> { state [enable {time_range <range_name 32>} disable] priority [low high critical] power_limit <value 1-15400>}
show poe	

Each command is listed in detail, as follows:

config poe	
Purpose	To configure the parameters for the whole PoE system.
Syntax	config poe box_id <value 1-6> system_power_limit [ps1 ps2 ps3] disconnect_method [deny_next_port deny_low_priority_port]
Description	The config poe command configures the parameters for the PoE system on a unit member of the stack.
Parameters	<p><i>box_id <value 1-6></i> – The unit's current stack membership number.</p> <p><i>system_power_limit [ps1 ps2 ps3]</i> – Specifies the power budget of the whole PoE system, according to the type of power supply used (<i>ps1</i>, <i>ps2</i>, <i>ps3</i>).</p> <p><i>disconnect_method</i> – Configures the power management disconnection method. When the total consumed power exceeds the power budget, the PoE controller initiates a port disconnection to prevent overloading the power supply. The controller uses one of the following two ways to implement the disconnection:</p> <ul style="list-style-type: none"> • <i>deny_next_port</i> – After the power budget has been exceeded, the next port attempting to power up is denied, regardless of its priority. This is the default setting. • <i>deny_low_priority_port</i> – After the power budget has been exceeded, the next port attempting to power up, causes the port with the lowest priority to shut down (to allow high-priority ports to power up).
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To config the PoE System on the Switch:

```
DGS3100# config poe system_power_limit 300 disconnect_method deny_next_port
```

Success.**DGS3100#**

config poe ports

Purpose	To configure the PoE port settings.
Syntax	config poe ports<portlist> { state [enable {time_range <range_name 32>} disable] priority [low high critical] power_limit <value 1-15400>}
Description	The config poe ports command configures PoE settings for a port or range of ports.
Parameters	<p><portlist> – A port or range of ports to be configured or all the ports.</p> <p><i>state</i> – Enables or disables the PoE function on the Switch.</p> <p><i>time_range <range_name 32></i> – specify the time range name to be assigned to this POE configuration. To remove the time range from a port configure the same command without the time range.</p> <p><i>priority</i> – Setting the port priority affects power-up order and shutdown order. Power-up order: When the Switch powers-up or reboots, the ports are powered up according to their priority (<i>critical</i> first, then <i>high</i> and finally <i>low</i>). Shutdown order: When the power limit has been exceeded, the ports will shut down according to their priority if the power disconnect method is set to <i>deny_low_priority_port</i>. The possible options are:</p> <ul style="list-style-type: none"> • <i>critical</i> – Specifies that these ports have the highest priority for all configured PoE ports. These ports will be the first ports to receive power and the last to disconnect power. • <i>high</i> – Specifies that these ports have the second highest priority for receiving power and shutting down power. • <i>low</i> – Specifies that these ports have the lowest priority for receiving and shutting down power. These ports will be the first ports to have their power disconnected if the <i>power_disconnect_method</i> chosen in the config poe command is <i>deny_low_priority_port</i>. <p><i>power_limit <value 1-15400></i> – Specifies the per-port power limit. If a port exceeds 10% of its power limit, the PoE system will shut down that port. The minimum user-defined setting is 1 mW and the maximum is 15400 mW. The default setting is 15400 mW.</p>
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To config the Switch's ports for PoE:

```
DGS3100# config poe ports 1-3 state enable priority critical power_limit 12000
```

Success.**DGS3100#**

show poe

Purpose	To display the setting and actual values of the whole PoE system.
Syntax	show poe
Description	The show poe command displays the settings, actual values and port configuration of the whole PoE system.
Parameters	None.
Restrictions	None.

Example usage:

To display the power settings for the Switch:

```
DGS3100# show poe
```

Port	State	Priority	Power Limit
-----	-----	-----	-----

```
DGS3100#
```

ACCESS CONTROL LIST COMMANDS

The Access Control List commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
create access_profile (for Ethernet)	profile_id <value 1-15> [ethernet {vlan source_mac <macmask 000000000000-ffffffffffff> destination_mac <macmask 000000000000-ffffffffffff> 802.1p ethernet_type}]
create access_profile (for IPv4)	profile_id <value 1-15> ip [icmp { type code } igmp { type } tcp { src_port_mask <hex 0x0-0xffff> dst_port_msk <hex 0x0-0xffff> flag_mask }{+ -} {urg ack psh rst syn fin } } udp { src_port_mask <hex 0x0-0xffff> dst_port_msk <hex 0x0-0xffff> }] { source_ip_mask <netmask> destination_ip_mask <netmask> dscp }
create access_profile (for IPv6)	profile_id <value 1-15> ip [icmp { type code } tcp { src_port_mask <hex 0x0-0xffff> dst_port_msk <hex 0x0-0xffff> flag_mask }{+ -} {urg ack psh rst syn fin } } udp { src_port_mask <hex 0x0-0xffff> dst_port_msk <hex 0x0-0xffff> }] { source_ip_mask <netmask> destination_ip_mask <netmask> class }
config access_profile (for Ethernet)	profile_id <value 1-15> [add access_id [auto assign <value 1-240>] [Ethernet {vlan <vlan_name 32> source_mac <macaddr 000000000000-ffffffffffff> destination_mac <macaddr 000000000000-ffffffffffff> 802.1p <value 0-7> ethernet_type <hex 0x0-0xffff>} ports <portlist> [permit {replace_priority <value 0-7> replace_dscp <value 0-63> rate_limit <value 64-1000000>} deny] {time_range <range_name 32>}]
config access_profile (for IPv4)	profile_id <value 1-15> [add access_id [auto assign <value 1-240>] [ip {source_ip <ipaddr> destination_ip <ipaddr> dscp <value 0-63> [icmp {type <value 0-255> code <value 0-255>} igmp {type <value 0-255>} tcp {src_port <value 0-65535> dst_port <value 0-65535> flag_flag {+ -} {urg ack psh rst syn fin } } udp {src_port <value 0-65535> dst_port <value 0-65535>}]} ports <portlist> [permit {replace_priority <value 0-7> replace_dscp <value 0-63> rate_limit <value 64-1000000>} deny] {time_range <range_name 32>}]
config access_profile (for IPv6)	profile_id <value 1-15> [add access_id [auto assign <value 1-240>] [ip {source_ip <ipaddr> destination_ip <ipaddr> class <value 0-63> [icmp {type <value 0-255> code <value 0-255>} tcp {src_port <value 0-65535> dst_port <value 0-65535> flag {+ -} {urg ack psh rst syn fin } } udp {src_port <value 0-65535> dst_port <value 0-65535>}]} ports [<portlist> <ch1-32>] [permit {replace_priority <value 0-7> replace_class <value 0-63> rate_limit <value 64-1000000>} deny] {time_range <range_name 32>}]
config access_profile	profile_id <value 1-15> delete access_id <value 1-240>
delete access_profile	profile_id <value 1-15>
show access_profile	{profile_id <value 1-15>}
config time-range	<range_name 32> [hours start_time <time hh:mm> end_time <time hh:mm> weekdays <daylist> delete]
show time-range	

Each command is listed in detail, as follows:

create access_profile (for Ethernet)

Purpose	To create an access profile on the Switch by examining the Ethernet part of the packet header. Masks entered are combined with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered using the config access_profile command, below.
Syntax	create access_profile profile_id <value 1-15> [ethernet {vlan source_mac <macmask 00:00:00:00:00:ff:ff:ff:ff> destination_mac <macmask 00:00:00:00:00:00:ff:ff:ff> 802.1p ethernet_type}]
Description	The create access_profile command creates a profile for packets that may be accepted or denied by the Switch by examining the Ethernet part of the packet header. Specific values for rules pertaining to the Ethernet part of the packet header may be defined by configuring the config access_profile command for Ethernet, as stated below.
Parameters	<p><i>profile_id <value 1-15></i> – Specifies an index number between 1 and 15 that identifies the access profile being created with this command.</p> <p><i>ethernet</i> - Specifies that the Switch examines the layer 2 part of each packet header with emphasis on one or more of the following:</p> <ul style="list-style-type: none"> • <i>vlan</i> – Specifies that the Switch examine the VLAN part of each packet header. • <i>source_mac <macmask></i> – Specifies a MAC address mask for the source MAC address. This mask is entered in the following hexadecimal format: 00:00:00:00:00:FF:FF:FF:FF • <i>destination_mac <macmask></i> – Specifies a MAC address mask for the destination MAC address in the following format: 00:00:00:00:00:FF:FF:FF:FF:FF • <i>802.1p</i> – Specifies that the Switch examine the 802.1p priority value in the frame's header. <p><i>ethernet_type</i> – Specifies that the Switch examine the Ethernet type value in each frame's header.</p>
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To create an Ethernet access profile:

```
DGS3100# create access_profile profile_id 1 ethernet vlan 802.1p
```

Success.

```
DGS3100#
```

create access_profile (for IPv4)

Purpose	To create an access profile on the Switch by examining the IP part of the packet header. Masks entered are combined with the values
---------	---

	<p>the Switch finds in the specified frame header fields. Specific values for the rules are entered using the config access_profile command, below.</p>
Syntax	<pre>profile_id <value 1-15> ip [icmp { type code } igmp { type } tcp { src_port_mask <hex 0x0-0xffff> dst_port_msk <hex 0x0-0xffff> flag_mask {+ -} {urg ack psh rst syn fin } } udp { src_port_mask <hex 0x0-0xffff> dst_port_msk <hex 0x0-0xffff> }] { source_ip_mask <netmask> destination_ip_mask <netmask> dscp }</pre>
Description	<p>The create access_profile command creates a profile for packets that may be accepted or denied by the Switch by examining the IP part of the packet header. Specific values for rules pertaining to the IP part of the packet header may be defined by configuring the config access_profile command for IP, as stated below.</p>
Parameters	<p><i>profile_id <value 1-15></i> – Specifies an index number between 1 and 15 that identifies the access profile being created with this command.</p> <p><i>ip</i> - Specifies that the Switch examines the IP fields in each packet with special emphasis on one or more of the following:</p> <ul style="list-style-type: none"> • <i>source_ip_mask <netmask></i> – Specifies an IP address mask for the source IP address. • <i>destination_ip_mask <netmask></i> – Specifies an IP address mask for the destination IP address. • <i>dscp</i> – Specifies that the Switch examines the DiffServ Code Point (DSCP) field in each frame's header. • <i>icmp</i> – Specifies that the Switch examines the Protocol field in each frame's IP header , and that the value must be 1 (Internet Control Message Protocol- ICMP) for the action to take place. <ul style="list-style-type: none"> • <i>type</i> – Specifies that the Switch examines each frame's ICMP Type field. • <i>code</i> – Specifies that the Switch examines each frame's ICMP Code field. • <i>igmp</i> – Specifies that the Switch examine each frame's protocol field and it must be 2 (Internet Group Management Protocol-IGMP) for the action to take place. <ul style="list-style-type: none"> • <i>type</i> – Specifies that the Switch examine each frame's IGMP Type field. • <i>tcp</i> – Specifies that the Switch examines each frames protocol field and its value must be 6 (Transmission Control Protocol-TCP) for the action to take place. <ul style="list-style-type: none"> • <i>src_port_mask <hex 0x0-0xffff></i> – Specifies a TCP port mask for the source port. • <i>dst_port_msk <hex 0x0-0xffff></i> – Specifies a TCP port mask for the destination port. • <i>flag_mask {+ -} {urg ack psh rst syn fin }</i> – Specifies the appropriate flag_mask parameter. All incoming packets have TCP flag bits associated with them which are parts of a packet that determine what to do with the packet. The user may deny packets by denying certain flag bits within the packets. The user may choose between <i>all</i>, <i>urg</i> (urgent), <i>ack</i> (acknowledgement), <i>psh</i> (push), <i>rst</i> (reset), <i>syn</i> (synchronize) and <i>fin</i> (finish).

- *udp* – Specifies that the Switch examines each frame's protocol field and its value must be 17 (User Datagram Protocol-UDP) in order for the action to take place..
 - *src_port_mask <hex 0x0-0xffff>* – Specifies a UDP port mask for the source port.
 - *dst_port_mask <hex 0x0-0xffff>* – Specifies a UDP port mask for the destination port.

Restrictions

Only administrator or operate-level users can issue this command.

Example usage:

To create an IP access profile:

```
DGS3100# create access_profile profile_id 2 ip source_ip_mask 20.0.0.0
destination_ip_mask 10.0.0.0 dscp icmp type
```

Success.

```
DGS3100#
```

create access_profile (for IPv6)

Purpose	To create an access profile on the Switch by examining the IP part of the packet header. Masks entered are combined with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered using the config access_profile command, below.
Syntax	profile_id <value 1-15> ip [icmp { type code } tcp { src_port_mask <hex 0x0-0xffff> dst_port_msk <hex 0x0-0xffff> flag_mask }{+ -} {urg ack psh rst syn fin } } udp { src_port_mask <hex 0x0-0xffff> dst_port_msk <hex 0x0-0xffff> }] { source_ip_mask <netmask> destination_ip_mask <netmask> class }
Description	The create access_profile command creates a profile for packets that may be accepted or denied by the Switch by examining the IP part of the packet header. Specific values for rules pertaining to the IP part of the packet header may be defined by configuring the config access_profile command for IP, as stated below.
Parameters	<p><i>profile_id <value 1-15></i> – Specifies an index number between 1 and 15 that identifies the access profile being created with this command.</p> <p><i>ip</i> – Specifies that the Switch examines the IP fields in each packet with special emphasis on one or more of the following:</p> <p><i>source_ip_mask <netmask></i> – Specifies an IP address mask for the source IP address.</p> <p><i>destination_ip_mask <netmask></i> – Specifies an IP address mask for the destination IP address.</p> <p><i>Class</i> – Specifies that the Switch examines the DiffServ Code Point (CLASS) field in each frame's header.</p> <p><i>icmp</i> – Specifies that the Switch examines the Protocol field in each frame's IP header , and that the value must be 1 (Internet Control Message Protocol- ICMP) for the action to take place.</p> <p><i>type</i> – Specifies that the Switch examines each frame's ICMP Type field.</p> <p><i>code</i> – Specifies that the Switch examines each frame's ICMP Code</p>

create access_profile (for IPv6)

field.

type – Specifies that the Switch examine each frame's Type field.

tcp – Specifies that the Switch examines each frames protocol field and its value must be 6 (Transmission Control Protocol-TCP) for the action to take place.

src_port_mask <hex 0x0-0xffff> – Specifies a TCP port mask for the source port.

dst_port_mask <hex 0x0-0xffff> – Specifies a TCP port mask for the destination port.

flag_mask {+ | -} {urg | ack | psh | rst | syn | fin} – Specifies the appropriate flag_mask parameter. All incoming packets have TCP flag bits associated with them which are parts of a packet that determine what to do with the packet. The user may deny packets by denying certain flag bits within the packets. The user may choose between *all*, *urg* (urgent), *ack* (acknowledgement), *psh* (push), *rst* (reset), *syn* (synchronize) and *fin* (finish).

udp – Specifies that the Switch examines each frame's protocol field and it's value must be 17 (User Datagram Protocol-UDP) in order for the action to take place..

src_port_mask <hex 0x0-0xffff> – Specifies a UDP port mask for the source port.

dst_port_mask <hex 0x0-0xffff> – Specifies a UDP port mask for the destination port.

Restrictions

Only administrator or operate-level users can issue this command.

Example usage:

To create an IPv6 access profile:

```
DGS3100# create access_profile profile_id 2 ip source_ip_mask 20.0.0.0
destination_ip_mask 10.0.0.0 class icmp type
```

Success.

```
DGS3100#
```

config access_profile (for Ethernet)

Purpose	To configure the Ethernet access profile on the Switch and to define specific values for the rules that to be used to by the Switch to determine if a given packet should be forwarded or filtered. Masks entered using the create access_profile command will be combined, using a logical AND operational method, with the values the Switch finds in the specified frame header fields.
Syntax	config access_profile profile_id <value 1-15> [add access_id [auto assign <value 1-240>] [ethernet {vlan <vlan_name 32>} source_mac <macaddr 00:00:00:00:00:ff:ff:ff:ff> destination_mac <macaddr 00:00:00:00:00:ff:ff:ff:ff> 802.1p <value 0-7> ethernet_type <hex 0x05dd-0xffff>} ports <portlist> [permit {replace_priority <value 0-7> replace_dscp <value 0-63> rate_limit <value 64-1000000>} deny] {time_range <range_name 32>}]

Description	The config access_profile command defines the rules used by the Switch to either filter or forward packets based on the Ethernet part of each packet header.
Parameters	<p><i>profile_id <value 1-15></i> – Specifies the access profile id to be configured with this command. This value is assigned to the access profile when it is created with the create access_profile command. The lower the profile ID, the higher the priority the rule will be given.</p> <p><i>add access_id <value 1-240></i> – Adds an additional rule to the above specified access profile. The value specifies the relative priority of the additional rule. Up to 240 different rules may be configured for the Ethernet access profile.</p> <ul style="list-style-type: none"> • <i>auto_assign</i> – Configures the Switch to automatically assign a numerical value (between 1 and 240) for the rule being configured. <p><i>ethernet</i> – Specifies that the Switch examine only the layer 2 part of each packet to determine if it is to be filtered or forwarded based on one or more of the following:</p> <ul style="list-style-type: none"> • <i>vlan <vlan_name 32></i> – Specifies that the access profile applies only to this previously created VLAN. • <i>source_mac <macaddr></i> – Specifies that the access profile applies only to packets with this source MAC address. MAC address entries may be made in the following format: 00:00:00:00:00:FF:FF:FF:FF:FF:FF • <i>destination_mac <macaddr></i> – Specifies that the access profile applies only to packets with this destination MAC address. MAC address entries may be made in the following format: 00:00:00:00:00:FF:FF:FF:FF:FF:FF • <i>802.1p <value 0-7></i> – Specifies that the access profile applies only to packets with this 802.1p priority value. • <i>ether_type <hex 0x05dd-0xffff></i> – Specifies that the access profile applies only to packets with this hexadecimal 802.1Q Ethernet type value in the packet header. <p><i>ports <portlist></i> - The access profile for Ethernet may be defined for each port on the Switch.</p> <p><i>permit</i> – Specifies that packets that match the access profile are permitted to be forwarded by the Switch.</p> <ul style="list-style-type: none"> • <i>replace_priority</i> – Specifies the value to replace the 802.1p default priority of a packet, which meets the criteria specified previously in this command, before forwarding it on to the specified CoS queue. Otherwise, a packet will have its incoming 802.1p user priority re-written to its original value before being forwarded by the Switch. • <i>replace_dscp <value 0-63></i> – Specifies a value to be written to the DSCP field of an incoming packet that meets the criteria specified in the first part of the command. This value will over-write the value in the DSCP field of the packet. • <i>rate_limit <value 64-1000000></i> – Specifies the rate limit to limit Rx bandwidth for the profile being configured. This rate is implemented using the following equation – 1 value = 64kbit/sec. (ex. If the user selects a rx rate limit of 10 then the ingress rate is 640kbit/sec.) The user may select a value between 64- 1000000 or no limit. The default setting is no limit.

deny – Specifies that packets that do not match the access profile are not permitted to be forwarded by the Switch and will be filtered.

- *time_range <range_name 32>* – Defines a time range name.

Restrictions

Only Administrator or operator-level users can issue this command.

Example usage:

To configure a rule for the Ethernet access profile:

```
DGS3100# config access profile profile_id 1 add access_id 1 ethernet vlan Trinity 802.1p 1
port 1 permit priority 1 replace priority 1
```

Success.

```
DGS3100#
```

config access_profile (for IPv4)

Purpose	To configure the IP access profile on the Switch and to define specific values for the rules that to be used to by the Switch to determine if a given packet should be forwarded or filtered. Masks entered using the create access_profile command will be combined, using a logical AND operational method, with the values the Switch finds in the specified frame header fields.
Syntax	config access_profile profile_id <value 1-15> [add access_id [auto assign <value 1-240>] [ip {source_ip <ipaddr> destination_ip <ipaddr>} dscp <value 0-63> [icmp {type <value 0-255> code <value 0-255>} igmp {type <value 0-255>} tcp {src_port <value 0-65535> dst_port <value 0-65535>} flag {+ -} {urg ack psh rst syn fin } udp {src_port <value 0-65535> dst_port <value 0-65535>}]] ports [<portlist> <ch1-32>] [permit {replace_priority <value 0-7> replace_dscp <value 0-63>} rate_limit <value 64-1000000>} deny] {time_range <range_name 32>}
Description	The config access_profile command defines the rules used by the Switch to either filter or forward packets based on the IP part of each packet header.
Parameters	<p><i>profile_id <value 1-15></i> – Specifies the access profile id to be configured with this command. This value is assigned to the access profile when it is created with the create access_profile command. The lower the profile ID, the higher the priority the rule will be given.</p> <p><i>add access_id <value 1-240></i> – Adds an additional rule to the above specified access profile. The value specifies the relative priority of the additional rule. Up to 240 different rules may be configured for the IP access profile.</p> <ul style="list-style-type: none"> • <i>auto_assign</i> – Configures the Switch to automatically assign a numerical value (between 1 and 240) for the rule being configured. <p><i>ip</i> – Specifies that the Switch examine the IP fields in each packet to determine if it will be either forwarded or filtered based on one or more of the following:</p> <ul style="list-style-type: none"> • <i>source_ip <ipaddr></i> – Specifies that the access profile applies only to packets with this source IP address. • <i>destination_ip <ipaddr></i> – Specifies that the access profile

- applies only to packets with this destination IP address.
- *dscp <value 0-63>* – Specifies that the access profile applies only to packets that have this value in their Type-of-Service (DiffServ code point, DSCP) field in their IP packet header.
 - *icmp* – Specifies that the Switch examine the protocol field in each frame's header and it should match Internet Control Message Protocol (ICMP).
 - *type* – Specifies that the Switch examine each frame's ICMP Type field.
 - *code* – Specifies that the Switch examine each frame's ICMP Code field.
 - *igmp* – Specifies that the Switch examine each frame's protocol and it should match Internet Group Management Protocol (IGMP) field.
 - *type* – Specifies that the Switch examine each frame's IGMP Type field.
 - *tcp* - Specifies that the Switch examine each frame's protocol and it should match Transport Control Protocol (TCP) field.
 - *src_port <value 0-65535>* – Specifies that the access profile applies only to packets that have this TCP source port in their TCP header.
 - *dst_port <value 0-65535>* – Specifies that the access profile applies only to packets that have this TCP destination port in their TCP header.
 - *flag {+ | -} {urg | ack | psh | rst | syn | fin}}* – Specifies the appropriate flag parameter. All incoming packets have TCP flag bits associated with them which are parts of a packet that determine what to do with the packet. The user may deny packets by denying certain flag bits within the packets.
To specify flag bits that should be “1” type + and the flag bit name, to specify bits that should be “0” type – and the flag bit name.
 - *udp* – Specifies that the Switch examine the protocol field in each packet and it should match User Datagram Protocol (UDP).
 - *src_port <value 0-65535>* – Specifies that the access profile applies only to packets that have this UDP source port in their header.
 - *dst_port <value 0-65535>* – Specifies that the access profile applies only to packets that have this UDP destination port in their header.
 - *protocol_id <value 0-255>* – Specifies that the Switch examine the Protocol field in each packet and if this field contains the value entered here, apply the appropriate rules.
 - *user_define <hex 0x0-0xffffffff>* – Specifies a hexadecimal value to identify the protocol to be discovered in the packet header.

ports [<portlist> | <ch1-32>] / - The access profile for IP may be defined for each port on the Switch.

permit – Specifies that packets that match the access profile are permitted to be forwarded by the Switch special actions may be added to the rule such as:

	<ul style="list-style-type: none"> <i>replace_priority</i> – Specifies the value to replace the 802.1p default priority of a packet, which meets the criteria specified previously in this command, before forwarding it on to the specified CoS queue. Otherwise, a packet will have its incoming 802.1p user priority re-written to its original value before being forwarded by the Switch. <i>replace_dscp <value 0-63></i> – Specifies a value to be written to the DSCP field of an incoming packet that meets the criteria specified in the first part of the command. This value will over-write the value in the DSCP field of the packet. <i>rate_limit <value 64-1000000></i> – Specifies the kbps rate limit to limit Rx bandwidth for the profile being configured. The user may select a value between 64- 1000000 or no limit. The default setting is no limit. <p><i>deny</i> – Specifies that packets that do not match the access profile are not permitted to be forwarded by the Switch and will be filtered.</p> <ul style="list-style-type: none"> <i>time_range <range_name 32></i> – Defines a time range name.
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To configure a rule for the IP access profile:

```
DGS3100# config access_profile profile_id 2 add access_id 2 ip protocol_id 2 port 2 deny
```

Success.

```
DGS3100#
```

config access_profile (for IPv6)

Purpose	To configure the IPv6 access profile on the Switch, and to define specific values for the rules used by the Switch to determine if a given packet should be forwarded or filtered out. Masks entered using the create access_profile command will be combined using a logical AND operational method, with the values the Switch finds in the specified frame header fields.
Syntax	<pre>config access_profile profile_id <value 1-15> [add access_id [auto assign <value 1-240>] [ip {source_ip <ipaddr> destination_ip <ipaddr>} class <value 0-63> [icmp {type <value 0-255> code <value 0-255>} tcp {src_port <value 0- 65535> dst_port <value 0-65535>} flag {+ -} {urg ack psh rst syn fin } udp {src_port <value 0-65535> dst_port <value 0-65535>}]} ports [<portlist> <ch1-32>] [permit {replace_priority <value 0-7> replace_class <value 0-63> rate_limit <value 64-1000000>} deny] {time_range <range_name 32>}</pre>
Description	The config access_profile command defines the rules used by the Switch to either filter or forward packets, based on the IPv6 part of each packet header.
Parameters	<i>profile_id <value 1-15></i> – Specifies the access profile id to be configured with this command. This value is assigned to the access profile when it is created by the create access_profile command.

The lower the profile ID, the higher a priority of the rule.

add access_id <value 1-240> – Adds an additional rule to the above specified access profile. The value specifies the relative priority of the additional rule. Up to 240 different rules may be configured for the IP access profile.

- *auto_assign* – Configures the Switch to automatically assign a numerical value (between 1 and 240) for the rule being configured.

ip – Specifies that the Switch examines the IPv6 fields in each packet to determine if it will be forwarded or filtered based on one or more of the following:

source_ip <ipaddr> – Specifies that the access profile applies only to packets with this source IP address.

destination_ip <ipaddr> – Specifies that the access profile applies only to packets with this destination IP address.

class <value 0-63> – Specifies that the access profile applies only to packets that have this value in their Type-of-Service (CLASS) field in their IP packet header.

icmp – Specifies that the Switch examines the protocol field in each frame header, and it should match the Internet Control Message Protocol (ICMP) field.

type – Specifies that the Switch examines each frame's ICMP Type field.

code – Specifies that the Switch examines each frame's ICMP Code field.

tcp - Specifies that the Switch examines each frame's protocol, and it should match the Transport Control Protocol (TCP) field.

src_port <value 0-65535> – Specifies that the access profile applies only to packets that have this TCP source port in their TCP header.

dst_port <value 0-65535> – Specifies that the access profile applies only to packets that have this TCP destination port in their TCP header.

flag {+ | -} {urg | ack | psh | rst | syn | fin } – Specifies the appropriate flag parameter. All incoming packets have TCP flag bits associated with them, which are parts of a packet that determine what to do with the packet. The user may deny packets by denying certain flag bits within the packets.

To specify flag bits that should be “1”, type + and the flag bit name, to specify bits that should be “0”, type – and the flag bit name.

udp – Specifies that the Switch examines the protocol field in each packet, and it should match User Datagram Protocol (UDP) field.

src_port <value 0-65535> – Specifies that the access profile applies only to packets that have this UDP source port in their header.

dst_port <value 0-65535> – Specifies that the access profile applies only to packets that have this UDP destination port in their header.

protocol_id <value 0-255> – Specifies that the Switch examines the Protocol field in each packet, and if this field contains the value entered here, it applies the appropriate rules.

user_define <hex 0x0-0xffffffff> – Specifies a hexadecimal value to identify the protocol to be discovered in the packet header.

ports [<portlist> | <ch1-32>] / – The access profile for IPv6 may be defined for each port on the Switch.

permit – Specifies that packets that match the access profile are permitted to be forwarded by the Switch. Special actions may be

	<p>added to the rule, such as:</p> <p><i>replace_priority</i> – Specifies the value to replace the 802.1p default priority of a packet, which meets the criteria previously specified in this command, before forwarding it on to the specified CoS queue. Otherwise, a packet will have its incoming 802.1p user priority re-written to its original value before being forwarded by the Switch.</p> <p><i>replace_class <value 0-63></i> – Specifies a value to be written to the CLASS field of an incoming packet that meets the criteria specified in the first part of the command. This value will over-write the value in the CLASS field of the packet.</p> <p><i>rate_limit <value 64-1000000></i> – Specifies the kbps rate limit to Rx bandwidth for the configured profile. The user may select a value between 64-1000000, or no limit. The default setting is no limit.</p> <p><i>deny</i> – Specifies that packets that do not match the access profile are not permitted to be forwarded by the Switch and will be filtered out.</p> <p><i>time_range <range_name 32></i> – Defines a time range name.</p>
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To configure a rule for the IPv6 access profile:

```
DGS3100# config access_profile profile_id 1 add access_id 1 ipv6 icmp source_ip fe::1111
destination_ip fe::1112 type 22 code 22 class 4 ports 1:1 deny
```

Success.

```
DGS3100#
```

config access_profile

Purpose	To delete a specific rule from the access profile on the Switch.
Syntax	config access_profile profile_id <value 1-15> delete access_id <value 1-240>
Description	The config access_profile command deletes a specific rule from the access profile on the Switch.
Parameters	<p><i>profile_id <value 1-15></i> - Specifies the access profile id that is used to identify the access profile to be configured with this command.</p> <p><i>delete access_id <value 1-240></i> – Specifies the specific rule to be deleted from the profile.</p>
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To delete a rule from the access profile:

```
DGS3100# config access_profile profile_id 2 delete access_id 2
```

Success.

```
DGS3100#
```

delete access_profile

Purpose	To delete a previously created access profile
Syntax	delete access_profile profile_id <value 1-15>
Description	The delete access_profile command deletes a previously created access profile on the Switch.
Parameters	<i>profile_id <value 1-15></i> – Specifies the access profile to be deleted.
Restrictions	Only administrator or operate-level users can issue this command.

Example usage:

To delete the access profile with a profile ID of 1:

```
DGS3100# delete access_profile profile_id 1
Success.
DGS3100#
```

show access_profile

Purpose	To display the currently configured access profiles on the Switch.
Syntax	show access_profile {profile_id <value 1-15>}
Description	The show access_profile command displays the currently configured access profiles.
Parameters	<i>profile_id <value 1-15></i> – Specifies the access profile to be displayed. This value is assigned to the access profile when it is created with the create access_profile command. If the <i>profile_id</i> parameter is omitted, all access profile entries are displayed.
Restrictions	None.

Example usage:

To display all of the currently configured access profiles on the Switch:

```
DGS3100# show access_profile
Access Profile Table
Access Profile ID: 1          TYPE : Ethernet
-----
MASK Option :
VLAN    802.1p
-----
Access ID : 3      Mode: Permit(replaced) priority: 1
Ports: 1
-----
Trinity   1
-----
Access Profile ID: 2          TYPE : IP
-----
MASK Option :
Protocol ID
```

```
-----  
Access ID : 2      Mode: Deny  
Ports: 2  
-----
```

```
2  
=====
```

```
Total Entries: 2
```

```
DGS3100#
```

TRAFFIC SEGMENTATION COMMANDS

The Traffic Segmentation commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config traffic_segmentation	[<portlist> <ch1-32> all] forward_list [all <portlist> <ch1-32>]
show traffic_segmentation	{<portlist> ch1-32>} {<portlist> ch1-32> }

Each command is listed in detail, as follows:

config traffic_segmentation

Purpose	To configure traffic segmentation on the Switch.
Syntax	config traffic_segmentation [<portlist> <ch1-32> all] forward_list [all <portlist> <ch1-32>] [<portlist> <ch1-32> all] forward_list [all <portlist> <ch1-32>]
Description	The config traffic_segmentation command configures traffic segmentation on the Switch.
Parameters	<p><portlist> – A port or a port channel for which the current traffic segmentation configuration on the Switch is to be displayed.</p> <p><ch1-32> – a port-channel.</p> <p>all – Configures all ports on the Switch.</p> <p>forward_list – Specifies a port or a port channel to receive forwarded frames from the source ports specified in the portlist, above.</p>
Restrictions	Only administrator or operator-level users can issue this command.

Example usage:

To configure ports 1 to be able to forward frames to port 11:

```
DGS3100# config traffic_segmentation 1 forward_list 11
Success.
DGS3100#
```

show traffic_segmentation

Purpose	To display the current traffic segmentation configuration on the Switch.
Syntax	show traffic_segmentation {<portlist> ch1-32>} {<portlist> ch1-32> }
Description	The show traffic_segmentation command displays the current traffic segmentation configuration on the Switch.

Parameters	<i><portlist></i> – A port or a port channel for which the current traffic segmentation configuration on the Switch is to be displayed.
Restrictions	None.

Example usage:

To display the current traffic segmentation configuration on the Switch:

```
DGS3100# show traffic_segmentation

Traffic Segmentation Table

Port  Forward Port
-----
1     1
2     1
3     1
4     1
5     1
6     1
7     1
8     1
9     1
10    1
11    1
12    1
13    1
14    1
15    1
16    1
17    1
18    1

CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

TRACEROUTE COMMANDS

The Traceroute commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
traceroute	{ipv4-address hostname} [size 40-1472] [ttl 1-255] [count 1-10] [timeout 1-60] [source ip-address] [tos 0-255]

Each command is listed in detail, as follows:

traceroute	
Purpose	Used to discover the routes packets actually take when traveling to their destination.
Syntax	traceroute {ipv4-address hostname} [size 40-1472] [ttl 1-255] [count 1-10] [timeout 1-60] [source ip-address] [tos 0-255]
Description	<p>The traceroute command takes advantage of the error messages generated by the devices when a datagram exceeds its time-to-live (TTL) value.</p> <p>The traceroute command starts by sending probe datagrams with a TTL value of one. This causes the first device to discard the probe datagram and send back an error message. The traceroute command sends several probes at each TTL level and displays the round-trip time for each.</p> <p>The traceroute command sends out one probe at a time. Each outgoing packet may result in one or two error messages. A 'time exceeded' error message indicates that an intermediate device has seen and discarded the probe. A 'destination unreachable' error message indicates that the destination node has received the probe and discarded it because it could not deliver the packet. If the timer goes off before a response comes in, the traceroute command prints an asterisk (*).</p> <p>The traceroute command terminates when the destination responds, when the maximum TTL is exceeded or when the user interrupts the trace by pressing <i>Esc</i>.</p>
Parameters	<p><i>ipv4-address</i> – Specifies the IP address of the destination host. <i>hostname</i> – Defines the host name of the destination host. (Range: 1-158 characters).</p> <p><i>packet_size</i> - Defines the number of bytes in a packet. (Range: 40-1472).</p> <p><i>max-ttl</i> - Defines the largest TTL value that can be used. The traceroute command terminates when the destination is reached or when this value is reached. (Range:1-255)</p> <p><i>packet_count</i> - The number of probes to be sent at each TTL level. (Range:1-10) <i>time_out</i> - Specifies the number of seconds to wait for a response to a probe packet. (Range:1-60)</p> <p>source ip-address - Specifies one of the device's interface addresses to use as a source address for the probes. The device normally selects what it feels is the best source address to use.</p>

Tos - Specifies the Type-Of-Service byte in the IP Header of the packet. (Range: 0-255)

Restrictions	Only Administrator or operator-level users can issue this command.
--------------	--

Example usage:

To discover the routes packets take when traveling to their destination:

```
DGS3100# traceroute umaxp1.physics.lsa.umich.edu

Type Esc to abort.

Tracing the route to umaxp1.physics.lsa.umich.edu (141.211.101.64)

1 i2-gateway.stanford.edu (192.68.191.83) 0 msec 0 msec 0 msec

2 STAN.POS.calren2.NET (171.64.1.213) 0 msec 0 msec 0 msec

3 SUNV--STAN.POS.calren2.net (198.32.249.73) 1 msec 1 msec 1 msec

4 Abilene--QSV.POS.calren2.net (198.32.249.162) 1 msec 1 msec 1 msec

5 kscyng-snvang.abilene.ucaid.edu (198.32.8.103) 33 msec 35 msec 35
msec

6 iplsng-kscyng.abilene.ucaid.edu (198.32.8.80) 47 msec 45 msec 45
msec

7 so-0-2-0x1.aa1.mich.net (192.122.183.9) 56 msec 53 msec 54 msec

8 atm1-0x24.michnet8.mich.net (198.108.23.82) 56 msec 56 msec 57
msec

9 * * *

10 A-ARB3-LSA-NG.c-SEB.umnet.umich.edu (141.211.5.22) 58 msec 58
msec 58 msec

11 umaxp1.physics.lsa.umich.edu (141.211.101.64) 62 msec 63 msec 63
msec

DGS3100#
```

SAFEGUARD COMMANDS

The Safeguard commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameter
config safeguard_engine	{state [enable disable] utilization {rising <value 20-100> falling <value 20-100>}}
show safeguard_engine	

Each command is listed in detail, as follows:

config safeguard_engine

Purpose	To define the safeguard engine on the switch.
Syntax	{state [enable disable] utilization {rising <value 20-100> falling <value 20-100>}}
Description	To define the safeguard_engine on the switch.
Parameters	<p><i>state [enable disable]</i> – enable and disable Safeguard engine on the Switch.</p> <p><i>utilization</i> – Indicates the CPU Utilization thresholds. The possible field values are:</p> <ul style="list-style-type: none"> • <i>rising</i> – Indicates the rising CPU Utilization thresholds. The possible field range is between 20%-100%. The default value is 70%. • <i>falling</i> – Indicates the falling CPU Utilization thresholds. The possible field range is between 20%-100%. The default value is 20%.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To define safeguard engine on the switch:

```
DGS-3100# config safeguard_engine state enable rising 70 falling 20
Success.
DGS-3100#
```

show safeguard_engine

Purpose	To show the safeguard engine status on the switch.
Syntax	show safeguard_engine
Description	To show the safeguard engine on the switch.
Parameters	None.
Restrictions	Only Administrator or operator-level users can issue this command.

Example usage:

To show the safeguard engine status on the switch:

```
DGS-3100# show safeguard_engine

Safe Guard : Enable

Rising Threshold (20%-100%) : 70
Falling Threshold (20%-100%): 20
Status : No attack
DGS-3100#
```

DEVICE SPECIFICATIONS

This appendix contains the device specifications, and contains the following topics:

- Technical Specifications
- Cable Lengths

Technical Specifications

Performance	
Transmission Method	Store-and-forward
RAM Buffer	512Kbytes per device
Packet Filtering/ Forwarding Rate	Full-wire speed for all connections. 1,488,095 pps per port (for 1000Mbps)
MAC Address Learning	Automatic update. Supports 8K MAC address.
Priority Queues	4 Priority Queues per port.
Forwarding Table Age Time	Max age: 10–1000000 seconds. Default = 300.

Physical and Environmental	
AC Inputs	100 – 240 VAC, 50/60 Hz (internal universal power supply)
Power Consumption	45 watts maximum for the DGS-3100-24 and DGS-3100-24P 82 watts maximum for the DGS-3100-48 and DGS-3100-48P
DC Fans	2 built-in 40 x 40 x 10 mm fans
Operating Temperature	0 to 40 degrees Celsius (32 to 104 degrees Fahrenheit)
Storage Temperature	-40 to 70 degrees Celsius (-40 to 158 degrees Fahrenheit)
Humidity	Storage: 5% to 95% non-condensing
Dimensions	441mm (W) x 309mm (D) x 44mm (H), 19-inch rack-mount width 1U height
Weight	3.8 kg (8.38 lb)
EMI	FCC, CE Mark
Safety	CSA International

General	
Standards	IEEE 802.3 10BASE-T Ethernet IEEE 802.3u 100BASE-TX Fast Ethernet IEEE 802.3z Gigabit Ethernet IEEE 802.1Q Tagged VLAN IEEE 802.1P Tagged Packets IEEE 802.3ab 1000BASE-T IEEE 802.3x Full-duplex Flow Control ANSI/IEEE 802.3 NWay auto-negotiation
Protocols	CSMA/CD
Data Transfer Rates	Half-duplex Full-duplex
Ethernet:	10 Mbps 20 Mbps
Fast Ethernet:	100 Mbps 200 Mbps
Gigabit Ethernet:	2000 Mbps (Full duplex only)
Topology	Star

Network Cables	
10BASE-T:	UTP Category 3, 4, 5 (100 meters max.) EIA/TIA- 568 150-ohm STP (100 meters max.)
100BASE-TX:	UTP Cat. 5 (100 meters max.) EIA/TIA-568 150-ohm STP (100 meters max.)
1000BASE-T:	UTP Cat. 5e (100 meters max.) UTP Cat. 5 (100 meters max.) EIA/TIA-568B 150-ohm STP (100 meters max.)
1000BASE-LX:	Single-mode fiber module (10km)
1000BASE-SX:	Multi-mode fiber module (550m)
1000BASE-LHX:	Single-mode fiber module (40km)
1000BASE-ZX:	Single-mode fiber module (80km)
Mini-GBIC:	SFP Transceiver for 1000BASE-LX Single-mode fiber module (10km) SFP Transceiver for 1000BASE-SX Multi-mode fiber module (550m) SFP Transceiver for 1000BASE-LHX Single-mode fiber module (40km) SFP Transceiver for 1000BASE-ZX Single-mode fiber module (80km)
Number of Ports:	48 x 10/100/1000 Mbps ports 4 x GBIC combo ports

Cable Lengths

Use the following table to as a guide for the maximum cable lengths:

Standard	Media Type	Maximum Distance
Mini GBIC	DEM-310GT: SFP Transceiver for 1000BASE-LX, Single-mode fiber module	10km
	DEM-311GT: SFP Transceiver for 1000BASE-SX, Multi-mode fiber module	550m
	DEM-314GT: SFP Transceiver for 1000BASE-LHX, Single-mode fiber module	40km
	DEM-315GT: SFP Transceiver for 1000BASE-ZX, Single-mode fiber module	80km
1000BASE-T	Category 5e UTP Cable Category 5 UTP Cable (1000 Mbps)	100m
100BASE-TX	Category 5 UTP Cable (100 Mbps)	100m
10BASE-T	Category 3 UTP Cable (10 Mbps)	100m